 


# **Roku** Video Doorbell & Chime SE

## **Quick Start Guide**

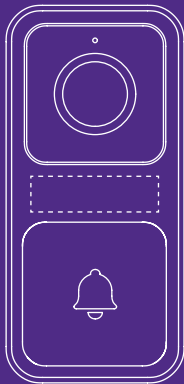

 
## What's included

- |                                 |                               |
|---------------------------------|-------------------------------|
| <b>A</b> Roku Video Doorbell SE | <b>F</b> Fuse                 |
| <b>B</b> Roku Chime SE          | <b>G</b> Wire caps (x4)       |
| <b>C</b> Wall plate             | <b>H</b> Bracket screws (x2)  |
| <b>D</b> Wedge kit              | <b>I</b> Screws (x2)          |
| <b>E</b> Extension wires (x2)   | <b>J</b> Plastic anchors (x2) |


## What you'll need

- Phillips screwdriver
- Your smartphone

**A**

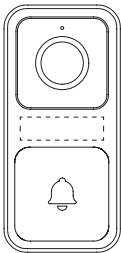


**B**

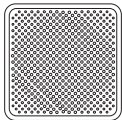 

**C**



 
**D**



**E**



 **F**



**G**



 
**H**



**I**




**J**

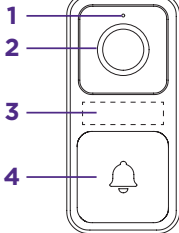


**Doorbell - FRONT**

 - 
- 1** Microphone
  - 2** Lens
  - 3** Fill light

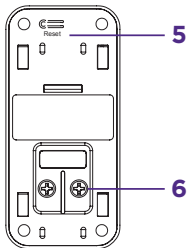

**Doorbell - BACK**

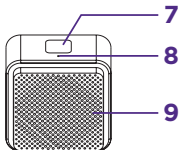 

**Chime**

- 4 Doorbell button
- 5 Reset button
- 6 Screw terminals

 
- 7 Setup button
- 8 Status light
- 9 Speaker

# Let's get started

---

## **STEP 1: Download the Roku Smart Home app**

Scan the QR code below to download the Roku Smart Home app on your smartphone. Sign in with your Roku account or create one.

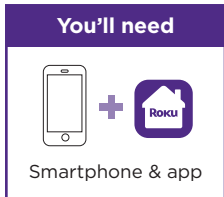


Message & data rates may apply.

## STEP 2: Install your doorbell & chime

 In the Roku Smart Home app, tap the “+” button, then “**Add Device**” to find “**Video Doorbell**.” Follow the instructions to finish setup.

### Recommended location

Install your doorbell less than 6.5 feet above ground level.



# What's that light mean?

| Doorbell                                 | State                         |
|------------------------------------------|-------------------------------|
| <b>YELLOW</b> - Solid                    | Powered                       |
| <b>YELLOW</b> - Flashing                 | Waiting for connections       |
| <b>YELLOW</b> and <b>BLUE</b> - Flashing | Connecting to router          |
| <b>BLUE</b> - Flashing                   | Connected to external network |
| <b>BLUE</b> - Solid                      | Connected and working         |

| Chime                  | State                 |
|------------------------|-----------------------|
| <b>YELLOW</b> - Solid  | Powered               |
| <b>BLUE</b> - Flashing | Connected to network  |
| <b>BLUE</b> - Solid    | Connected and working |



## More features are waiting

Unlock the full potential  
of your doorbell with a  
**Roku Smart Home Subscription.**

Learn more at  
**[go.roku.com/rokusmarthome](https://go.roku.com/rokusmarthome)**

## **FCC WARNING**

Any change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **FCC RADIATION EXPOSURE STATEMENT**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **WARNING**

Do not use the battery near a heat source. Do not use the battery near fire or an oven, or in an ambient temperature exceeding 80°C. Over-heating may cause an internal short-circuit, heat generation, smoking, deformation or burning. Wall mount (mounting height < 2m), tma is 50°C.

# Need help?



Setup  
videos



Common  
questions



Tips and  
tricks

**Visit** [go.roku.com/doorbells](https://go.roku.com/doorbells)

# Roku

© 2022 Roku, Inc. All rights reserved. Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.

4100000865\_03