



Original		Replacement	
	Input		AV / Input / RDS
	Power		Power
	[...]		Subtitle / EQ
	Audio		Audio / Lang I/II
	3D		Picture / Format
	X/Relaxed Search		Fav / Marker / PC
	Tv Pause		Shift + Pause / Step /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Title List		Sound / Title
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 ?/i-Manual	 Eject / Surround
 Sync Menu	 D.Menu / Top
 SEN	 Sleep / Timer
 Guide	 Guide / EPG / -/-
 Up	 Up
 [i+]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return/Back	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Digital/Analog	 Smart / List
 Exit	 Exit / Cancel / Clear
 TV/Radio	 TV/Radio /





Original	Replacement
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [≡]/Text	 Text / Goto
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Media	 Display / Media
 Vol-	 Vol-

Original	Replacement
 Prog-	 CH- / Page-
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

