



Guitar Amplifier / Amplificateur pour guitare /
Gitarrenverstärker / Amplificador de guitarra /
Amplificador de guitarra / Amplificatore per chitarra /
Гитарный усилитель / 吉他扩音器 /
기타 앰프 / ギターアンプ

THR Series

THR30II Wireless

THR10II Wireless

THR10II

Quick Guide / Guide de référence rapide /
Kurzanleitung / Guia Rápido / Guia rápida /
Kurza rapida / Краткое руководство /
快速指南 / 간편설명서 / フィックガイド

EN FR DE PT ES
IT RU ZH KO JA

Quick Guide

Line 6 wireless transmitters described in this quick guide refer to the Relay G10T and the Relay G10TI (hereinafter abbreviated as the Relay G10T).

Main Features

- Sophisticated guitar amplifier with modeling made possible by Yamaha's original VCM technology
- THR-II Wireless models are compatible with the Line 6 Relay G10T wireless transmitter
- Bluetooth® capability enables playing music from a smart device
- Built-in rechargeable battery enables use without power adaptor

Specifications

	THR30II Wireless	THR10II Wireless	THR10II
Dimensions (W x H x D)	420 x 195 x 155 mm	368 x 183 x 140 mm	368 x 183 x 140 mm
Weight	4.3 kg	3.2kg	3.0 kg
Power Consumption	22 W	22 W	11 W
Rated Output	30 W (15 W + 15 W)	20 W (10 W + 10 W)	20 W (10 W + 10 W)
Power Source	Power Adaptor or built-in rechargeable battery	Power Adaptor	Power Adaptor
Charging Temperature	5 ~ 35 °C	—	—

- Power Adaptor (YNT345-1530)
 - Quick Guide (this sheet)
 - Safety Instructions Sheet: Includes PRECAUTIONS and NOTICE. Please read carefully before proceeding.
 - Service offices list
 - Cubase AI Download Information: Includes an access code for down loading Steinberg's DAW software Cubase AI. For instructions on downloading, installing and setting up, refer to the reference manual.
- * For further details on the product, download the THR30II Wireless THR10II Wireless THR10II reference manual from the website: <https://download.yamaha.com/>
- * In this sheet, THR30II Wireless, THR10II Wireless and THR10II are collectively called THR-II. THR30II Wireless and THR10II Wireless are called THR-II Wireless.

Power

The THR-II Wireless can operate on either DC power (via the power adaptor) or with the built-in rechargeable battery. The THR10II can operate on DC power (via the power adaptor).

When using the power adaptor

Connect the supplied power adaptor to the DC IN jack located on the rear side of the THR-II. Connect the AC plug to a power outlet.

* Follow the Safety Instructions before making connections.

Turning the power on and off

Press the power button [] on the top of THR-II for one second to turn the power on. The LED of the power button lights when turning the power button on. The LED of the THR-II Wireless lights in green while charging. Otherwise, it lights in red.

Charging to the built-in rechargeable battery (THR-II Wireless only)

Connect the supplied power adaptor to the DC IN jack located on the rear side of the THR-II Wireless. The LED of the power button lights in green while charging.

Connection

You can connect with a standard instrument cable or the Line 6 G10T wireless transmitter.

Connecting to guitar by wireless (THR-II Wireless only)

The THR-II Wireless can connect with the Relay G10T wireless guitar transmitter (made by Line 6) by wireless. Moreover, the optimal channel is set automatically by connecting the Relay G10T to the INPUT jack located on the top of the THR-II Wireless for at least 10 seconds. For details on wireless connection, refer to the reference manual.

Charging the Relay G10T (THR-II Wireless only)

Connect the Relay G10T to the INPUT jack located on the top of the THR-II Wireless. The built-in rechargeable battery starts charging automatically.

Connecting to a smart device via Bluetooth

Press the Bluetooth button located on the top of the THR-II and operate the smart device as indicated the following table. (On the THR10II Wireless and THR10II, enable Bluetooth by pressing the USER MEMORY button [4] and [5] simultaneously.)

LED	Operation	LED after operation	Status
Unit	Press for three seconds	Flashes in green	Pairing mode
Flashes in green	Configure Bluetooth on the smart device within three minutes	Lights in green	Connected
Flashes in green	Play music on the smart device	Lights in green	Connected

* For details on Bluetooth configuration, refer to the manual of the smart device.

Turning the tuner on and off

Press the TUNER TAP button once second to turn on. Press the TUNER TAP button again to turn off. For details on the tuner, refer to the reference manual.

Storing user settings

The settings for the knobs on the top of the THR-II (excepting the [GUITAR] and [AUDIO] knobs) are stored in user memory. Press one of the USER MEMORY buttons for 2 seconds to save your settings to that preset location. For details on the user memory, refer to the reference manual.

Application software

You can also edit the tone and settings of the THR-II with the THR Remote app. The THR Remote can be used in addition to the top panel controls) to edit settings such as compressor, noise gate, and speaker cabinet.

For Windows and Mac, download and install THR Remote from the website: <https://download.yamaha.com/>

 
 
 
For Android and iOS, install THR Remote through the appropriate app store. For details on the using THR-II with a computer, refer to the reference manual.

Connection Example (on THR30II Wireless)

- Make sure that all devices to be connected to the unit by cable are turned off.
- When connecting the unit to an external device, use an appropriate cable that matches with the jack's specifications and connect it securely.

Precautions for using the USB jack

Make sure to follow the points at right when connecting a computer to the THR-II to avoid loss of data by the computer or the THR-II freezing or shutting down.

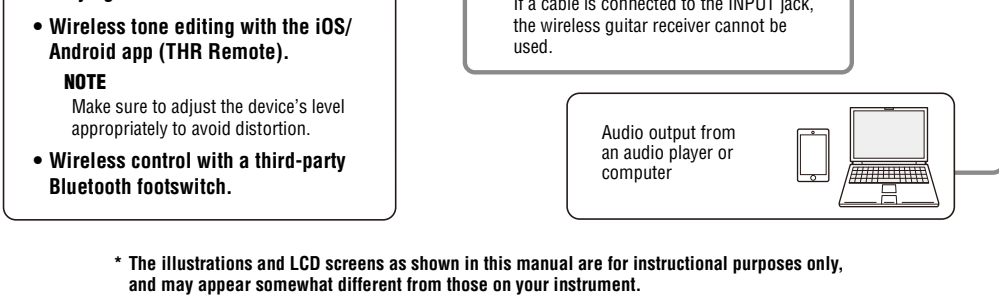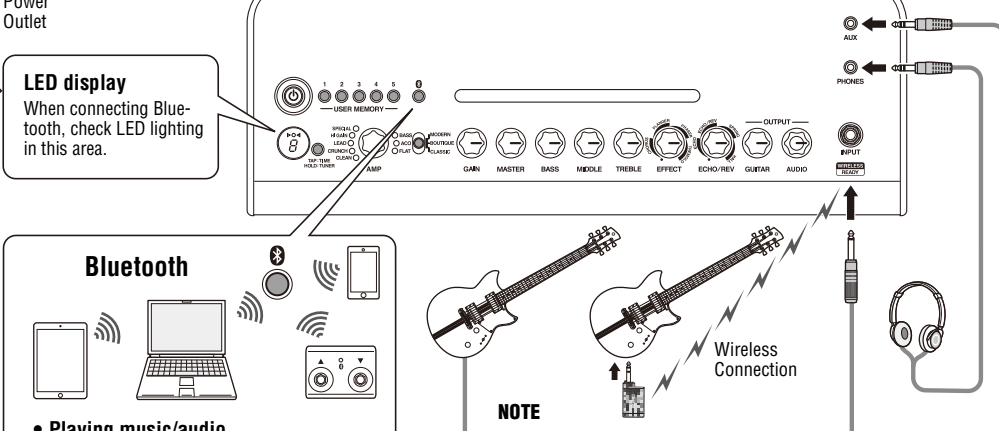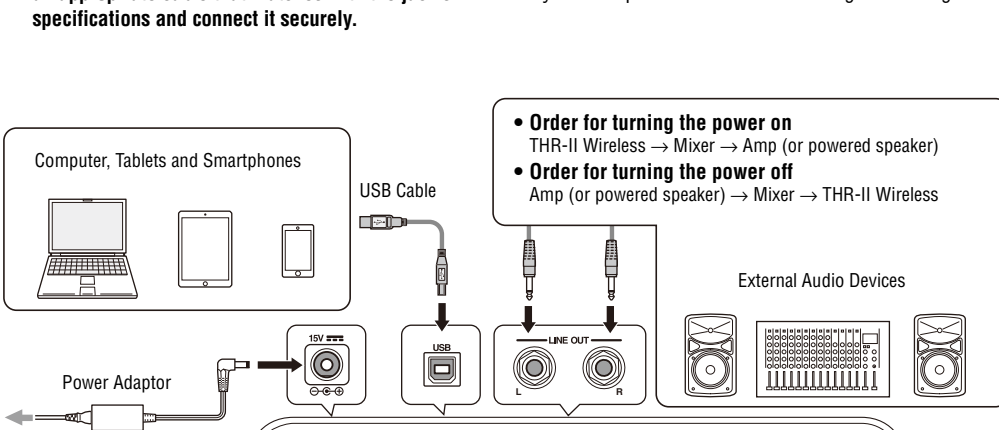

Notice

- Use an AB type USB cable of less than 3 meters. USB 3.0 cables cannot be used.
- Be sure to take the computer from suspended/standby mode before connecting a computer to the USB jack
- Always quit all applications that are running on the computer before connecting or disconnecting the USB cable and set the volume output on the computer to its minimum level.
- When connecting or disconnecting the USB cable, be sure to set the OUTPUT controls ([GUITAR] and [AUDIO]) on the THR-II to their minimum levels.
- Wait at least 6 seconds between connecting or disconnecting the USB cable.

For connecting Android devices, refer to the Smart Device Connection Manual for Android. For connecting iOS devices, refer to the iPhone/iPad Connection Manual. Yamaha Downloads: <https://download.yamaha.com/>

Troubleshooting

- No power
 - Is the power adaptor properly connected?
 - When the power adaptor is disconnected, has the THR-II Wireless been properly charged?

Cannot connect to the smart device by Bluetooth.

- Is the LED display turned off or flashes in green? Refer to the reference manual.
- Is the Bluetooth setting correct on the smart device? Refer to the user guide of your smart device.

No sound is output by wireless connection with a guitar.

- Are you using the Relay G10T/THR-II Wireless cannot connect to any guitar wireless transmitter except for the Relay G10T.
- Did you connect the Relay G10T to the INPUT jack located on the top of the THR-II Wireless for at least 10 seconds? The appropriate channel is set automatically.
- Is the volume control on the instrument turned up?
- Is the Tuner function switched OFF? When the tuner function is set ON, the guitar sound is muted. Press the TUNER TAP button (less than one second) to turn OFF the tuner function.

* The illustrations and LED screens as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your instrument.

Kurzanleitung

* Die in dieser Kurzanleitung beschriebenen drahtlosen Sender von Line 6 sind der Relay G10T und der Relay G10TI (nachfolgend abgekürzt als Relay G10T).

Hauptmerkmale

- Anspruchsvoller Gitarrenverstärker mit Modellierung, die dank der originalen VCM-Technologie von Yamaha möglich ist.
- Die THR-II Wireless-Modelle sind mit dem drahtlosen Sender Line 6 Relay G10T kompatibel
- Bluetooth®-Funktion ermöglicht das Abspielen von Musik von einem Smart Device
- Eingebaute Akku ermöglicht den Gebrauch ohne Netzadapter.

Beschreibung

	THR30II Wireless	THR10II Wireless	THR10II
Abmessungen (B x H x T)	420 x 195 x 155 mm	368 x 183 x 140 mm	368 x 183 x 140 mm
Gewicht	4,3 kg	3,2kg	3,0 kg
Stromverbrauch	22 W	22 W	11 W
Nennleistung	30 W (15 W + 15 W)	20 W (10 W + 10 W)	20 W (10 W + 10 W)
Stromquelle	Netzadapter oder eingebaute Akku	Netzadapter	Netzadapter
Ladetemperatur	5 ~ 35 °C	—	—

- Netzadapter (YNT345-1530)
- Kurzanleitung (vorliegendes Blatt)
- Sicherheitshinweise: Enthält VORSICHTSMASSNAHMEN und ACHTUNG. Bitte vor Gebrauch sorgfältig durchlesen.
- Liste der Servicestellen
- Cubase AI Download Informationen: Enthält einen Zugangscode zum Herunterladen der DAW-Software „Cubase AI“ von Steinberg. Die Anleitung für das Herunterladen, Installieren und Konfigurieren finden Sie im Referenzhandbuch.

* Für weitere Produktinformationen laden Sie bitte das Referenzhandbuch THR30II Wireless THR10II Wireless THR10II auf unserer Internetseite herunter: <https://download.yamaha.com/>

* In diesem Datenblatt werden der THR30II Wireless, THR10II Wireless und der THR10II zusammengefasst THR-II genannt. THR30II Wireless und THR10II Wireless werden THR-II Wireless genannt.

 
Strom

Der THR-II Wireless kann entweder mit Gleichstrom (über den Netzadapter) oder mit dem eingebaute Akku betrieben werden. Der THR10II kann mit Gleichstrom (über den Netzadapter) betrieben werden.

Benutzen des Netzadapters

Stecken Sie den mitgelieferten Netzadapter in die Gleichstrom-Eingangsbuchse IN auf der Rückseite des THR-II ein. Stecken Sie den Wechselstrom-Stecker in eine Steckdose ein.

* Beachten Sie vor dem Anschließen die Sicherheitshinweise.

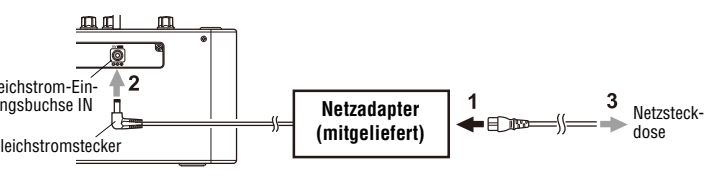

©2020 Yamaha Corporation

Ein- und Ausschalten des Netzspanners

Drücken Sie eine Sekunde lang den An/Aus-Schalter [] auf der Oberseite des THR-II, um das Gerät einzuschalten. Die LED des An/Aus-Schalters leuchtet beim Einschalten auf. Die LED des THR-II Wireless leuchtet beim Laden grün. Andernfalls leuchtet sie rot.

Laden des Akkus (nur THR-II Wireless)

Stecken Sie den mitgelieferten Netzadapter in die Gleichstrom-Eingangsbuchse IN auf der Rückseite des THR-II Wireless ein. Die LED des An/Aus-Schalters leuchtet beim Laden grün.

Anschluss

Der THR-II kann über eine Kabelverbindung mit einem Gitarrenkabel oder über eine drahtlose Verbindung genutzt werden.

Drahtloses Anschließen an eine Gitarre (nur THR-II Wireless)

Der THR-II Wireless kann drahtlos mit dem drahtlosen Gitarrensender Relay G10T (von Line 6) verbunden werden. Die Weiteren können Sie den optimalen Kanal automatisch einstellen, indem Sie den Relay G10T mindestens 10 Sekunden an die INPUT-Buchse auf der Oberseite des THR-II Wireless anschließen. Einzelheiten zum drahtlosen Anschluss finden Sie im Referenzhandbuch.

Laden des Relay G10T (nur THR-II Wireless)

Schließen Sie den Relay G10T an die INPUT-Buchse auf der Oberseite des THR-II Wireless an. Der eingebaute Akku beginnt automatisch mit dem Laden.

Anschließen an ein Smart Device über Bluetooth

Drücken Sie den Bluetooth-Knopf auf der Oberseite des THR-II und bedienen Sie das Smart Device in der nachstehenden Tabelle angegeben. (Um das Bluetooth am THR10II Wireless und am THR10II zu aktivieren, drücken Sie gleichzeitig die USER MEMORY-Knopfe [4] und [5].)

LED	Betrieb	LED nach Betrieb	Zustand
Unbeleuchtet	Drücken Sie drei Sekunden lang	Blinkt grün	Pairing-Modus
Blinkt grün	Konfigurieren Sie das Bluetooth am Smart Device innerhalb der drei Minuten	Leuchtet grün	Verbindung hergestellt
Leuchtet grün	Spülen Sie Musik auf dem Smart Device ab	Leuchtet grün	Verbindung hergestellt

* Nähere Informationen zum Konfigurieren des Bluetooth finden Sie in der Bedienungsanleitung des Smart Device.

Ein- und Ausschalten des Tuners

Drücken Sie den TUNER TAP-Knopf eine Sekunde lang, um das Gerät einzuschalten. Drücken Sie den TUNER TAP-Knopf erneut, um das Gerät auszuschalten. Nähere Informationen zum Tuner finden Sie im Referenzhandbuch.

Speichern der Benutzereinstellungen

Die Einstellungen für die Knöpfe auf der Oberseite des THR-II (mit Ausnahme der [GUITAR]- und [AUDIO]-Knöpfe) werden im Anwenderspeicher abgespeichert. Drücken Sie einen der USER MEMORY-Knöpfe 2 Sekunden lang, um Ihre Einstellungen an diesem vorbestimmten Platz zu speichern. Nähere Informationen zum Anwenderspeicher finden Sie im Referenzhandbuch.

Anwendungswartung

Klangbühne und Einstellungen des THR-II können auch mit der THR-Remote-App bearbeitet werden. Die THR-Remote kann zusätzlich zu den oberseitigen Bedienelementen zur Bearbeitung der Einstellungen von z. B. Kompressor, Noise-Gate und Lautsprechergehäuse genutzt werden.

Für Windows und Mac laden Sie die THR-Remote von unserer Internetseite herunter und installieren Sie sie: <https://download.yamaha.com/>

Für Android und iOS installieren Sie THR Remote über den entsprechenden App-Store. Nähere Informationen zur Nutzung des THR-II mit einem Computer finden Sie im Referenzhandbuch.

 
 
Verbindungsbeispiel (am THR30II Wireless)

Stellen Sie sicher, dass alle Geräte, die mit einem Kabel an die Anlage angeschlossen werden sollen, ausgeschaltet sind.

Wenn Sie die Anlage an ein externes Gerät anschließen, verwenden Sie ein Kabel, das den technischen Eigenschaften der Buchse entspricht, bevor Sie es sicher anschließen.

Vorsichtsmaßnahmen bei der Verwendung der USB-Buchse

Achten Sie darauf, dass die Punkte auf der rechten Seite beim Anschließen eines Computers an die THR-II-USB-Buchse befolgt werden, um zu vermeiden, dass der Computer oder der THR-II blockiert oder herunterfährt und dabei die Daten verliert.

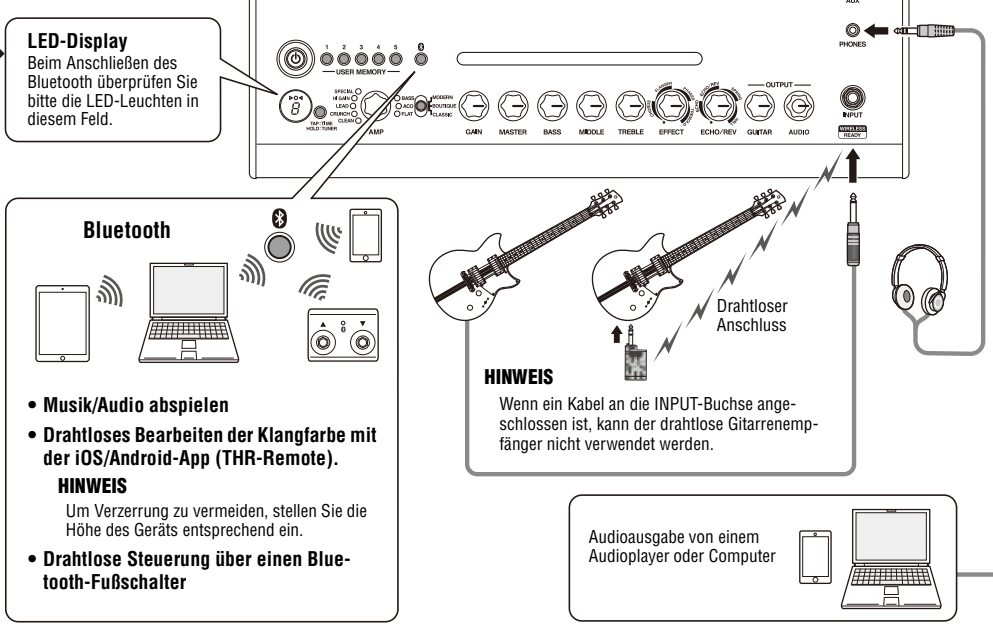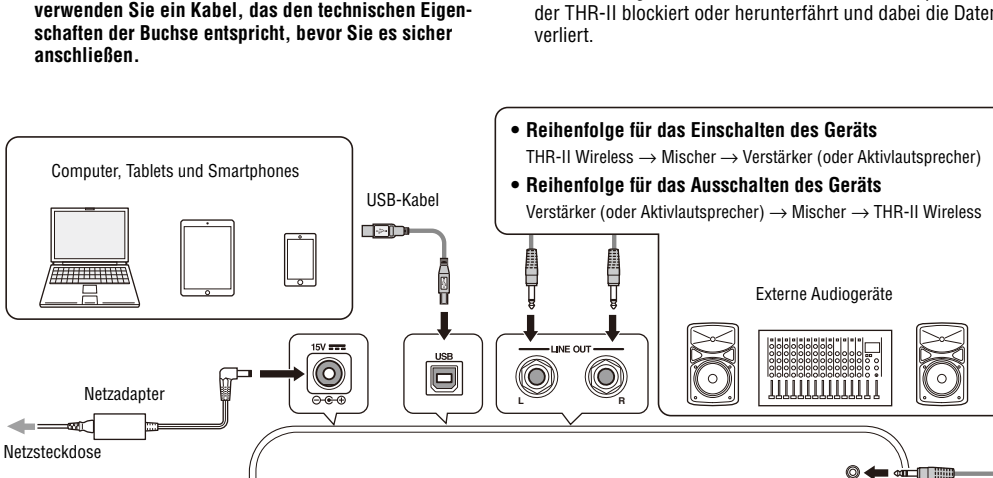

* Die Abbildungen und LED-Bildschirme in dieser Anleitung dienen ausschließlich zu Anlaufzwecken; die Ausstellungen an Ihrem Instrument können hiervon leicht abweichen.

Achtung

Verwenden ein USB-Kabel vom Typ AB, das kürzer als 3 Meter ist. USB 3.0-Kabel dürfen nicht verwendet werden.

Achten Sie darauf, den Computer aus dem Suspended/Standby-Modus aufzuwecken, bevor Sie ihn an die USB-Buchse anschließen.

Schließen Sie grundsätzlich alle auf dem Computer laufenden Anwendungen, bevor Sie das USB-Kabel ein- oder ausstecken, und stellen Sie die Lautstärke am Computer auf den Minimalwert ein.

Achten Sie beim Ein- oder Ausstecken des USB-Kabels darauf, dass die OUTPUT-Regler ([GUITAR] und [AUDIO]) am THR-II auf den Minimalwert eingestellt sind.

Warten Sie mindestens 6 Sekunden zwischen dem Ein- und Ausstecken des USB-Kabels.

Informationen über das Anschließen von Android-Geräten finden Sie in der Bedienungsanleitung „Smart Device Connection Manual for Android“. Informationen über das Anschließen von iOS-Geräten finden Sie in der Bedienungsanleitung „iPhone/iPad Connection Manual“ (Handbuch für den Anschluss von iPhone/iPad). Yamaha Downloads: <https://download.yamaha.com/>

Störungsbehebung

Klein Strom

Falls der Netzadapter korrekt angeschlossen ist, wurde der THR-II Wireless richtig geladen?

Anschluss an das Smart Device über Bluetooth funktioniert nicht.

Ist das LED-Display ausgeschaltet oder blinkt es grün? Siehe Referenzhandbuch.

Ist die Bluetooth-Einstellung am Smart Device richtig vorgenommen? Siehe Benutzerhandbuch Ihres Smart Device.

Kleine Sound-Ausgabe bei drahtlosem Anschluss an eine Gitarre

Verwenden Sie die Relay G10T/THR-II Wireless kann ausschließlich an den drahtlosen Gitarrensender Relay G10T angeschlossen werden.

Haben Sie den Relay G10T mindestens 10 Sekunden lang in die INPUT-Buchse auf der Oberseite des THR-II Wireless eingesteckt? Der richtige Kanal wird automatisch eingestellt.

Ist die Lautstärke am Instrument aufgedreht?

Ist die Tuner-Funktion auf OFF gestellt? Wenn die Tuner-Funktion auf ON steht, ist der Gitarrensound stumm geschaltet. Drücken Sie den TUNER TAP-Knopf (weniger als eine Sekunde), um die Tuner-Funktion auszuhebeln.

Quick Guide

Line 6 wireless transmitters described in this quick guide refer to the Relay G10T and the Relay G10TI (hereinafter abbreviated as the Relay G10T).

Main Features

- Sophisticated guitar amplifier with modeling made possible by Yamaha's original VCM technology
- THR-II Wireless models are compatible with the Line 6 Relay G10T wireless transmitter
- Bluetooth® capability enables playing music from a smart device
- Built-in rechargeable battery enables use without power adaptor

Specifications

	THR30II Wireless	THR10II Wireless	THR10II
Dimensions (W x H x D)	420 x 195 x 155 mm	368 x 183 x 140 mm	368 x 183 x 140 mm
Weight	4.3 kg	3.2kg	3.0 kg
Power Consumption	22 W	22 W	11 W
Rated Output	30 W (15 W + 15 W)	20 W (10 W + 10 W)	20 W (10 W + 10 W)
Power Source	Power Adaptor or built-in rechargeable battery	Power Adaptor	Power Adaptor
Charging Temperature	5 ~ 35 °C	—	—

- Power Adaptor (YNT345-1530)
 - Quick Guide (this sheet)
 - Safety Instructions Sheet: Includes PRECAUTIONS and NOTICE. Please read carefully before proceeding.
 - Service offices list
 - Cubase AI Download Information: Includes an access code for down loading Steinberg's DAW software Cubase AI. For instructions on downloading, installing and setting up, refer to the reference manual.
- * For further details on the product, download the THR30II Wireless THR10II Wireless THR10II reference manual from the website: <https://download.yamaha.com/>
- * In this sheet, THR30II Wireless, THR10II Wireless and THR10II are collectively called THR-II. THR30II Wireless and THR10II Wireless are called THR-II Wireless.

Power

The THR-II Wireless can operate on either DC power (via the power adaptor) or with the built-in rechargeable battery. The THR10II can operate on DC power (via the power adaptor).

When using the power adaptor

Connect the supplied power adaptor to the DC IN jack located on the rear side of the THR-II. Connect the AC plug to a power outlet.

* Follow the Safety Instructions before making connections.

Turning the power on and off

Press the power button [] on the top of THR-II for one second to turn the power on. The LED of the power button lights when turning the power button on. The LED of the THR-II Wireless lights in green while charging. Otherwise, it lights in red.

Charging to the built-in rechargeable battery (THR-II Wireless only)

Connect the supplied power adaptor to the DC IN jack located on the rear side of the THR-II Wireless. The LED of the power button lights in green while charging.

Connection

You can connect with a standard instrument cable or the Line 6 G10T wireless transmitter.

Connecting to guitar by wireless (THR-II Wireless only)

The THR-II Wireless can connect with the Relay G10T wireless guitar transmitter (made by Line 6) by wireless. Moreover, the optimal channel is set automatically by connecting the Relay G10T to the INPUT jack located on the top of the THR-II Wireless for at least 10 seconds. For details on wireless connection, refer to the reference manual.

Charging the Relay G10T (THR-II Wireless only)

Connect the Relay G10T to the INPUT jack located on the top of the THR-II Wireless. The built-in rechargeable battery starts charging automatically.

Connecting to a smart device via Bluetooth

Press the Bluetooth button located on the top of the THR-II and operate the smart device as indicated the following table. (On the THR10II Wireless and THR10II, enable Bluetooth by pressing the USER MEMORY button [4] and [5] simultaneously.)

LED	Operation	LED after operation	Status
Unit	Press for three seconds	Flashes in green	Pairing mode
Flashes in green	Configure Bluetooth on the smart device within three minutes	Lights in green	Connected
Flashes in green	Play music on the smart device	Lights in green	Connected

* For details on Bluetooth configuration, refer to the manual of the smart device.

Turning the tuner on and off

Press the TUNER TAP button once second to turn on. Press the TUNER TAP button again to turn off. For details on the tuner, refer to the reference manual.

Storing user settings

The settings for the knobs on the top of the THR-II (excepting the [GUITAR] and [AUDIO] knobs) are stored in user memory. Press one of the USER MEMORY buttons for 2 seconds to save your settings to that preset location. For details on the user memory, refer to the reference manual.

Application software

You can also edit the tone and settings of the THR-II with the THR Remote app. The THR Remote can be used in addition to the top panel controls) to edit settings such as compressor, noise gate, and speaker cabinet.

For Windows and Mac, download and install THR Remote from the website: <https://download.yamaha.com/>

 
 
 
For Android and iOS, install THR Remote through the appropriate app store. For details on the using THR-II with a computer, refer to the reference manual.

Connection Example (on THR30II Wireless)

- Make sure that all devices to be connected to the unit by cable are turned off.
- When connecting the unit to an external device, use an appropriate cable that matches with the jack's specifications and connect it securely.

Precautions for using the USB jack

Make sure to follow the points at right when connecting a computer to the THR-II to avoid loss of data by the computer or the THR-II freezing or shutting down.

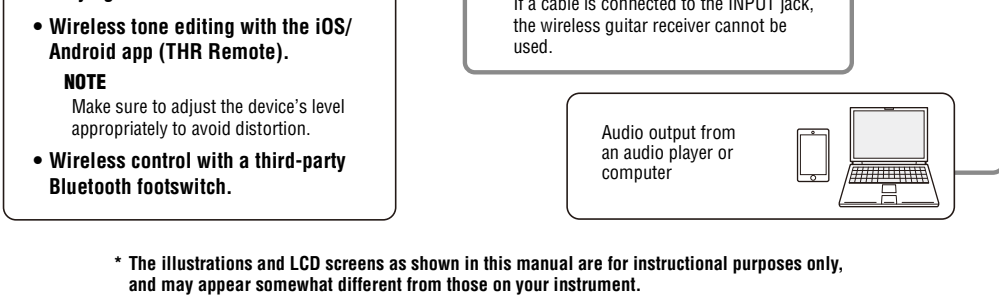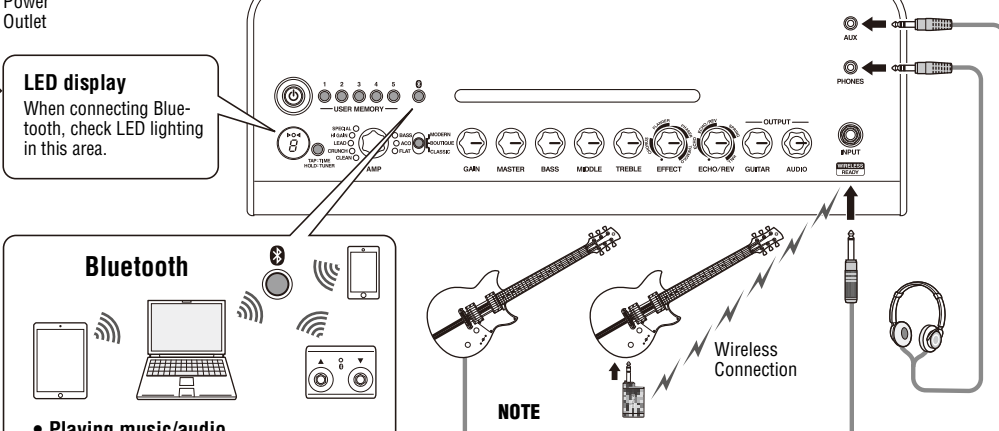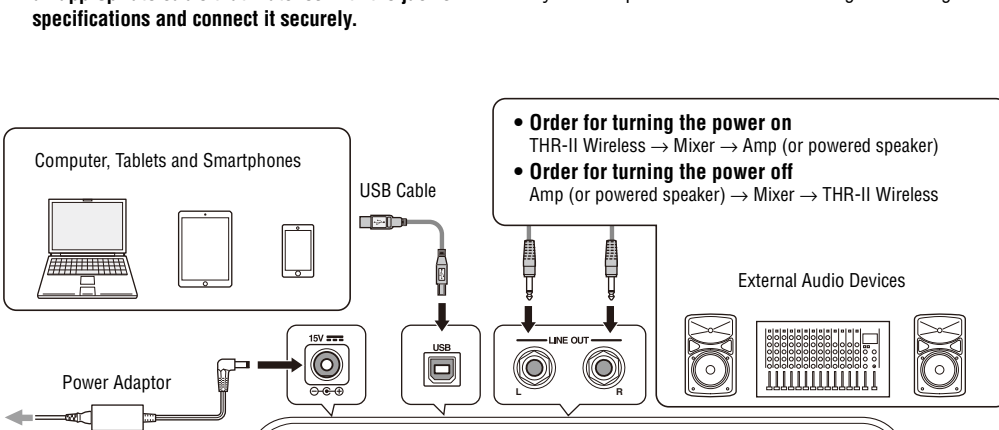

Notice

- Use an AB type USB cable of less than 3 meters. USB 3.0 cables cannot be used.
- Be sure to take the computer from suspended/standby mode before connecting a computer to the USB jack
- Always quit all applications that are running on the computer before connecting or disconnecting the USB cable and set the volume output on the computer to its minimum level.
- When connecting or disconnecting the USB cable, be sure to set the OUTPUT controls ([GUITAR] and [AUDIO]) on the THR-II to their minimum levels.
- Wait at least 6 seconds between connecting or disconnecting the USB cable.

For connecting Android devices, refer to the Smart Device Connection Manual for Android. For connecting iOS devices, refer to the iPhone/iPad Connection Manual. Yamaha Downloads: <https://download.yamaha.com/>

Troubleshooting

- No power
 - Is the power adaptor properly connected?
 - When the power adaptor is disconnected, has the THR-II Wireless been properly charged?

Cannot connect to the smart device by Bluetooth.

- Is the LED display turned off or flashes in green? Refer to the reference manual.
- Is the Bluetooth setting correct on the smart device? Refer to the user guide of your smart device.

No sound is output by wireless connection with a guitar.

