



Bluetooth Speaker 15W Wireless Charger

User Manual

43099948

Features

Charge for any Qi compatibly wireless device such as Apple or Samsung smartphone.



Safety instructions:


1. Do not disassemble or throw into fire or water, to avoid damage.
2. Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
3. Do not place too close with magnetic stripe or chip card (ID card, credit cards, etc.) to avoid magnetic failure.
4. Please keep the distance at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.
5. Some phone case may affect the charging performance. Ensure there is no any metal object between your phone cases or try to take it off before charging.
6. To take care of the children, to ensure that they won't play the wireless charger as a toy.

Packing contents:

Wireless charger & Bluetooth Speaker x 1

USB to Type-C Charging cable x 1

User manual x 1

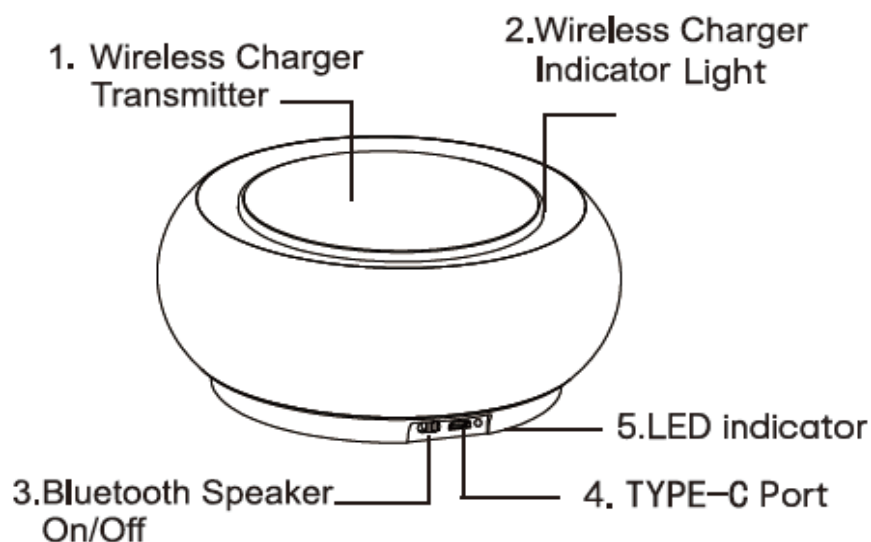

First Bluetooth connection

1. Switch on speaker power button.
2. Turn on Bluetooth on your smart phone. Refer to its user manual for instructions on pairing and connecting Bluetooth devices.
3. Select “KM43099948” from the device list, then open your music app, play music on your device.

If you have used Bluetooth connection before, as soon as you switch on the speaker, the system will start searching for the device last connected. When the device is found, it will re-connect automatically. If you want to switch between devices, turn off Bluetooth on the device last connected.

NOTE: Only one Bluetooth device can be connected to the speaker at one time

Charge a speaker

1. Connect a USB power adapter (not included) with DC 5V 1A or above power adapter will be required.
2. Connect the USB-C cable (included) to the USB-C port to the device. The charging LED indicator light will turn on red and turn off when fully charged.

Charge a mobile phone

1. Connect a USB power adapter (not included) to socket. To achieve fast wireless charging, a Quick Charge 2.0 or above power adapter will be required.
2. Connect the USB-C cable (included) to the USB-C port to the device. The wireless charger indicator light will turn on red.
3. Place wireless charging support smartphone on wireless charging transmitter to start charging and indicator light will turn into blue.
4. If the charging position is improper, the red and blue indicator light will flash alternately.

Note:

1. If wireless charge not working, replace the smartphone to a proper position. The wireless transmitter is located at the middle.
2. Do not place any metal object (eg. Keys, staple, nail. ...) or credit card on the charging area.

Specification:

Input: DC 5V /3A, 9V/2A,12V/1.5A

Output: 15W Max;

2*5W speaker

Diameter: 150 x 150 x 65 mm

Built in rechargeable lithium battery

Up to 7 hours play time

For indoor use only.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.