



RATED VOLTAGE TENSION NOMINALE	RATED POWER PUISSANCE NOMINALE
220-240V~,50HZ	60W



EN: IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

FR: IMPORTANT : LIRE ATTENTIVEMENT ET CONSERVEZ CE MANUEL POUR VOUS Y REFERER ULTERIEUREMENT.

FUNCTIONS & OPERATION

Plug in first

Push the button  to start and stop the fan.

SPEED button: Push the button  to select speed of: Low  - Middle  -High 

TIMER button : Push  to select the timers from 1 hours to 8 hours, it will show on the display panel

 
MODE button : Push the button  to select mode of
Normal , "Nature , "Sleep 

SWING button : Push the button  to oscillate the fan, push it again to stop the function.

Negative ion function : Push the button  for 3 seconds to start function of

negative ion function , push the button  for 3 seconds to stop the function

All the buttons are on the control panel as below:

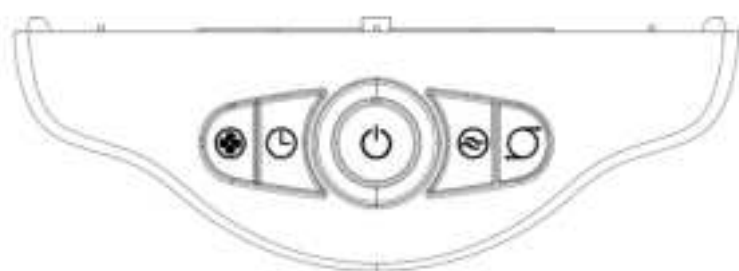

REMOTE CONTROL

Push the button  to start the fan

Push the button  to select fan speed of Low- Middle –High

Push the button  to select mode of “Normal”, “Nature”, “Sleep”

Push the button  to oscillate the fan, push it again to stop the function

Push the button  to select the timers from 1 hours to 8 hours.

Push the button  to select the negative ion function.

 
ASSEMBLING

Step 1 : Aiming the assemble poles with the corresponding holes, and insert the poles into the holes.


Step 2 : Aiming the assembled base to screw poles of the fan body

Step 3 : After well connect of the body and base, screw into the screw holes of the base. And put the power cord into the slot of the base.


Step 4 : Put the fan flatly

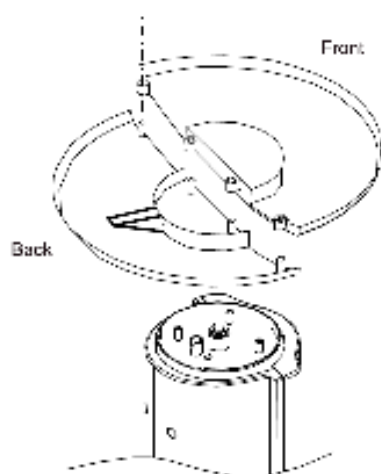

 
Step 1

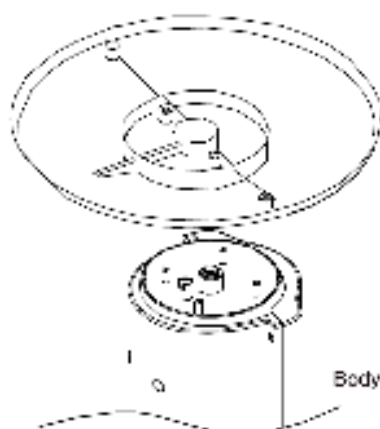


 
Step 2

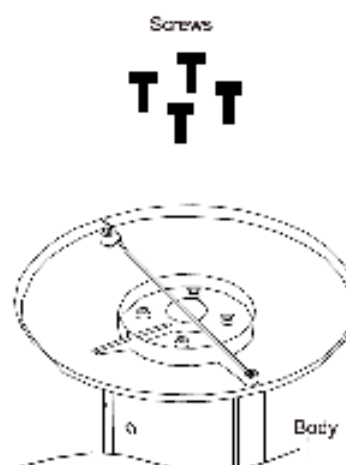

 Step 3

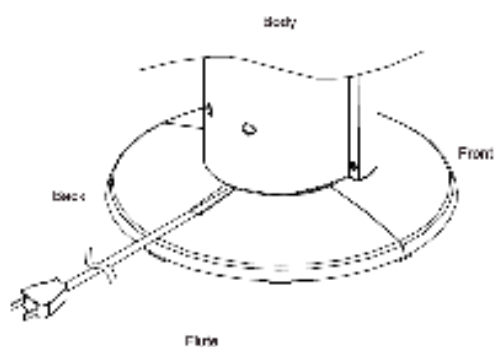

  Step 4

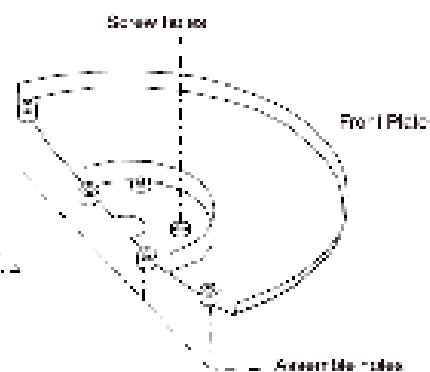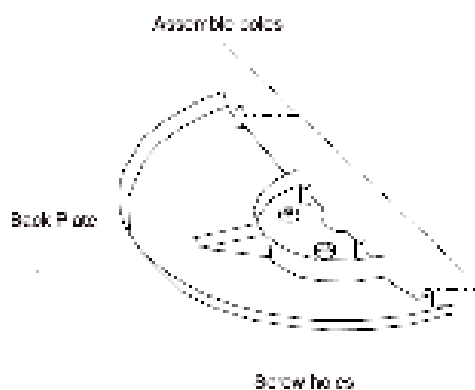

In the front of the fan, there is a small box below the vent .There is a sponge inside the fragrance box. Take out the box and put some fragrance on the sponge if you would like the wind blow with fragrance.



CAUTION

1. Use as per the rating voltage.
2. Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
3. Do not operate the appliance with wet hands, in order to avoid damage.
4. If the supply cord is damaged, it must be replaced by a same cord from the manufacturer or its service agents.
5. When the appliance is not in use, switch it off and unplug it.
6. Do not insert things to air outlets and inlets, in order to avoid damage.
7. Do not use the appliance near explosive and combustible gas.
8. Use the appliance only on a flat surface.
9. Do not use outdoors.
10. .Do no turnover the appliance. Unplug the power supply If it is toppled over and there have some water in the body. Dry the body before use.
- 13.Clean the appearance with a lightly damp cloth.It can clean with neutral detergents. Do not rinse with water.
- 14.Do not make air outlets and inlets near the wall or curtain.
- 15.Do not knock or shake the body when use, otherwise it may cause stop.
- 17.The appliance must not located immediately below a socket outlet.
The rating current of socket should exceed 10A.
- 18.Do not use the appliance in the immediate surrounding of a bath,a show or a swimming pool.
- 19.This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 20.Children should be supervised to ensure that they do not play with the appliance.

CLEANING AND MAINTENANCE

Clean with neutral detergent and soft cloth.

Attention: unplug the power plug when clean the appliance ,since there have high pressure in the body. Do not leave any water on the control panel.

ACCESSORY

Screws for assemble the base ; Remote control

FONCTIONS ET FONCTIONNEMENT

Branchez l'appareil.

Appuyez sur le bouton  pour mettre sous tension/hors tension le ventilateur.

Bouton VITESSE : Appuyez sur le bouton  pour choisir la vitesse entre : Faible  Moyen  et Élevé 

 
Bouton de MINUTERIE : Appuyez sur le bouton  pour choisir entre 1 et 8 heures. La durée s'affichera sur le panneau d'affichage.

Bouton de MODE : Appuyez sur le bouton  pour choisir entre Normal  Nature  et Veille 

Bouton d'OSCILLATION : Appuyez sur le bouton  pour faire osciller le ventilateur, appuyez à nouveau ce bouton pour l'arrêter.

Fonction d'ions négatifs : Maintenez le bouton  pendant trois secondes pour démarrer l'appareil. Maintenez à nouveau le bouton pendant trois secondes pour l'arrêter.

Tous les boutons sur le panneau de commande sont comme ci-dessous :

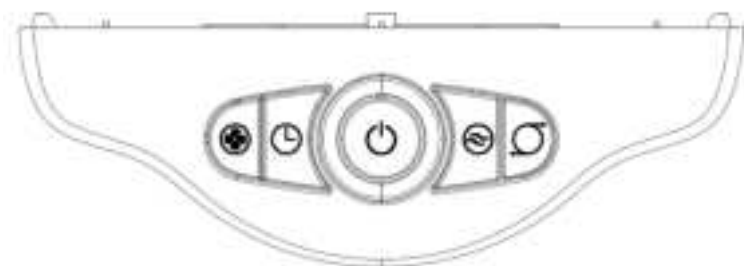

TÉLÉCOMMANDE

Appuyez sur le bouton pour démarrer le ventilateur

À l'avant du ventilateur et sous l'évent, il y a une petite boîte où vous trouverez une éponge. Retirez l'éponge de la boîte et mettez-y un parfum si vous souhaitez que le ventilateur souffle un arôme.



MISE EN GARDE

1. Utilisez l'appareil conformément à la tension nominale.
2. Ne démontez ni ne réparez l'appareil. Cela doit être fait par un réparateur.
3. Ne faites pas fonctionner l'appareil avec des mains mouillées, cela pourrait endommager l'appareil.
4. Si le cordon d'alimentation est endommagé, il doit être remplacé par un cordon spécial du fabricant ou de ses agents de service.
5. Débranchez l'appareil lorsqu'il est éteint.
6. N'insérez pas d'objets dans les pièces de l'appareil. Cela pourrait l'endommager.
7. N'utilisez pas l'appareil à proximité de gaz explosifs ou combustibles.
8. Utilisez l'appareil sur une surface plane.
9. N'utilisez pas l'appareil à l'extérieur.
10. Ne faites pas tomber l'appareil. S'il se renverse avec de l'eau à l'intérieur, débranchez l'appareil et assurez-vous qu'il est sec avant de le réutiliser.
11. Nettoyez avec un chiffon légèrement humide. Ne pas rincer à l'eau.
12. N'utilisez pas l'appareil près du mur ou des rideaux.
13. Ne frappez pas ou ne secouez pas l'appareil lors de l'utilisation.
14. Ne placez pas l'appareil directement sous une prise de courant.
15. Le courant nominal de la prise doit dépasser 10A.
16. N'utilisez pas l'appareil dans un environnement humide.
17. Les enfants ne doivent pas jouer avec cet appareil et doivent être supervisés.

NETTOYAGE ET MAINTENANCE

Nettoyez avec un détergent neutre et un chiffon doux.

Attention : Débrancher avant de nettoyer. Assurez-vous que l'eau ne se rend pas sur le panneau de commande.

ACCESSOIRES

Vis pour assembler la base et une télécommande

UK

If you have any questions, please contact our customer care center.

Our contact details are below:



0044-800-240-4004



enquiries@mhstar.co.uk

IMPORTER ADDRESS:

MH STAR UK LTD

Unit 27, Perivale Park,

Horsenden lane South

Perivale, UB6 7RH

MADE IN CHINA

FR

Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle.

Nos coordonnées sont les suivantes:



0033-1-84166106



aosom@mhfrance.fr

Importé par:

MH France

2, rue Maurice Hartmann

92130 Issy-les-Moulineaux

France

Fabriqué en Chine

