 




UNDER CABINET HANDHELD REMOTE

IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE

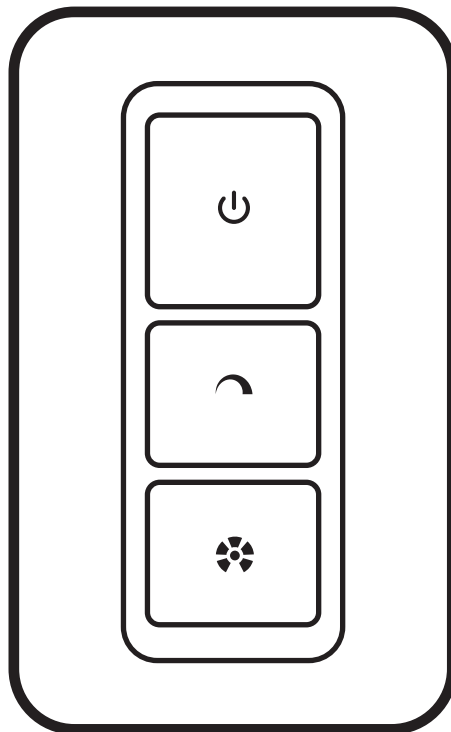

READ BEFORE INSTALLATION
SAVE THESE INSTRUCTIONS

Questions, problems, missing parts? Before returning to the store,
call Feit Electric Customer Service
8 a.m. - 5 p.m., PST, Monday - Friday

1-866-326-BULB (2852)

FEIT.COM

Table of Contents

Table of Contents	2
Safety Information	2
FCC Statement	2
Warranty	2
Pre-Assembly	3
Screw Mount Installation	4
Operating Instructions	5
Mounting Guide	6

Safety Information

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS:

ALWAYS FOLLOW BASIC SAFETY PRECAUTIONS WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT.



CAUTION: Do not install this product in a wet location.



CAUTION: Do not install this product in an outdoor location.



CAUTION: Do not use chemical solvents or harsh abrasives to clean the fixture.

FCC STATEMENT

 
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. Feit Electric Company, 4901 Gregg Road, Pico Rivera, CA 90660. www.feit.com, 1-800-543-3348.

Limited Warranty


This product is warranted to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, please contact Feit Electric at info@feit.com, visit feit.com/contact-us or call 1-866 326-BULB (2852) for instructions on replacement or refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

TOOLS REQUIRED

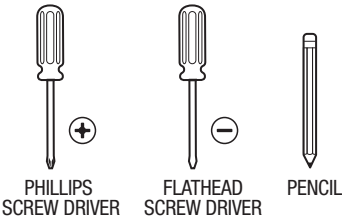

HARDWARE INCLUDED

 NOTE: Hardware not shown to actual size.

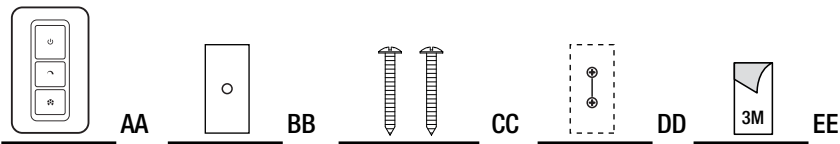


Part	Description	Quantity
AA	Handheld Remote	1
BB	Mounting Plate	1
CC	Mounting Screw	2
DD	Mounting Guide	1
EE	3M Tape	2

DEVICE COMPATIBILITY LIST (Max 100 paired units)
UCL12/5CCT
UCL24/5CCT
UCL36/5CCT
UCL12FP/5CCTCA
UCL18FP/5CCTCA
UCL24FP/5CCTCA
BPUCL/PUCK/5CCT/3
UCL192/FLEX/5CCT

1 Position the Remote

 
Find the desired location for the Mounting Plate (BB) and mark clearly using the provided Mounting Guide (DD).

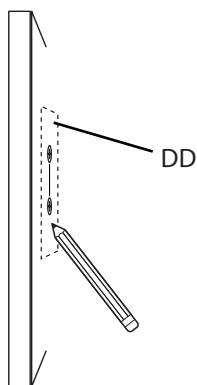

NOTE: The Mounting Plate can be installed horizontally or vertically.


2 Separate the Mounting Plate

 Carefully separate the Mounting Plate (BB) backplate.

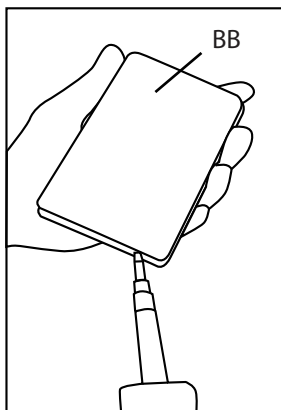


3 Installing Mounting Plate

 Screw in the backplate of the Mounting Plate (BB) using Mounting Screws (CC) on marked location.

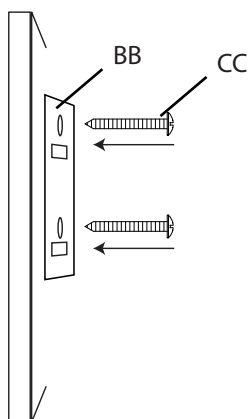


4 Installing Mounting Plate

 Snap the front of the Mounting Plate (BB) onto the mounted backplate.

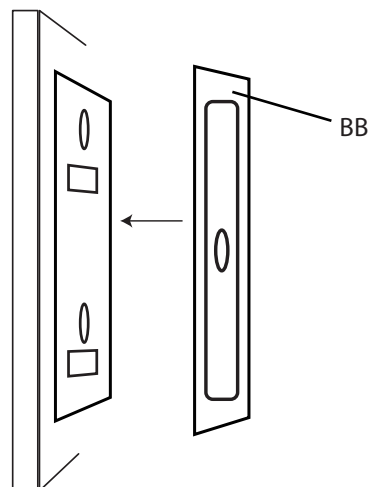


5 Attach the remote to the Mounting Plate

 Attach the Handheld Remote (AA) to the metal Mounting Plate (BB) via the magnet on the back of the Handheld Remote (AA).

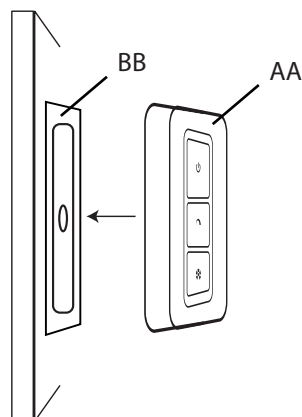


1 Install 3M Tape on Mounting Plate

 Remove one side of the adhesive backing paper on the 3M Tape (EE) and place in the indents on the back of the Mounting Plate (BB).

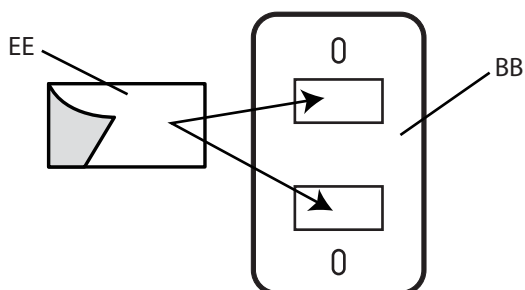


2 Install the Mounting Plate

 
Remove the adhesive backing paper on the 3M Tape (EE) and place on wall on desired location.

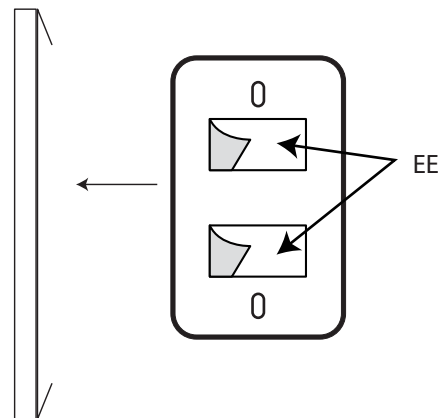

3 Attach the remote to the Mounting Plate

  Attach the Handheld Remote (AA) to the metal Mounting Plate (BB) via the magnet on the back of the Handheld Remote (AA).

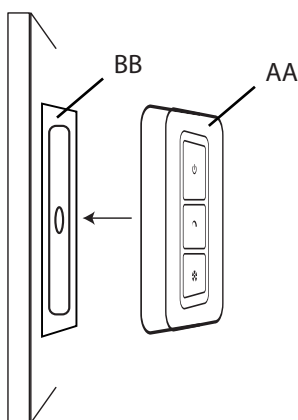

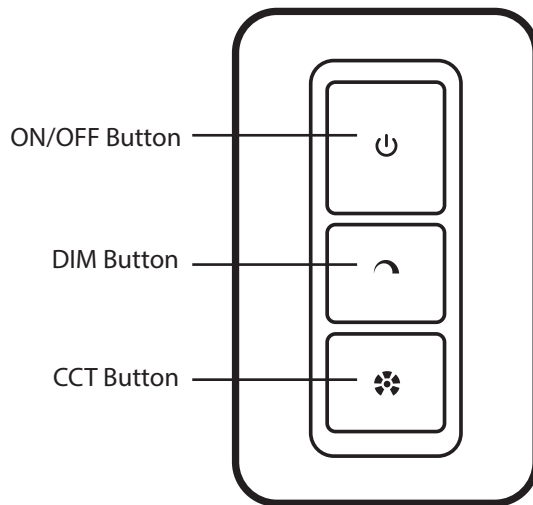

Initial Remote Recognition

- ☐ The first time pairing fixtures to the remote requires that the fixtures recognize the specific remote. Power on the fixture & hold the ON/OFF button on the remote for 3 seconds. Lights will blink once the units have recognized the remote. This can be done with multiple fixtures at once.

Pair or Unpair Fixtures to the Remote

- ☐ To pair a fixture to the remote, power on the fixture and hold the Dim button on the remote for 3 seconds. Lights will blink once the units are paired. This can be done with multiple fixtures at once.
- ☐ To unpair a fixture from the remote, power on the fixture and hold the ON/OFF button on the remote for 3 seconds. Lights will blink once the units are unpaired. This can be done with multiple fixtures at once. When unpaired this way, LED fixtures will be reset to the default mode of operating individually.

Changing the Dimming Levels

- ☐ To select the desired dimming level, Cycle through Dimming levels (High, Medium, Low, Dim, Off) by pressing the Dim Button. This setting will be fixed each time the ON/OFF switch is turned ON.

Changing the Color Temperature Setting

- ☐ To select the desired color temperature, cycle through 2700K - 3000K - 3500K - 4000K - 5000K by pressing the CCT Button. This setting will be fixed each time the ON/OFF switch is turned ON.

NOTE: Once paired, to operate a fixture separately from the remote, hold the CCT button for 3 seconds on the fixture that you want to control independantly. This fixture will not respond to the remote and can only be operated individually through the buttons on the fixture. Press and hold the CCT button for 3 seconds on the fixture again to reconnect to the remote.

CUT OUT TEMPLATE

