

ThermoDrop™

Operating Instructions

What's included:

ThermoDrop, battery, split ring, and this instruction card.

How to operate:

- To power on ThermoDrop, press  once.
- To activate backlight, press . Backlight stays on for 10 seconds.
- To power off ThermoDrop, press and hold  for 5 seconds.
- To view Max/Min readings, press and hold  for 3 seconds. MAX will flash in the display, press again to view Min reading. MIN will flash in the display.
- To switch from °F to °C, press and hold  for 5 seconds upon start up.

To Change Battery:

- Replace with 3-volt, CR2025 button cell battery. Use a coin to open the battery cover on the back. Install the battery according to the correct polarity.

For service or warranty:
1-801-756-7705 • 1-800-393-6434
techsupport@thermoworks.com

Important Ambient Temperatures Guide

Fridge Temp Range

33 to 40°F

Freezer Temp Range

-2 to 32°F

Hottest Recorded Temp

134.1°F Death Valley, CA / July 1913

Coldest Recorded Temp

-128.6°F Antarctica / July 1983

Frostbite Risk

0°F with 15 mph wind = 30 min

-10°F with 5 mph wind = 30 min

Man Cave

60 to 65°F

Normal Room Temp

65 to 75°F

Grandma's House

75 to 85°F



ThermoWorks

www.thermoworks.com

741 E. Utah Valley Dr.
American Fork, UT 84003