


TF-Y02说明书 成品尺寸：60X84mm 128铜版纸 覆哑膜 双面印刷 钢琴折

虚线做
易撕线

TRANSFORMERS

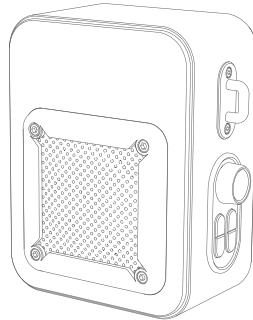

TF-Y02蓝牙音箱
使用说明书

包装清单

音箱 *1

Type-C
充电线 *1

说明书与保修卡
*1

产品规格

蓝牙版本：5.4
有效距离：≥10M
喇叭直径：φ52mm
阻抗：4Ω
失真度：≤5%
频率响应：20Hz-20KHz
额定输入：5V $\overline{\text{---}}$ 800mA
锂电池额定容量：1800mAh
额定功率：5W
充电时长：约2.5小时
使用时长：约5小时

温馨提示

1.除说明书有特殊标示的操作方式以外，请勿尝试拆卸或更换产品内的任何零件。
2.请勿将产品放入水或其他任何液体中，此产品非防水设计。
3.如果有任何液体不小心进入产品内时，请立即断开连接并移开此产品。
4.为避免触电，请在安装或卸载产品时，确保手上没有沾水。
5.请勿将此产品放置于热源附近或直接暴露在火源附近。
6.请勿将本产品放置在有强大电磁力的环境中，否则会导致产品故障。

按键与功能

⏻ --- 开关机键，长触旋钮约2秒

⏻ --- 播放/暂停:单击旋钮

⏻ --- 单击接听 / 挂断，双击回拨，长按拒接。

↶ --- 短按为上一曲

↷ --- 短按为下一曲

 
➕ --- 音量+：将旋钮向右旋转

➖ --- 音量-：将旋钮向左旋转

M --- 单击模式键切换模式

✳ --- 单击:呼吸闪 再次单击：回到频谱
双击：单色切换
长按：开关LED

M --- 双击进行TWS对联。
* 任意两台同款音箱开机状态下双击其中一台“M”键，
等待5秒左右，出现“滴”声，即完成TWS配对。长按“M”键
3秒则断开。



产品操作说明

一.蓝牙使用方法

- 长按“⏻”键约2秒开机，提示音响起，七色循环后冰蓝灯呼吸闪。
- 打开蓝牙设备设置，搜索蓝牙连接名“TF-Y02” 点击连接，蓝牙连接成功提示音响起，蓝灯长亮；再次使用此音箱时，开启音箱与智能设备蓝牙，会自动回连。
- 蓝牙自动连接功能：蓝牙连接成功后，当超过有效距离时会自动断开，待回到有效距离后蓝牙音箱和智能设备又会自动连接。

二.指示灯状态

- 蓝牙模式：已连接状态，蓝色灯长亮，播放音乐时蓝灯慢闪。
- 配对状态：蓝色指示灯快闪。
- 充电指示：充电红灯亮起，充满红灯灭。

常见问题及解决方案

故障	解决方案
多次连接配对不成功	关闭音箱重新开机或需要密码：0000
音乐播放出现断音	连接距离是否超出范围或音箱与手机之间有障碍物
播放无声	检查音箱是否最小声
无法开机	音箱内置电池是否有电
电源灯不亮	检查充电接口是否插好

产品中有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T11364的规定编制
O:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。
X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。
表单标记“X”的部件,皆因全球技术发展水平限制而无法实现有害物质的替代。

本表格依据SJ/T11364的规定编制
印刷电路板组件*包括印刷电路板及其零部件,电子元器件等,根据产品型号不同,您所购买的产品可能不会含有以上所有部件

 指不含有6种有毒有害物质或含有但小于限量值,字母“e”代表英文字母电子(electronic);电子(electrical)和环境(environment)的首字母,环绕的曲线箭头表示可回收利用。

FC











保修声明

免责声明：
本使用手册没有任何形式的担保、立场表达或其他暗示，本使用手册所提到的产品、规格及信息仅供参考，内容亦会随时更新于网页，恕不另行通知。

保修声明：
就本文件附随的产品做如下保证：如产品在您购买日起十二（12）个月（“保修期”）内，在正常使用情况下因质量问题发生损坏，能修理的，免费修理；经厂家确认无法修理的，免费更换；修理或更换后的产品，在剩余保修期（最短不少于30天）内继续享有保修。购买日以销售发票日期为准；如无法确定购买日，则保修期自产品生产日期起按十三（13）个月计算。
如申请保修，请先致电产品服务热线，并按我们指示的方式执行。申请保修时，您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况：
1.超过三包有效期的；
2.涂改保修卡、产品编码与产品本体不符；
3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏；
4.因不可抗力（如地震、战争、火灾等）或意外导致的故障或损坏；
5.拉链、搭扣因受力过大而损坏；
6.因承载过重造成的脱线或撕裂；
7.任何因尖锐物体造成的损坏；
8.有烧损或水浸迹象的产品；
9.因擅自拆改导致的损坏；
10.产品正常使用过程中发生的老化、褪色、磨损、破裂和其他损耗；
11.如产品原有标识标签被更改或损毁，本保证将失效；
产品及随附物料的齐备和外观完好不属于保证范围，您应在接收产品时当场检验并对任何不符提出异议。

以上保证是我们就产品做出的全部保证，且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权益。

服务监督热线:400-885-8808

虚线做
易撕线

保修卡

尊敬的用户，本保修卡是您将来申请保修的凭证，请您配合销售商填写并妥善保管备用！

用户信息

用户姓名	电子邮箱
联系电话	邮政编码
通讯地址	

产品信息

产品名称	产品型号
产品条码/编号/批号	

销售商信息

名 称	
地 址	
联系电话	邮政编码
销售日期	发票号码
备 注	

合格证

产品编号：_____
生产日期：_____
检验员：_____

Warranty Service

Dear user,this warranty card is the proof of your future warranty application,please cooperatewith the seller to fill it out and keep it for future use!

User info

User name	Email
Contact number	Postal code
Mailing address	
Product information	
Product name	Product number
Product barcode / Serial number / Batch number	
Vendor information	
Name	
Address	
Contact number	Postal code
Sales date	Invoice number
Remark	

Certificate of Approval
Product No: _____
Production Time: _____
QC: _____

Packing list

Speaker *1

Type-C
Charging cable *1

Instructions and
Warranty card *1

Product specification

BT version: 5.4
Effective distance: ≥10M
Horn diameter: φ52mm
Impedance: 4Ω
Distortion degree: ≤5%
Frequency response: 20Hz-20KHz
Rated input: 5V $\overline{\text{---}}$ 800mA
Lithium battery rated capacity: 1800mAh
Rated power: 5W
Charging time: about 2.5 hours
Duration: about 5 hours

Tips

1.Except for the operation methods specifically marked in the manual,please do not try to disassemble or replace any parts in the earbuds.
2.Don't put the earbuds in the water or any others liquid.The earbuds are not waterproof.
3.If any liquid enters the product by accidentally,please disconnect and remove the connection immediately.

4.Please make sure that there is no water on your hands when installing or uninstalling the product to avoid electricshock.
5.Do not put the product near by the heat source or expose it to the fire source directly.
6、Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Keys and functions

⏻ --- Switch button, long touch knob about 2 seconds

⏻ --- Play/Pause: Click the knob

⏻ --- Click Answer/Hang up, double-click callback, and hold down to reject the call.

↶ --- Tap the previous song

↷ --- Tap for the next song

➕ --- Volume + : Turn knob to the right

➖ --- Volume - : Turn knob to the left

M --- Click the mode key to switch modes

✳ --- Click: Breathing flash Click again: Back to spectrum
Double click: Monochrome switch
Long press: Switch the LED on and off

M --- Double click TWS couplet.
* When any two speakers of the same model are powered on, double click "M" on one of them and wait about 5 seconds for a "drip" sound to appear, that is, TWS pairing is completed.
Press and hold the "M" key for 3 seconds to disconnect.



Power off: When the speaker is not in use, long press the "⏻" key to power off to prevent power loss. Low power alarm and automatic shutdown function: when the battery power is less than 10%, the speaker will sound a prompt tone, and the speaker should be charged in time, when the power is less than 3%, the machine will automatically shut down.

Product operation instructions

1. BT use method

- Long press the "⏻" key for about 2 seconds to turn on, prompting the sound, after the seven-color cycle of ice blue light breathing flash.
- Open BT device Settings, search for Bluetooth connection name "TF-Y02" and click Connect, Bluetooth connection success prompt sound, blue light long on; When you use the speaker again, turn on the BT between the speaker and the smart device, and it will automatically connect back.
- BT automatic connection function: After successful BT connection, when the effective distance is exceeded, it will be automatically disconnected, and after returning to the effective distance, the BT speaker and smart device will be automatically connected.

2. Indicator status

- BT mode: Connected state, the blue light is on for a long time, and the blue light blinks slowly when playing music.
- Pairing status: The blue indicator blinks quickly.
- Charging indicator: charging red light on, full red light off.

Common problems and solutions

breakdown	solution
Failed to pair multiple connections	Turn off the speaker and restart it or require password: 0000
The music plays staccato	Whether the connection distance is out of range or there is an obstacle between the speaker and the phone
Play without sound	Check that the speaker is at its lowest
Unable to boot	Check whether the built-in battery of the speaker is charged
The power light is off	Check that the charging port is plugged in

The name and content of harmful substances in the earbuds

Part Names	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.
O:Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit required by GB/T 26572.
X:Indicates that the hazardous substance at least in a certain homogeneous material of the part exceeds The limit requirements specified in GB/T 26572.
The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.

Printed circuit board components:
Including printed circuit boards and their parts,electronic components, etc.and depending on the product model,the earbuds you purchased may not contain all the above components.

 Does not contain 6 kinds of toxic and harmful substances or contains but is less than the limit value, the letter "e" stands for the English letter electronic; The initials of electrical and environment; The curved arrows around it indicate recyclability.

FC











Warranty statement

Disclaimer:
This manual is without any warranty, position expression or other implication, the products, specifications and information mentioned in this manual are for reference only, and the content will be updated from time to time on the website without prior notice.

Warranty Statement:
Make the following warranties for the Products attached to this document: If the products are damaged due to quality defects under normal use within twelve (12) months from the date of purchase (the "Warranty Period"), they will be repaired free of charge; Can not be repaired by the manufacturer, free replacement; After repair or replacement of the product, in the remaining warranty period (minimum of not less than 30 days) continue to enjoy the warranty. The date of purchase is subject to the date of the sales invoice; If the date of purchase cannot be determined, the warranty period shall be calculated for thirteen (13) months from the date of manufacture of the product. To apply for warranty, please call the product service hotline first and follow our instructions. When applying for warranty, you need to provide a valid sales invoice that is accurate, complete and clearly filled out. The above warranties do not apply to:
1. More than three packages of validity;
2. The warranty card and product code are not consistent with the product body;
3. Failure or damage caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accidents;
5. Zipper and buckle are damaged due to excessive force;
6. Off-line or tear caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning damage or flooding;
9. Damage caused by unauthorized demolition;
10. Aging, decolorization, wear, breakage and other losses that occur during the normal use of the product.
11. If the original identification label of the product is changed or damaged, this warranty will be invalid.
The completeness and appearance of the product and accompanying materials are not guaranteed and you shall inspect the product on the spot upon receipt of the product and object to any discrepancies.

Nothing in this document affects consumer rights that cannot be excluded or limited by law.

Service supervision hotline :400-885-8808

虚线做
易撕线

TRANSFORMERS

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.