

HYPER 212 EVO

HYPER 212X series

USER MANUAL

01. PACKAGE CONTENT

A

B

C

D

E

F

G

H

I

J

K

02. Intel & AMD

03. Intel & AMD

04. Intel - LGA 2011/2011-v3/1366/115x/775

LGA 775

LGA 115x

LGA 2011/2011-v3/1366

05. Intel - LGA 1366/1150/1156/1155/1151/775

06. Intel - LGA 1366/1150/1156/1155/1151/775

07. Intel - LGA 1366/1150/1156/1155/1151/775

08. Intel - LGA 2011/2011-v3

09. AMD

FM2+/FM2/FM1/AM3+/AM3/AM2+/AM2

10. AMD

11. AMD

12. AMD

13. Intel & AMD

14. (THE 2ND FAN IS OPTIONAL)

15. (THE 2ND FAN IS OPTIONAL)

16. Intel & AMD

17. ADDITIONAL INFORMATION

Asia Pacific | Cooler Master Technology Inc.
8F, No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City
23586, Taiwan (R.O.C.).
Tel: +886-2-2225-3517

China | Cooler Master China
Room 2062, Floor 5, No. 421, Weiqing Rd., Jinshan District,
Shanghai City, China
Tel: +86-21-51872177

Europe | Cooler Master Europe B.V.
Lodewijkstraat 15, 5652AC Eindhoven, The Netherlands
Tel: +31-(0)40-702-0900

North America | Cooler Master NA
4820 Schaeffer Ave. Chino CA. 91710, USA
Tel: +1-888-624-5099

For the most updated information, please visit our official website: www.coolermaster.com
Cooler Master Support: <https://account.coolermaster.com/>

51001130-GP Ver 1.0 2015/11
©2015 Cooler Master Technology Inc. All Rights Reserved. All trademarks are registered to their respective owners.