

WANTJOIN

USER MANUAL

BLENDER



WANTJOIN

For your safety, please read the manual before using the blender.

■| TROUBLESHOOTING

Issue Name	Cause of Issue	Solution
Dirty liquid exudate	Broken inner bearing of the blade	Contact the after-sales team for exchange the blade.
Water leaking	Broken cup during cold and hot enviroment	Contact the after-sales team to exchange the blade/pc cups.
	Broken knife inner bearing	
Machine Not Working	Emergency protection activate after blend hard stuff	Switch off and press the reset button after 20 mins
Rough grinding	Pluse the ice before blending	Follow the correct food adding order and pulse the hard food before blending
	Need extra liquid to reduce	
	Over sized or overload food.	
Noisy Machine	Blade is a cosumable goods, must replace when hear werid noise.	Exchange a new blade to avoid machine broken
Machine is smoking	Over sized/overload food leads the moto broken.	Switch off the power and restart after 20 mins.

■| CLEANING AND MAINTANCE

Cleaning Tips

1. Use 【Pluse】 button/plastic knife to clean/blend with water in the cup.
2. Never use hand to clean the cup without taking off the blade.
3. Never put the blender cup to wash in dish washer.
4. Use sponge or dry towel to clean the base.
5. Never immerse in water to avoid machine damaged.
6. Only use pluse and soap water to clean the cup.

Machine Maintance

1. Place the cup upside down to let the water flow out.
2. Wash properly to avoid moulding
3. Never blender without things or grinding things to breake the blade
4. Must cool down the machine after machine working for a period of time.


■| WARNING

Please follow and read carefully to the following safety notice before using the product:

1. NEVER unplug by grasping and pulling the flexible cord after using the machine.
2. Wash all parts that may contact food before use. Please follow the washing instructions in the manual.
3. DO NOT submerge the appliance or place the power cord near any liquid.
4. Keep the appliance and its cord out of reach of children.
5. DO NOT allow the cord to hang over the edges of tables or counters avoid damages.
6. DO NOT allow the unit or cords to contact hot surfaces to avoid damages.
7. CLEAN the device before each time using the product.
8. ALWAYS use the appliance on a clean, dry, level surface.
9. DO NOT operate the appliance with an empty container.
10. DO NOT fill containers past the max fill or max liquid lines.
11. DO NOT microwave any containers or accessories with the package.
12. ENSURE all utensils are removed from containers.to avoid damages or harm.
- 13 NEVER operate the appliance without lids and caps in place.
- 14 DO NOT attempt to defeat the interlock mechanismand install the container and lid properly.
15. NEVER leave the appliance unattended while in use.
16. The thermal switch will activate and lb reset. Unplug the applianceand allow it to cool for 15 minutes before using again.

HOW TO USE

Load softer, water-dense ingredi- ents on the bottom, and ice or frozen ingredients on top. This creates a vortex in the pitcher that leads to a smoother breakdown of frozen ingredients.

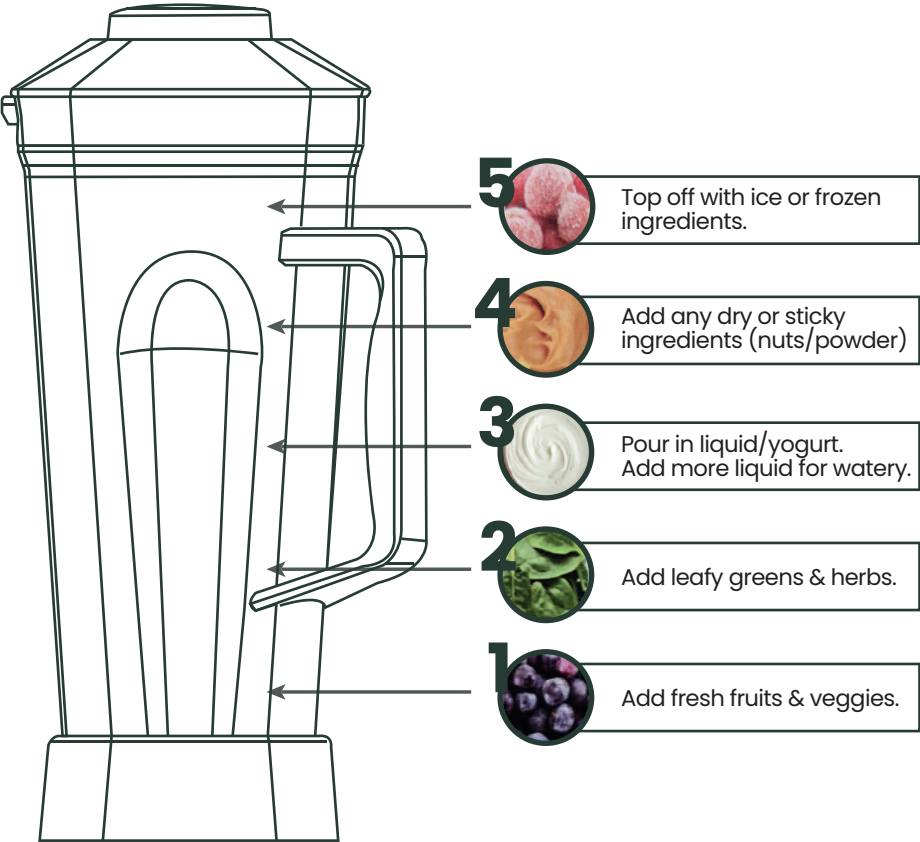

REMIND

For best results, cut ingredients in 2.5 cm chunks. Do not place frozen ingredients first in the pitcher.

FUNCTION FEATURES



Kind	Function
【Power】	Turn the switch to the "ON" position to start the product Turn the switch to the "OFF" position to stop.
【Pulse】	Is used to blend instantly or cleaning. Able to automatically bounces back if you release the switch.
【LOW/HIGH SPEED】	Factory default setting as Low speed. High speed mode will be loud and faster than Low Speed.
【TIMER】	Turn the switch from "Stop" to "Start" to start timing. When the timer stop, it will change to "STOP".

REMIND

Low speed bleaning with the speed button will cause overheat of the machine.
Please us the high speed to blend food.