

Ufree®

 


SCAN WECHAT AND CONTACT US



Email: service@ufree.net

MEN'S BARBER SET

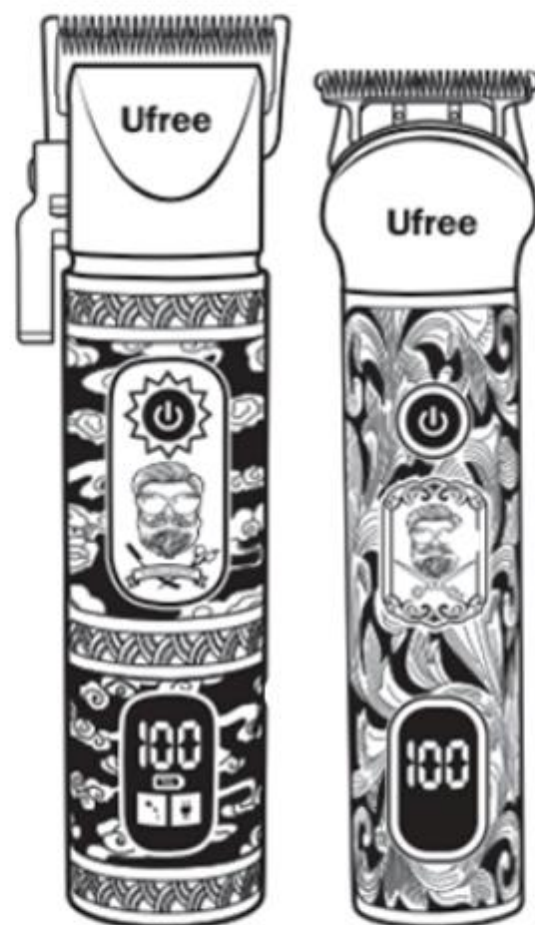

**MEN'S
BARBER SET**

MODEL:U-2226

 
カットセット



Safety instructions and Caution

Please read the following safety instructions carefully before using this product.

- (1) This product has a rechargeable battery inside. Do not throw it into fire, use or charge it in high temperature, and do not expose the product to excessive heat temperature.
- (2) You may not use the product in the absence of a guardian or a person who is suffering from physical, sensory, or mental retardation, or lack of experience and knowledge.
- (3) If the power cord is damaged, you should discard the power cord and do not use it.
- (4) Do not insert the charger into a household outlet or remove it from the outlet when your hand is wet.
- (5) Do not leave the product in the place where children can touch, do not allow children or toddler to use it by themselves.
- (6) Before using, please check whether the hair trimmer cutting head is broken.

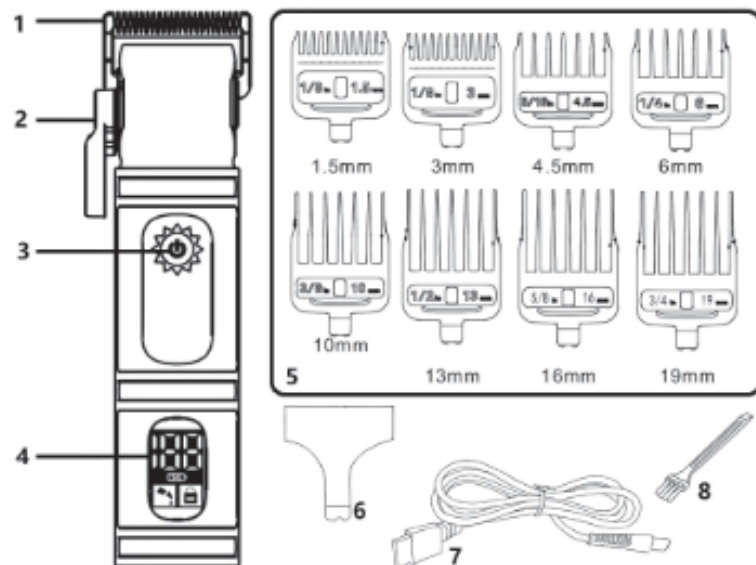


Components

1. Stainless steel blade
2. Blade lever adjustable
3. ON/OFF switch
4. LED display
5. Cutting guide combs for hair clipper (1.5/3/4.5/6/10/13/16/19mm)
6. Protection cap for hair clipper
7. USB line
8. Cleaning brush

Charge

The charging input of this product is 5V $\overline{\text{---}}$ 1A. When connecting the power supply, please pay attention to the output of the power supply!

 When charging, the digital display lights up from bottom to top, it takes 120 minutes to fully charge, and number 100 is displayed. When fully charged, it can be used for about 180 minutes.

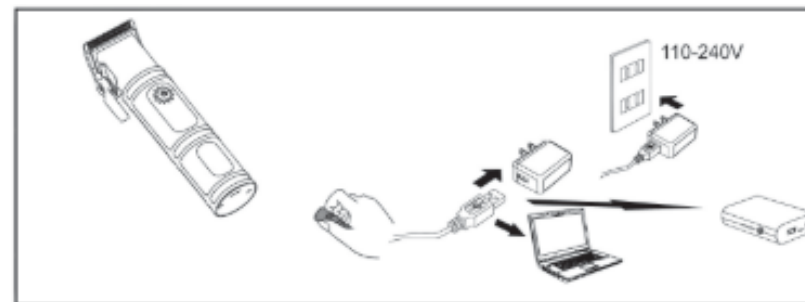

Display description



Electricity percentage: 00/05/10/.../90//95/100%

When charging, increase in sequence; when in use, decrease in sequence; when 05 flashes, it reminds you to charge; when 00, the battery is exhausted and shut down.

The oil bottle symbol:

which has been used for 30 minutes in total, appears and flashes to remind you to refuel

Lock symbol:

Long press the switch for 3-5 seconds to lock the travel lock; long press the switch for 3-5 seconds or connect to the power supply to unlock the product.

Mount the limit comb:

- 1.Align the limit comb with the blade edge.
- 2.Slightly forward push to mount it. Disassemble the limit comb: Just pull hard the limit comb.




Cutter assembly and disassembly

Sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with light after the blade is aligned.

- 1.End of the top blade teeth should be $1/32''$ to $5/64''$, 0.79mm to 1.98mm back from bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutting to touch the skin.

- 2.Extreme left hand tooth of top blade must be covering or be to the left of the first small tooth of bottom blade.

- 3.Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade.

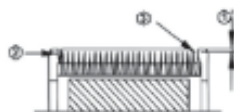



Taper lever

Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever down gradually increases the cutting length.



Cutter cleaning and maintenance

Blade alignment

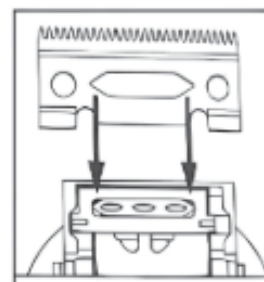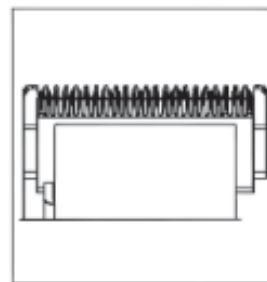

Your clipper were carefully examined to ensure that the blades were oiled and aligned before leaving our factory. Blades must be realign if they have been removed for cleaning or replacement.


To realign the blades, simply match the upper and bottom blades teeth up, point for point (End of top blade teeth should be approximately 0.5-1.0mm back from bottom blade. Compare your clipper blades with the sketch)

If blade alignment is incorrect, add a few drops of oil to the blade, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned.


Cutter maintenance

To maintain your clipper in peak condition, the blades should be oiled every few haircuts.

To oil it properly, the unit should be held so the blades are in a download position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.

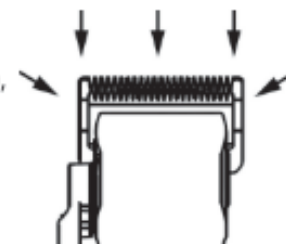

PROFESSIONAL HAIR CLIPPERS ZERO GAPPED CORDLESS HAIR TRIMMER & GROOMING KIT

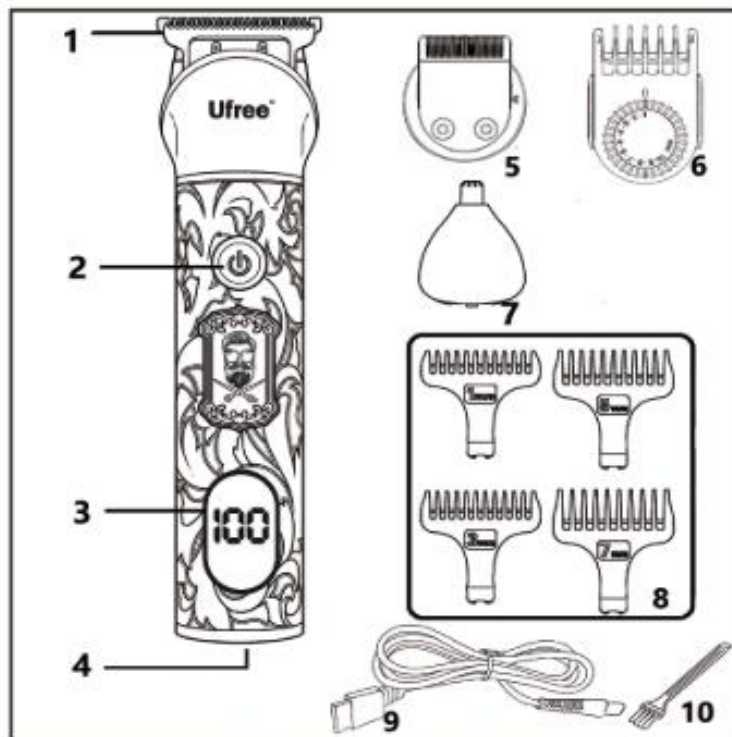

Overview

1. T-blade head (Zero Gapped Detail Trimmers)
2. Switch
3. Display
4. Charging port
5. Beard trimmer attachment
6. Precision comb 1/2/3/.../9/10mm for Beard trimmer attachment
7. Nose /ear hair trimmer head
8. T-blade head (Zero Gapped Detail Trimmers) comb row 1/3/5/7mm
9. Type-C charging cable
10. Brush

 
Safety instructions and Caution

Please read the following safety instructions carefully before using this product.

- (1) This product has a rechargeable battery inside. Do not throw it into fire, use or charge it in high temperature, and do not expose the product to excessive heat temperature.
- (2) You may not use the product in the absence of a guardian or a person who is suffering from physical, sensory, or mental retardation, or lack of experience and knowledge.
- (3) If the power cord is damaged, you should discard the power cord and do not use it.
- (4) Do not insert the charger into a household outlet or remove it from the outlet when your hand is wet.
- (5) Do not leave the product in the place where children can touch, do not allow children or toddler to use it by themselves.
- (6) Before using, please check whether the hair trimmer cutting head is broken.

Charge

The charging input of this product is 5V1A. When connecting the power supply, please pay attention to the output of the power supply! When charging, the digital display lights up from bottom to top, it takes 120 minutes to fully charge, and number 100 is displayed. When fully charged, it can be used for about 180 minutes.

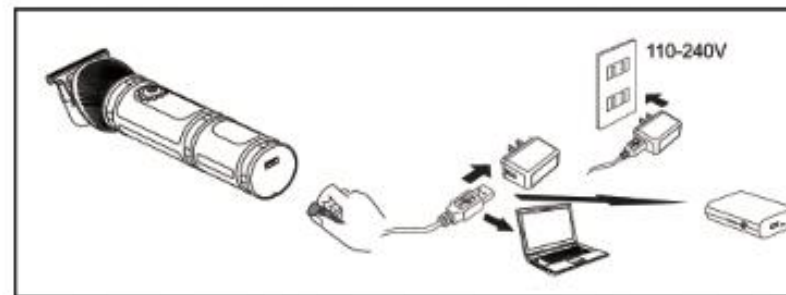

Instructions for use

 
To remove the cutter head: Press the top of the cutter head to remove the cutter head.

Install the cutter head: insert the buckle foot of the cutter plate into the product slot, press the cutter plate, and buckle the cutter head



Installation and removal of comb bar

Install the comb row: the blade is flat on the comb row, move it to the top, press the bottom of the comb row, and buckle it into the comb row
 Removing the comb bar: Remove the comb bar by force

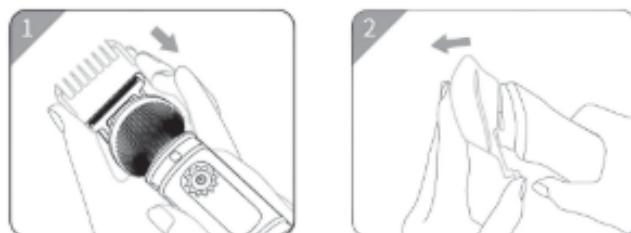

Use of 3 trimming heads

--T-blade head (Zero Gapped Detail Trimmers)

Equipped with 4 different size comb rows: 1/3/5/7mm
 When used without comb bar, the shortest can be trimmed to 0.3mm.
 For trimming T line, Multiple Trendy Hairstyles: It is suitable for oil head, trimming and carving hair shape, bald head



--Nose/ear hair trimmer head

For trimming nose/ear hair



Beard trimmer attachment

Equipped with 1 adjustable positioning comb: 1/2/3/4/5/6/7/8/9/10mm
 For trimming and styling beard/sideburns



Travel lock function

Press and hold the switch for 5 seconds, the product is locked, and the display flashes for 3 seconds;
 Press and hold the switch for 5 seconds or connect to charge; the product turns on.

Product cleaning and maintenance

After each use, use the provided brush to remove the remaining hair on each cutter head; if necessary, remove the cutter head and clean the cutter head under the faucet.

Note: Only the cutter head can be cleaned
NOTE: Please do not immerse the whole clipper in running water.

After cleaning, add 3 drops of lubricating oil to the left, middle and right of the cutter teeth.

