

INSIGNIA™

# USER GUIDE GUÍA DEL USUARIO

## Three-device Universal Remote

Control remoto universal  
para tres dispositivos

**NS-RMT3D21**



Before using your new product, please read these instructions to prevent any damage.  
Antes de usar su producto nuevo, lea este instructivo para prevenir cualquier daño.

## English

### Contents

Introduction .....	2
IMPORTANT SAFEGUARDS.....	2
Features .....	3
Package contents.....	3
Remote control buttons .....	4
Setting up your universal remote control .....	6
Installing the batteries.....	6
Programming and using your remote control..	6
Controlling the volume on your sound bar or audio receiver .....	11
Using channel shortcut macros.....	14
Using app shortcut macros.....	15
Understanding and using Activities.....	17
Troubleshooting .....	18
Specifications.....	19
ONE-YEAR LIMITED WARRANTY.....	20
ESPAÑOL .....	22

### Introduction

Thank you for purchasing the Insignia Three-device Universal Remote Control. This remote can be used to control a TV, a set top box, and a sound bar or audio receiver, and boasts several extra features to make the most of your living room experience.

This manual will help you to set up your Insignia universal remote control to control three of your devices and take advantage of its features.

### IMPORTANT SAFEGUARDS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.

- 5 Refer all servicing to qualified service personnel.
- 6 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

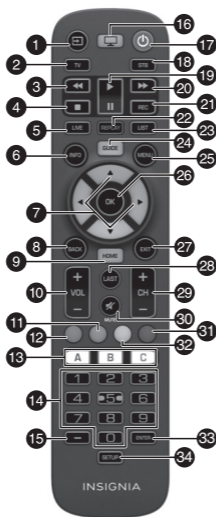
## Features

- Controls up to 3 devices – your TV, soundbar and cable box/satellite receiver
- Easy pre-programming connects to your major brand devices without needing a code
- A long 30 ft. (9.1 m) range helps you to minimize remote switching
- Learn-ability feature enables this remote to learn additional functions from your original remote
- Shortcuts let you program specific keys for quick access to your favorite channels and streaming apps
- Audio lock feature adjusts the volume of your soundbar without changing devices
- Premiere design blends ergonomics and key layout for easy, enjoyable use
- 2 AAA batteries required (not included)





## Package contents

- Three-device universal remote control
- *User Guide*
- *Device Codes*

## Remote control buttons



#	BUTTON	PRESS TO...
1	Input	Change the signal source.
2	<b>TV</b>	Control your TV.
3	◀◀ (fast reverse)	Fast reverse device playback.
4	■ (stop)	Stop device playback.
5	<b>LIVE</b>	Return to live TV from time shift or recording.
6	<b>INFO</b>	Display information about current shows or channel.
7	Menu navigation	Navigate onscreen menus.
8	<b>BACK</b>	Go back one step in an onscreen menu.
9	<b>HOME</b>	Go to the home menu.

 
#	BUTTON	PRESS TO...
10	<b>VOL + / VOL -</b>	Increase or decrease the volume.
11	Green	Access news channels.
12	Red	Access sports channels.
13	<b>A, B, and C</b>	Access programmable app shortcuts.
14	Number buttons	Select channels on the current device. On audio devices, press to select inputs.
15	Dash	Select sub-channels or select extra functions in the Menu mode of your set top box.
16	 (Watch TV)	Combines control of your TV and STB. See <a href="#">Understanding and using Activities</a> on page 17.
17	 (power)	Turn on selected device.
18	<b>STB</b>	Control your set top box.
19	 (play/pause)	Play or pause device playback.
20	 (fast forward)	Fast forward device playback.
21	<b>REC</b>	Record content.
22	<b>REPLAY</b>	Repeat the last 30 seconds.
23	<b>LIST</b>	Show a list of recordings.
24	<b>GUIDE</b>	Display the program guide.
25	<b>MENU</b>	Show the setup menu for the selected device.
26	<b>OK</b>	Select items on the menu.
27	<b>EXIT</b>	Exit the menu.
28	<b>LAST</b>	Go to the last channel viewed.
29	<b>CH + / CH -</b>	Go to the next or last channel.
30	<b>MUTE</b>	Mute the volume of the current device.
31	Blue	Access kids channels.
32	Yellow	Access movie channels.
33	<b>ENTER</b>	Enter the channel selected on the numeric buttons.
34	<b>SETUP</b>	Enter the setup menu for your Insignia universal remote control.

## Setting up your universal remote control

### Installing the batteries

Your remote control requires two AAA batteries.

- 1 Remove the battery compartment cover from the back of your remote control.



- 2 Insert two AAA batteries (not included) into the battery compartment, making sure that the + and - symbols on the batteries match the + and - symbols inside the battery compartment.
- 3 Replace the battery compartment cover.

#### CAUTIONS:

- Do not spill water or any liquid on your remote control.
- Do not place your remote control on a wet surface.
- Do not place your remote control in direct sunlight or near sources of excessive heat.
- If your remote control is not going to be used for a long time, remove the batteries to avoid any damage that may be caused by leakage and corrosion.

### Programming and using your remote control

Your Insignia universal remote control is pre-programmed to control three of the most popular devices, right out of the box. If you have one of the following devices, try putting the batteries in and pressing the corresponding device button (for example **TV** or **STB**), and then press a few function buttons to see if your remote controls your device.

PRESS THIS BUTTON	DEVICE CONTROLLED
TV	Samsung TV
STB	Comcast Xfinity Set Top Box

If your device is not one of those listed above, or you have extra devices to set up, there are three ways to do this. The easiest is SimpleSet which is used for the most common brands and devices.

### Setup method 1 - SimpleSet

If the brand of your device is shown in the SimpleSet tables below, you can use the SimpleSet system. Locate the brand of your device and note the numeric button associated with it.

## TV

TV BRAND	PRESS
LG	1
Insignia	2
Phillips, Magnavox	3
Roku, Element	4
Samsung, Panasonic	5
Sharp, Hisense	6
Sony, Sanyo	7
TCL, RCA	8
Toshiba, Westinghouse	9
VIZIO	0

## STB (set top box)

STB BRAND	PRESS
Bell, Bell Fibe TV, Bell MTS, Sasktel	1
Comcast/Xfinity	2
Cox Communications	3
DIRECTV, AT&T, Sky Mexico	4
DISH Network, Dish Mexico, Izzi Telecom	5
Optimum, Suddenlink, Altice USA	6

STB BRAND	PRESS
Rogers, Cogeco, Vidéotron	7
Shaw, Cable Axion, Eastlink	8
Spectrum	9
Verizon, Frontier Communications, TELUS	0


- 1 Turn on your device and point the Insignia universal remote control at it (if you are setting up a streaming device, make sure a movie or TV program is playing).
- 2 Press the device button you want to set up (for example **TV**).
- 3 Press and hold the **SETUP** button until the LED on your remote button blinks twice.
- 4 Press and hold the number button for your brand and device, as listed in the tables above (or example, **3** for a Phillips TV). Your remote will send the power signal every three seconds.
- 5 Release the button as soon as your device turns off. The LED blinks twice and your remote will now operate your device.

**Note:** If one or more buttons do not work as expected, start again at step 2. Your remote will start with the next code in memory.

## Setup method 2 - device codes

If your device brand is not listed in the SimpleSet tables, you can set up your device by using device codes.

 
- 1 Turn on your device and point the Insignia universal remote control at it.
- 2 Press the device button you wish to set up (for example - **TV**).
- 3 Press and hold the **SETUP** button until the LED on your remote button blinks twice.

- 4 Enter the first four-number code listed for your brand (for example, **1840** for LG). The LED blinks twice when the last number of the code is entered.
- 5 Point your remote towards your device and press the  (power) button. If the device turns off, your remote is ready to use. If not, repeat steps 2-5 with the next code in the list.

### Setup method 3 - function learning

Your Insignia universal remote control can learn any function from any other working remote control. This is a one-time setup that lets you control any infrared controlled device you have. It also lets you add a button function that may be missing to a spare button on the universal remote control.

To do this, make sure that you have all of your original remote controls handy, and that they have fresh batteries.

- 1 Point the original remote control at your Insignia universal remote control from approximately two inches away.
- 2 Press the button on the original remote control for the device you want to learn functions.
- 3 Press and hold the **SETUP** button on your Insignia universal remote control until the LED under the device button blinks twice.
- 4 Press **975**. The LED blinks twice.
- 5 Press the button you want to learn (for example the TV Power button). The LED begins to blink rapidly.
- 6 Press the corresponding button on the original remote (for example the  [power] button). The LED blinks twice to indicate the button has learned correctly.

- 7 Repeat steps 5 and 6 for each button you want to learn.

**Notes:**

- Your Insignia universal remote can learn from multiple remotes, but there can only be one function per button.
- Some remotes send commands differently. If you find that a function cannot be learned, try holding down the button on the original remote instead of pressing and releasing.

- 8 When your remote has learned all the functions you want, press and hold the **SETUP** button until the LED under the device button blinks twice.

**Hints**

- If the LED shows one long blink at step 6, the function was **not** learned. Try again, beginning at step 5.
- If you find one or more buttons don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.
- If one or more of your original remotes aren't working, you can still set up the Insignia universal remote control by using SimpleSet or the device code setup.

**Deleting a learned function**

You can delete a learned function and return that button to its original state.

- 1 Press the button for the device for which you want to delete the function.
- 2 Press and hold the **SETUP** button until the LED under the device button blinks twice.
- 3 Enter **976**. The LED blinks twice.
- 4 Press the button you want to reset twice. The LED blinks twice and the learned function has been deleted.

## Locking the volume control

If you primarily use one device for controlling volume, for example the TV, it's possible to program your Insignia universal remote control to only control that device when you use the **VOL +**, **VOL -**, or **MUTE** buttons.

- 1 Press and hold the **SETUP** button until the LED on your remote button blinks twice.
- 2 Enter **993**. The LED blinks twice.
- 3 Press the device button for the device to always control the volume (for example TV). The LED blinks twice.

Now, pressing the **VOL +**, **VOL -**, or **MUTE** buttons controls the audio device, no matter what device you are controlling.

## Unlocking the volume control

You can unlock the volume control and return your Insignia universal remote control to controlling each device's volume individually.

- 1 Press and hold the **SETUP** button until the LED under the device button blinks twice.
- 2 Enter **993**. The LED blinks twice. The volume control is now unlocked.

## Controlling the volume on your sound bar or audio receiver

If you have your TV connected to a sound bar or audio receiver, you can set up your Insignia universal remote control to control the volume and mute of those devices.

## Using audio SimpleSet

If you have a sound bar or audio device from one of the brands listed in the table below, you can use the SimpleSet method to program your remote to control it. If you do not have one of the brands on the chart, proceed to the next section.

BRAND	PRESS
Bose	1
Denon	2
JBL, Polk Audio	3
LG	4
Insignia	5
Onkyo	6
Samsung	7
Sony	8
Yamaha	9
VIZIO, Sonos	0

**Note:** Each of the brands has a number associated with it, for example 4 for LG.

You can set up your Insignia universal remote control to control your sound bar or audio device.

- 1 Make sure that your TV and sound bar or audio device are both powered on and that there is something playing that you can hear (this procedure will test the Mute function).
- 2 Press and hold the **SETUP** and **VOL +** buttons together until the LED under the **TV** button blinks twice.

- 3** Point the Insignia universal remote control at your sound bar or audio device and hold down the number button (from the SimpleSet table) for your audio device brand (for example 4 for LG). Your remote sends the mute signal to your device every three seconds.
- 4** As soon as your sound bar or audio device mutes the volume, release the number button. The LED under the **TV** button blinks twice. Your remote has found the correct code for your audio device.
- 5** Press and hold the **SETUP** and **VOL -** buttons until the LED blinks twice. The **VOL +**, **VOL -**, and **MUTE** buttons now control your audio device.

### Using audio setup codes

If your sound bar or audio device is not one of the brands listed on the SimpleSet table, you can set up your Insignia universal remote control to control it by entering a four-number code.

- 1** Locate the brand of your sound bar or audio system in the code list.
- 2** Press and hold the **SETUP** and **VOL -** buttons until the LED under the **TV** button blinks twice. Your remote is now ready to be programmed.
- 3** Enter the first four-number code for your sound bar or audio device. The LED blinks twice when the last number is entered.
- 4** Try the **VOL +**, **VOL -**, and **MUTE** buttons to determine if they control your sound bar or audio device. If they work, your remote is set up. If not, try again from step 1 using the next code in the list.

### Resetting volume control

You can reset the volume control to the original settings.

- Press and hold the **SETUP** and **VOL -** buttons until the LED under the device button blinks four times. The volume control is now reset.

If you have set up your Insignia universal remote control to control the volume of a sound bar or audio device, the Watch TV Activity (see [Understanding and using Activities](#) on page 17) will automatically control the volume of this device.

## Using channel shortcut macros

In addition to their normal functionality, the red, green, yellow and blue buttons can be reprogrammed to select your favorite channels by genre. Initially, if you press each of these buttons, they have the same function as your original remote. However, you can reprogram them so that when the buttons are held down for three seconds they send a channel number, then when held down again for three seconds, they will send another channel number. You can group these channels by genre, such as sports, news, movies, and kids.



## Adding channel shortcut macros

For example, if the first three sports channels are 200, 201, and 239, you can assign shortcuts to these channels on the red (Sports) button.

- 1 Select the device you normally use to watch live TV. For example, the **STB** button to select your set top box.
- 2 Hold down the **SETUP** button and the red (Sports) button until the LED blinks twice.
- 3 Enter the first channel number. In this case, **200**.
- 4 Press and release the red (Sports) button.
- 5 Enter the next channel number. In this example **201**.
- 6 Press and release the red (Sports) button again.

- 7 Repeat steps 3 and 4 for each channel shortcut you want to add.
- 8 After entering the last channel number you want, press and hold the **SETUP** button. The red LED blinks twice and the shortcuts are now programmed.

When watching live TV, hold down the red (Sports) button for three seconds and the first programmed channel is selected (in this example channel **200**). Hold down the red (Sports) button again for three seconds and the next programmed channel is selected (in this example channel **201**).

Using the same procedure, you can program each of the colored buttons with different groups of channel numbers. Each colored button has a different icon (sports, news, movies, and kids) to help you remember the types of channels that you have programmed there. You can program up to 10 different channel numbers per button.

## Canceling channel shortcut macros

You can also reset the colored buttons to default.

- 1 Press the device button you have programmed (for example **STB**).
- 2 Press and hold the **SETUP** button and the colored button you want to reset (for example the green [News] button) until the LED blinks twice.
- 3 Press the green (News) button again.
- 4 Press and hold the **SETUP** button until the LED blinks twice. The button is now reset.

## Using app shortcut macros

Your Insignia universal remote control features three *app* shortcut buttons that can be used to open apps on your smart devices. If your original remote control has a Netflix, Amazon Prime Video, and/or YouTube button, the app shortcut buttons can be programmed to perform the same function. Even if your original remote control did not have buttons like this, but still

had the ability to connect to a streaming service, you can use these buttons as shortcuts by programming a macro to them.



Most AV devices which are connected to the internet, such as smart TVs, have one or more applications they can run to access TV viewing via the internet. Examples of these would be Netflix, YouTube, Amazon Prime, or Hulu.

### **Adding app shortcut macros**

To program the macro, you need to know the device you normally use to access the service, and the sequence of buttons you need to press to bring up the service you want. For example, some Panasonic TVs can start Netflix by pressing the **Apps** button, then **Menu Down** twice, and finally the **OK** button.


- 1** Determine the sequence required for your device, then turn the device on.
- 2** Hold down the app shortcut button (**A**, **B**, or **C**) until the LED blinks twice and stays lit.
- 3** Press the device button for the device you want to use for the macro (for example **TV**).
- 4** Press the appropriate buttons in the normal sequence. Your remote will operate your device and the macro is recorded in real time.
- 5** After you have finished the sequence and the streaming service has started on your device, hold down the app shortcut button (**A**, **B**, or **C**) until the LED blinks twice and turns off. The macro is now stored.

## Tips

- Make sure that the Insignia universal remote control is operating the device you want to use to access the streaming service before programming.
- If the macro doesn't work as expected, repeat the same sequence to try to program it again.
- When programming, wait for your device to respond. Your remote will remember the timing.
- The app shortcut macro is tied to one device. Make sure you are watching the correct device.

## Understanding and using Activities

Using a standard universal remote control, if you want to control several different devices you need to press different device buttons in order to control each device individually. Using the Insignia universal remote control, you can create an *Activity*, with which you can group a combination of devices and not have to switch control between them.

For example, if you want to control the input of your TV, the channels and guide of your DirecTV STB, and the volume of your sound bar, you would need to swap between these devices by pressing the **TV** and **STB** buttons. On the Insignia universal remote control, these devices can be grouped into a single Activity. So by pressing the button for the Watch TV Activity () , the input button will control the **TV**, the **VOL +**, **VOL -**, and **MUTE** buttons will control the sound bar, and all of the other buttons will control the set top box.



There are several devices you can combine.

- Combination 1 – TV + STB + AUDIO (default)
- Combination 2 – TV + STB
- Combination 3 – TV + AUDIO





If you set the default devices for any Activity on the Insignia universal remote control (for example TV, STB, and Audio for the Watch TV Activity), that Activity will be set up automatically on your remote.

If you have set up your remote to control the volume of a sound bar or audio device (see [Controlling the volume on your sound bar or audio receiver](#) on page 11), the Watch TV Activity will automatically control the volume of that device.



You can also program Activities yourself.

- 1 Press and hold the **SETUP** button until the LED under the device button blinks twice. The LED under the current device button stays lit.
- 2 Press the Activity button you want to set up (for example, Watch TV (  )).
- 3 Press the number of the combination you want to set (for example **3**, for TV + audio in the Watch TV Activity). The LED blinks twice.
- 4 Press the Activity button (  ). You can return to controlling by device by using any device button.

## Using the AV shift

The **INPUT** button selects the input on your TV (most TVs use a menu to select from a list of inputs). When the **INPUT** button is pressed in an Activity, the **MENU** , , , , and **OK** buttons temporarily (10 seconds) control the TV. If the **OK** button is pressed, or no button is pressed for ten seconds, these buttons revert to controlling the relevant device for the Activity (for example **STB** in the Watch TV Activity).

## Using the power macro

If you press and hold the  (power) button for two seconds in any Activity, your remote sends the power signal to each device within that Activity. For example, pressing the  (power) button in the default setting for the Watch TV Activity turns both the TV and set top box on or off.

## Troubleshooting

**CAUTION:** Do not try to repair your remote yourself. Doing so invalidates the warranty.

PROBLEM	SOLUTION
The LED does not turn on when a button is pressed.	Replace the batteries.

PROBLEM	SOLUTION
The LED turns on, but my remote does not control my device.	<ul style="list-style-type: none"><li>• Make sure that your remote is programmed to your device.</li><li>• Make sure that your remote is set to the correct mode (TV or STB).</li></ul>
I have tried all of the codes for my device's brand, but none of them work.	See <a href="#">Setup method 2 - device codes</a> on page <a href="#">8</a> .
After programming, some of my remote's functions don't work	If you still have your original (working) remote, you can teach your new remote its functions. See <a href="#">Setup method 3 - function learning</a> on page <a href="#">9</a> .

## Specifications

Dimensions (HxWxD)	1.8 x .8 x 8 in. (45.7 x 20.3 x 203.2 mm)
Range	30 ft. (9.1 m)
Control	Three devices
Power requirements	Two AAA batteries (not provided)

## ONE-YEAR LIMITED WARRANTY

### Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

### How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

### What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

### Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

### What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments

- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2022 Best Buy. All rights reserved.

## Device codes/Códigos de los dispositivos

### TV Device Codes/Códigos de dispositivos de televisión

Affinity	3717, 3870, 3577, 3716
Aiwa	3332, 1362
Akai	1675, 3332
AOC	3720, 2691, 1365, 2014, 2087
Apex Digital	2397, 4347, 4350
Ario	2397
Asus	3340
Atak	2397
Atvio	3638, 4398, 3636, 3879
Atyme	2746
Audiovox	1564, 1276, 1769, 2121
Auria	4748, 2087, 2014, 2277, 2855
Avera	2397, 2049
Avol	2735, 4367, 3382, 3118, 1709
Axess	3593
Blu:sens	2735
Bolva	2397
Broksonic	1892, 3118
Calypso	4748
Champion	1362
Changhong	4629
Citizen	1892
Coby	3627
Contex	4053, 4280
Craig	3423, 1687
Crosley	3115
Curtis	2855, 3577, 2466, 3895, 2352, 2397, 3939, 4035, 3636, 3382, 3717, 4139
Curtis Mathes	1661
Daewoo	1661, 3115, 3879
Dell	1749
Digitrex	4207
Disney	1892
Durabrand	1595, 3879
Dynex	2049, 1463, 1780, 2184

Electrograph	1755
Electrohome	1670
Electron	2466, 2855
Element	3559, 1687, 4398, 2183, 2964, 5173, 4635, 4910, 1886, 4217, 4740
Element-Roku	4398, 4740
Elite	1457
Emerson	1864, 1963, 1394, 1886, 1595, 3623, 1661, 2183, 3559
Envision	1365, 2087, 2014
EQD Auria	2014, 2087, 2277
ESA	1963, 1595
eTec	2397
Exorvision	3953
Favi	3382
Fisher	1362
Fluid	2964, 3559
Furrion	3332, 4093, 5410
Gateway	1755
GE	1447
GFM	1864, 1886, 1963
GHIA	5144, 5196
GPX	3980, 3977
Haier	2309, 1749, 1748, 3382, 1753, 3429, 2293, 4398, 2214
Haier-Roku	4398
Hannspree	1348, 2786
Harper	3332
Hewlett Packard	1860
Hisense	3519, 4740, 4618, 2183, 5185, 1660, 3382
Hisense-Roku	4740
Hitachi	1643, 4398, 5102, 4455, 2214, 3382, 3332, 0679, 5446
Hitachi-Roku	4398
Hiteker	3118
HKPro	3879, 2434, 5228
HP	1860
iLo	1463, 1394
InFocus-Roku	4398
Insignia	2049, 1780, 4487, 3227, 5213, 1564, 1641, 2184, 1892, 1423, 1660, 1963
Insignia-Roku	4487
iSymphony	3382, 3429, 3118, 3094

JVC	1774, 1601, 3393, 2321, 2271, 4107, 4398, 5182, 4105, 4053, 1670, 4367, 1892, 3879, 4280, 5228
JVC-Roku	4398
KC	4182
KDS	1687
Kenmore	3953
LeEco	4007
Legend	2397, 2352, 1749, 2309
Lexus	3638
LG	1840, 1860, 2731, 1423, 4397, 2358, 1749, 4398, 1753
MAG	1687
Magnavox	3623, 1866, 2372, 1963, 1454, 1365, 1755, 4398, 1867, 4740, 1394
Magnavox-Roku	4398, 4740
Marantz	1454
Maxent	1755
Memorex	4686, 1892, 1670, 1687, 2049
Mitsubishi	1250, 1797
Mitsui	1123, 3638, 3673
Naxa	4093, 2104, 2735, 3382, 3423
NEC	3257, 1797, 3000, 2293
NetTV	1755
Nexus	1564, 3519, 2183
Norcent	1365, 2087
NuVision	1657, 4347
oCOSMO	3899, 4139
Ölevia	1610
Onn	4398, 5348, 1709, 3024, 3078, 5118
Onn-Roku	4398
Optimus	0679
Orion	1463, 1670, 3540, 1892
Panasonic	1480, 1291
Philco	1963, 1394, 5377
Philips	2800, 1867, 2372, 3069, 1454, 3623, 3396, 1866, 1744, 4398, 1963, 1755, 1365, 1394
Philips Magnavox	3396, 1866, 3623
Philips-Roku	4398
Pioneer	0679, 1260, 1457, 2434
Planar	0679

Polaroid	1523, 4035, 1769, 1276, 1687, 1767, 3942, 2121, 3382, 2434, 3118
Portland	1661
Prima	1753, 2049, 1749
Proscan	1447, 3577, 3382, 2183, 3717, 3332, 4494, 3636, 3895, 3953, 4495, 4035, 4053, 4491, 3939, 4483, 4375, 4500, 2746, 3429, 3559, 4093
Proview	1687
Pyle	2196
QFX	3593
QuantumFX	3593
Quasar	1291, 4207, 3899, 4367, 3382, 5221
RCA	2746, 2434, 2247, 4214, 3577, 1781, 4398, 3382, 4740, 3332, 3717, 2932, 3895, 2187, 4629, 4488, 4494, 3953, 2183, 4623, 3636, 3939, 2855, 4053, 3519, 4491, 4495, 4627, 0679, 4035, 4483, 4625, 5223, 1661, 5377, 3938, 4093, 1670, 5173, 1447
RCA-Roku	4398, 4740
Roku	4398, 4740
Sampo	1755
Samsung	2051, 1632, 5386, 5371
Sansui	1892, 3540, 1670, 1463, 4053, 3564, 4280, 3559
Sanyo	1142, 1362, 4168, 4740, 2049, 4667, 3488, 1480, 1564
Sanyo-Roku	4740
Sceptre	3899, 4139, 2528, 5393
Seiki	3953, 4635, 2964, 3560, 3559, 4217, 3382, 4794
Seura	4751
Sharp	2360, 1659, 3519, 3394, 4740, 4618, 3720, 4507, 2214, 4398
Sharp-Roku	4740, 4398
Sigmac	3477, 3423
Silo Digital	3899, 4494, 3477, 4182
SkyVue	4135, 2360
Skyworth	5340, 4542
Sony	0810, 4448, 4189
Spectroniq	1687
Speler	4105, 4041, 2434
SunBriteTV	2528, 4139, 1610
Superscan	1963
Supersonic	3593, 2104, 1753
SVA	1963
Sylvania	1963, 1864, 1886, 1394, 1595, 3332, 3577, 4053
Symphonic	1963, 1595, 1394

TCL	4398, 2434, 3183, 5446, 3879
TCL-Roku	4398
Technicolor	3577
Toshiba	2724, 3945, 5213, 4885, 5394
Upstar	4182, 4405, 3899
V7 Videoseven	2087
Vidao	2397
Videoseven	2087
Viewsonic	2014, 2277, 2087, 3706, 1755, 2049, 1860, 1564, 1365
Viore	3382, 2352, 3118, 2104, 3429, 3094
VisionQuest	1687
VIZIO	1758, 3758, 4905, 5454, 4723, 2707, 2757, 3415, 2512
W Box Technologies	4686
Westinghouse	1712, 4797, 3559, 3382, 4398, 5173, 4910, 2293, 3094, 4139, 3560, 4635, 2397, 3908
Westinghouse-Roku	4398
White Westinghouse	1661
Wyse	1365
Xococo	1753, 2049, 1749
Zenith	1423, 2731, 1661, 1365, 2358, 1463

## STB Device Codes/Códigos de dispositivos STB

Access Communications	1376, 2187, 4537
ADB	2586, 1481, 1998, 2254, 3028
Altice USA	3885, 1376, 6351, 1877, 3560, 1982
Amino	1615, 1481, 1898, 3605, 2482, 4437, 1998, 3028, 3426
Armstrong	1376, 3560
Arris	1376, 2378, 1982, 1998, 2187, 0869, 5912, 1877, 5889, 5097, 6400, 0858, 5537, 5942
AT&T	1377, 6268, 0858
AT&T U-verse	0858
Atlantic Broadband	1376, 1877, 1982, 3560, 4079
Axtel	4458
Bell	0775, 1998, 5537, 1877, 5097
Bell Aliant	1998
Bell Fibe TV	1998, 5097, 5537

Bell MTS	1998, 5097, 5537
Bell Satellite TV	0775
Blue Ridge Communications	1877, 3560
Buckeye Broadband	1376, 1877, 2187, 4079
Cable Axion	1376
Cable One	1376, 3560, 1877
Cablecom Mexico	1376
Cablemás	1376, 1877
Cablevisión Mexico	1376, 4375, 4537
CenturyLink	1998, 0858
Channel Master	3118
Cincinnati Bell	1877, 1376
Cisco	1877, 1982, 2947, 0858, 3028, 2345, 2378, 5912, 1998, 4315, 3294, 4374, 5484, 2826, 4450, 4514, 5942
Cogeco	1376, 1982, 3560, 4537
Comcast	1982, 1376, 1877, 3560, 2187, 4079, 4443, 4537
Cox Communications	1877, 1376, 1982, 4315, 3774, 3560, 6400
DIRECTV	1377, 6268, 3724
DISH	0775
Dish Mexico	0775, 6068
DISH Network	0775
EastLink	1376, 2187
Echostar	0775
Entone	3426, 1615, 1898, 4437
Evolution Digital	2479, 4079, 2746, 4315, 3560
Frontier Communications	2378, 1998, 3560, 0775
Google Fiber	3666
Ignite TV	1982
Izzi Telecom	1376, 6195, 4375, 4537
Kaon Media	4458, 2746
Liberty Cablevision	1376
Maxcom	1998
Mediacom	1376, 3560, 1982, 1877
Megacable	1376, 6286, 4374, 4450, 4514, 4375, 4537, 4883
Midco	1376, 1982, 3560, 2826, 4079
Motorola	1376, 0869, 2378, 1998, 0858, 1982, 4375, 5097, 3469

Moxi	2187
Optimum	3885, 1376, 6351
Pace	1982, 1376, 1377, 1877, 3469, 3560, 1998, 0858, 6195, 4537, 5370
Philips	1377, 2378, 3560, 2619, 3469
Pioneer	1877
RCN	1376, 3560, 1877
Rogers	1877, 1376, 5484, 1982, 2826, 3294, 4537
Sagemcom	3885, 5842
Samsung	1377, 1877, 1982, 2947, 3928, 6268
SaskTel	1998
Scientific Atlanta	1877, 0858, 1982, 2345, 3028, 2378, 2826
Service Electric	1376, 1982, 1877, 2187
Shaw	1376, 1877, 1982, 2187, 4537
Shaw Direct	0869, 0775
Sky Mexico	3469, 2619, 1377
Sparklight	1376, 3560, 1877
Spectrum	1877, 1376, 2187, 3560, 3294, 4537
Suddenlink	1877, 1376, 3560, 6351, 3885, 1982
Tbaytel	1998
TDS Telecom	0775, 1376, 3028, 1877, 1982
Technicolor	1377, 1877, 1982, 5484, 5912, 2947, 6286, 6068, 6195, 3469
TeleCable	1376
TELUS	5912, 3028, 0775, 5942
Time Warner Cable	1877, 1376, 3294, 2187, 3560, 4537
TiVo	3560, 3724, 1377
Totalplay	4589
TVision Home	5370, 1998
U-verse	0858
Verizon	2378, 5889, 6326
Vidéotron	1877, 2947, 1376, 1982
Vmedia	4596
Wave Broadband	1376, 1877, 4079, 2479, 3560, 2187
WOW!	1877, 1376, 2187, 2479, 3560, 2826, 3294
Xfinity	1982, 1376, 1877, 3560, 2187, 4079, 4443, 4537
Xtream	1376, 3560, 1982, 1877
ZTE	6286

## AUDIO Device Codes/Códigos de dispositivos de AUDIO

iLive	3175
Inkel	3770, 4090, 3793
Insignia	3951, 2169, 2472, 2966, 3770, 4424, 1077
Integra	1805, 3860, 2730, 4023, 4014, 2503, 3992
Jamo	4941
JBL	3756, 2241, 3391, 3535, 5132, 0110
JVC	1676, 2040, 3049, 2331
Kenwood	1570, 1293
Klipsch	4941, 4198, 4200, 5152
LG	3217, 2676, 3509, 2197, 4043, 3996, 1293
Magnavox	1831, 1269, 3282
Majority	5506
Marantz	1289, 2114, 3772, 1269, 3347
McIntosh	1289
Megacra	5271
Monoprice	4505
Monster Cable	4987
Onkyo	1805, 2730, 3860, 4023, 2503, 4041, 4014, 3992, 3984, 5094
Onn	5041, 5412, 5042, 5414, 5415, 5043
Optimus	1023
Panasonic	3323, 2967, 3309, 3055, 2452, 3767, 1676
Paradigm	4536, 4846
Peerless-AV	5153
Philco	1831
Philips	1831, 1269, 4105, 2459, 3776, 3379, 3282, 3801, 2311, 3652, 2675, 4012
Pinnacle Speakers	3774, 3728
Pioneer	1935, 3057, 2432, 1023, 3956
Polk Audio	4431, 1289
Proficient	3661
Pyle	4333
RCA	2041, 2611, 3297, 2719, 2655, 3969, 1023, 2544, 5490
RichSound Research	5138
Roku	5495
RSR	5138

Samsung	2660, 1868, 2809, 3320, 3382, 3154, 2137, 1304
Samsung Harman/ Kardon	3320
Sanyo	4176, 3282
Sceptre	5351
Sennheiser	5330
Sharp	3097, 3736, 3929
Sherbourn	3763
Sherwood	1077, 1567, 3120, 3136, 2169, 3793, 4090, 3770
Sherwood Newcastle	1567, 2169
SnapAV	5107
Sonos	3919
Sony	1622, 3700, 2172, 4315, 1759, 1822, 2522, 2475, 1758, 3257, 2582, 3487, 4457, 0158, 4285, 4366, 2610
Soundcore	5578
SpeakerCraft	3661
Stereophonics	1023
TaoTronics	4672
TCL	4672, 5385
Toshiba	3627
VIZIO	3935, 2454, 5095, 4911
Yamaha	2467, 2116, 3580, 3030, 2458, 3325, 3917, 4269, 2021, 0176
Zenith	1293, 2197
ZVOX	2332, 3913, 2334

INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
1-877-467-4289 (U.S. and Canada/EE.UU. y Canadá)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2022 Best Buy. All rights reserved.

INSIGNIA es una marca comercial de Best Buy y sus compañías asociadas.  
Distribuida por Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN 55423 E.U.A.  
© 2022 Best Buy. Todos los derechos reservados.

V2 ENGLISH/  
ESPAÑOL  
22-0134