

SKU: WC-C-HM

WATER COOLER

Instruction Manual



Thank you very much for purchasing our water cooler.
Before using your water cooler, please read this owner's manual carefully
and keep it for future reference.

If you have any questions, please contact customer service: support@homyd.com;
We will do our best to answer you!

Congratulations

Dear Customer, So lucky to meet you guys !!!
Thank you for your trust in our products!

We want to provide you with sincere service. If there are any omissions or errors in your order. If you have any questions about using our products. Please contact us.
Email - (support@homyd.com).

Our team will answer your queries online within 24 hours. Your satisfaction is our ultimate goal. We would appreciate it if you could share your experience with other shoppers on Amazon. If you just want to see a description of the problem, you can go straight to page 10 or contact us directly.
Email:support@homyd.com

Our mission: to be the most trusted brand of electrical appliances, creating small and practical appliances that make your life better.

TABLE OF CONTENTS

Safety precautions	2
Warning	3
Setup& use	4
Indicator lights	5
Installing and removing the drip tray	6
Installing the water bottle	7-8
Draining&cleaning	9-10
Cleaning instruction	11-12
Troubleshooting	13
Warranty and Service	14

I Safety precautions

Safety information



Important safety instructions

WARNING

When using electrical appliances, basic safety precautions should be followed, including the following:

1. This machine is suitable for household and must be used in doors
2. The machine should be stably placed on the floor, to avoid the damage because of the slide. Meanwhile the back side of the water cooler should keep at least 10CM spare to the door, for ventilation and health radiation.
3. The machine should be placed in a dry, cool, ventilated place, also should avoid the sunlight's irradiation and liquid's splashing. Don't be close to other expensive furniture and electric equipment, never should be placed on the woods.
4. Never change the power cord and never extend the length of the power cord.
5. If the water can't flow out because of stuck, please turn off the cold water switch back inside until 4 hours.
6. Before connecting with power supply, press the hot spout and let some water comes out to protect the thermostat.

I Warning

1. The plug base should be three-hole grounded with electricity leakage protection.
2. The children are not allowed to play with water spout to avoid accidental burns.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
5. Cleaning and user maintenance shall not be made by children without supervision.
6. Never use organic liquid to clean the machine. Strictly prohibit splashing water to the body.
7. You should use the ON/OFF switch to turn on or off the machine. It is prohibited that turn on or off the machine through plugging or unplugging the power cord. Never extend the length of the power supply cord to avoid fire.
8. For this model dispenser (with compressor), never turn the machine upside down or lean it more than 45°.
9. Since the thermostat of this model dispenser has been adjusted, please do not adjust it by yourself.
10. This machine should not be turned on until 3 minute later when turning off the cooling switch.
11. The power cord or other parts must be replaced by professional person when it is damaged.
12. We reserved the right of interpreting this instruction manual.

Operating condition

This machine is suitable for bottle of 3 or 5 gallons. Don't use unhealthy hard water.

 
This machine should work under environment of temperature from 10°C-38°C, relative humidity not higher than 90%.

If this machine worked under environment of temperature below 0°C or the thermostat did not work, the water will become ice in the cold water tank and block the pipe.

Attention and maintenance

1. The first time to use water cooler, must connect water first, when the water comes out from the water spout, then it can connect the electricity. In any case, connecting the dispenser to electricity without water is forbidden.
2. Insert or pull out the plug to start or turn off the water cooler is forbidden.
3. When doing cleanout or maintenance or stopping the dispenser for a long time, you must pull out the plug and when the hot water turns cold, open the drain valve until no water remains.
4. The cleanout should be done timely to ensure the water quality.
5. Children should not be allowed to play with water spout or they will get burnt.

I Setup& use

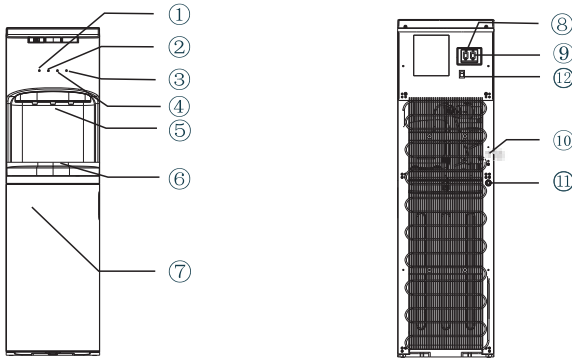

No	Name	No	Name
1	Power indicator	8	Cooling switch
2	Heating indicator	9	Heating switch
3	Cooling indicator	10	Power cord
4	UV light	11	Tank drain valve
5	Tap	12	Night light switch
6	Water tray		
7	Door		

Operating Instructions

Before using the water cooler for the first time, remove all packaging material, including the plastic bag.

Before first time use: To prevent any internal damage, it is very important to keep refrigeration units (like this one) upright throughout their journey. Please leave it standing upright and outside the box for 24 HOURS before plugging it in.

Indicator lights



Power Light

The light will illuminate when plug in the water cooler. It will keep lighting up until pull off the power cord.



Heating Indicator

This light will illuminate when the water is heating. The light will remain on while the water is heating and will turn to be green when it has reached the temperature of 185°F. As the water is dispensed, the hot tank will refill and the water will heat. This indicator light will turn to be red when the water reheats.



Cooling Indicator

This light will illuminate when the water is cooling. The light will remain on while the water is cooling and will turn to be green when it has reached the correct temperature of 50°F. As the water is dispensed, the cold tank will refill and the water will cool. This indicator light will turn to be blue when the water cools.

 


UV Indicator

This light will indicate when the water cooler is sanitizing the water. It automatically operates for twenty (20) minutes every two (2) hours. The UV indicator will work silently, and if the UV indicator is not illuminated, the function is not operating properly.

Empty bottle notice


When the water in the bottle is running out, the heating light and cooling light will flash at the same time. The lights will keep flashing until user opens the door to replace a new filled water bottle. Note: please must close the door tightly everytime after replacing the water bottle.

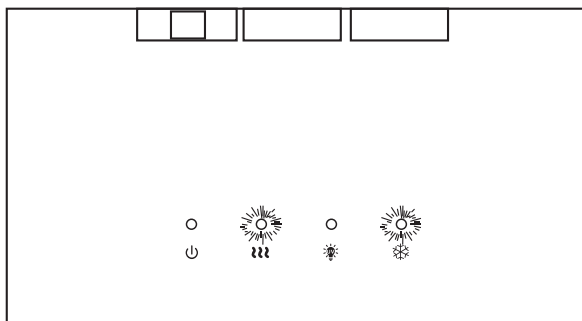


I Installing and removing the drip tray

No external drain is needed, the overflow will collect here.

 
1. To install the drip tray, simply put it down into the area at the top of the door until it snaps into place.

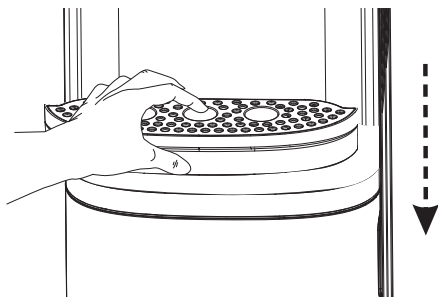

 2. To remove the drip tray, place your fingers in the grid of the drip tray.

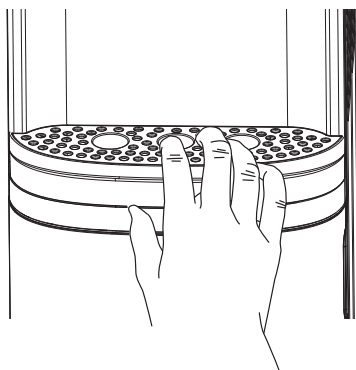

 
3. Gently pull the drip tray upward to remove the drip tray from the door of the cooler to empty the water.

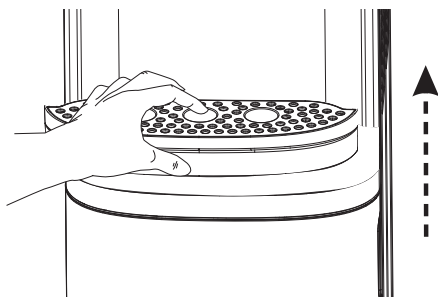

Note: The drip trap is not dishwasher safe.

I Installing the water bottle

 
1. Make sure the lower door is open. Open the lower door by pulling on the right side of the door. Note: the lower door is covered by a thin layer of plastic film used to protect the door during shipment. Please remove the plastic layer prior to first use.
2. Place fresh water bottle outside of the bottle storage area.
3. Clean outside of new bottle with a cloth.
4. Remove the entire plastic cap and paper seal from the top of a brand new water bottle.
5. Bend the water straw. See the pic below.

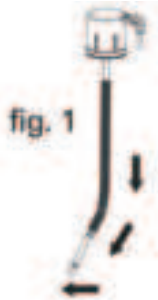

6. Place the water straw into the water bottle, lower the straw to the bottom of the bottle and clasp the bottle cap down onto the neck of the water bottle so that the bottle cap is tightly secured to the bottle.



 7. Make sure the weighted end of the water straw reaches the lowest part of the water bottle. See fig.3 Note: this method is for 3-5 gallon water bottles. Most standard shaped water bottles have a raised center at the very bottom. For maximum efficiency, make sure the water straw reaches the side of the bottle at its lowest point to ensure all of the water can be utilized. See fig.3
8. Slide bottle into the storage area and close the lower door. Make sure that the door is closed tightly.

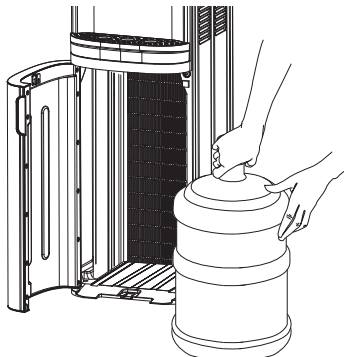

I Installing the water bottle

9. Plug cord into a properly grounded wall outlet. At this time, the pump will begin to move water from the bottle to the hot and cold tanks. It will take up to 5 minutes to fill the tanks for the first time. During this period the pump will run continuously. This is normal. The pump will stop automatically when the tanks are completely filled.

10. When the pump has stopped running and the water tanks are full, turn the hot water and cold switches to the on position. The hot and cold water indicator light will illuminate. Note: allow up to 1 hour for heating and cooling cycles to complete and water to reach the proper hot and cold temperatures. The hot and cold water indicator lights will shut off when each cycle is complete.

 


11. Place a glass under the water cooler spout.

12. For cold water, press downward the button and hold it until the desired amount of water has been dispensed, then release.

13. The hot water button features a child safety lock. To dispenser hot water, push the button forward and depress the hot water push button downward to begin the flow of water. You must hold the child safety lock and push the button at the same time until the desired amount of water has been dispensed and then release. The child safety lock will reset to locked condition automatically once you release the button.

Push the child safety lock forward and then press the button downward at the same time to get the water.

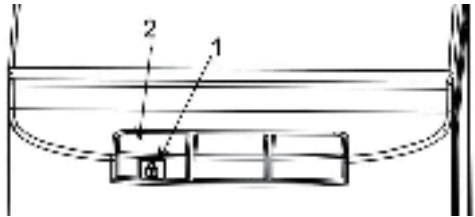

14. For room temperature water, press downward the button and hold it until the desired amount of water has been dispensed, then release.

I Draining&cleaning

 
 
To avoid accident, cut off the power supply before operation according to the following instruction. It is recommended that the unit be cleaned and sanitized manually about every six months to prolong the life time of the machine.

To clean the outside of the unit


1. The machine had been disinfected before shipping from factory. Before using this machine, clean the machine by pushing the hot water button and cold water button, let about 1 liter water flow out.
2. The machine should be cleaned with the citri acid scale remover available from drugstore or markets place according to the instruction manual of the citri acid scale remover, and then clean it with water.
3. Use any neutral & non friction cloth to wash the surface of the machine. The cloth does not come with this unit. It can be purchased separately from a local store.

Draining instruction:

1. Press the switch to off position. Cut off the electric supply.

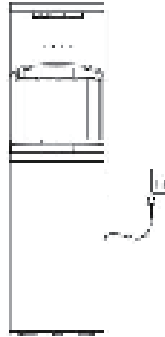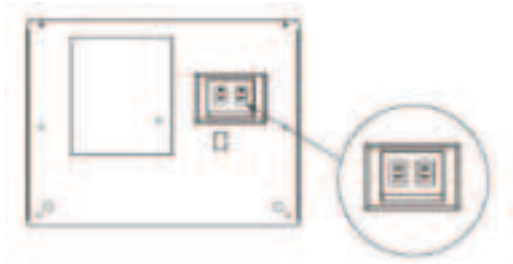

 2. Open the lower door and remove bottle from the water cooler.

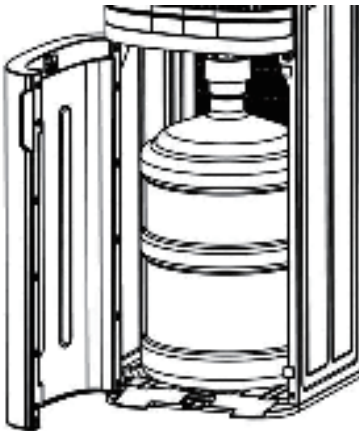


Draining&cleaning

3. Remove the water straw from the water bottle.




 4. Place a container under the drain valve and drain valve plug which are located on the back panel. Remove the drain cover and allow the water to drain out from the water cooler. Let the water flow into the container.

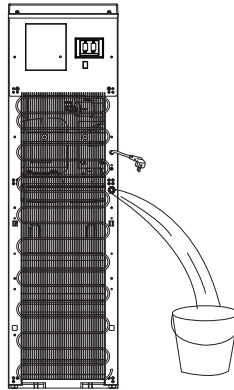

Caution: Because the hot water can reach to approximately 185°F, it can cause severe burns if not handled carefully. Please be cautious while operating and cleaning. Before draining out the water, please wait at least 1 hour to let the water cool down.

 
5. After finish water drain out, Reinstall the drain valve cap and plug.

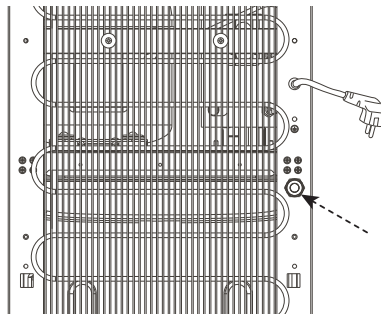


Cleaning instruction

Periodically the water cooler tanks must be sanitized to prevent unpleasant tastes in the water and cleaned to remove mineral deposit that can impair flow.

 1. Unscrew the top cover and take out the cold tank lid.

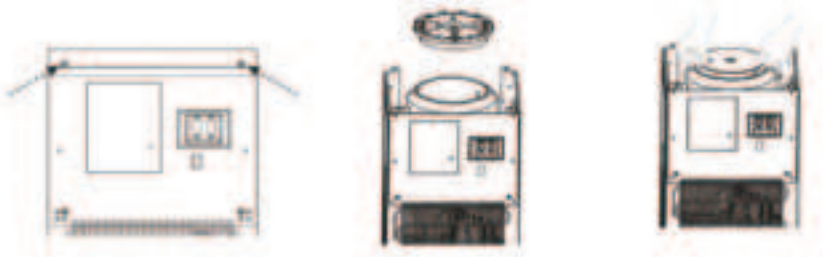

 2. Put the citri acid scale remover into the machine's cold tank and make sure the water can flow out of the water spout.

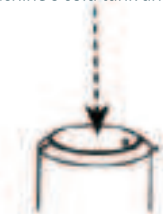

3. Plug in the power cord and turn on the heating switch. Allow the water to heat for 15 minutes.

 


4. Turn off the heating switch and allow the citri acid scale remover to cool down for 20 minutes.



I Cleaning instruction

5. Using a container, drain the remaining cleaning solution from the internal water tanks from the drain valve by removing the drain cap and removing the drain plug. Discard the cleaning solution. Reinstall the drain plug and drain cap on the water cooler. Flush the system using clean water using the same procedure outlined in steps 1 through 4 above. When the rinse water stops flowing replace the drain plug and drain cap and tighten. The cleaning process is now complete.

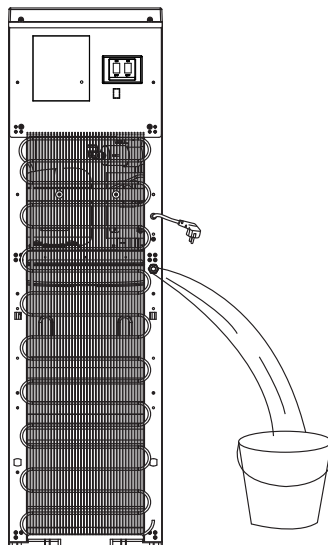

I Troubleshooting

Please check the following before having the machine repaired.

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
No hot or cold water	1. Over consumption of hot or cold water in short time. 2. No power supply.	1. Just wait a moment, and then hot or cold water is available again. 2. Connect plug to socket, turn on heating or cooling switch.
No water running out from taps	1. Empty bottle. 2. Inlet of bottle supporter blocked by bottle seal.	1. Replace it with another bottle. 2. Clean out wasted paper & bottle seal, install bottle again.
Noisy operation	Did not set up the water cooler on the even ground	Place the water cooler on the even and solid ground or surface.

I Warranty and Service

This product is covered by a 12-month product and warranty from the date of initial purchase. In case of any problems, please contact the Customer Service Center via the contact information listed in this User Guide.

Our warranty covers replacement products by repairing or replacing any defective parts and labor necessary to bring it up to its original specifications, and we can provide a replacement product instead of repairing the defective product. Our sole obligation under this warranty is limited to such repair or replacement.

Any claim will require a receipt showing the date of purchase, so please keep all receipts in a safe place. While greatly appreciated, product registrant is not required to activate any warranty and product registration does not eliminate the need for proof of original purchase. The warranty will be voided if repairs are performed by a non-authorized third party and/or if spare parts other than those provided by us are used. These are the general terms of our warranty service, but we always urge our customers to contact us (support@homyd.com) with any questions they may have, regardless of the terms of the warranty.

