



Affordable. Reliable. Home Improvement.

SLEEP THERAPY SOUND MACHINE

MODEL: CS8


Technical Support and E-Warranty Certificate
www.vevor.com/support

VEVOR

Affordable. Reliable. Home Improvement.

SLEEP THERAPY SOUND MACHINE

MODEL: CS8

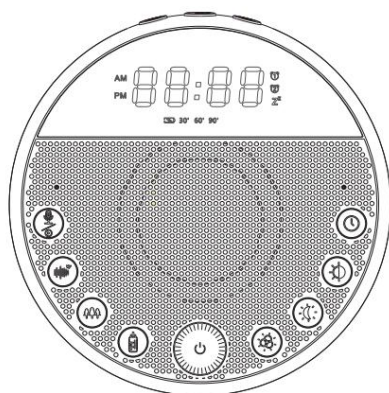

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.



FCC Information

(Contains FCC ID: 2ANDL-CBU, Contains IC: 23243-CBU):

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	BATTERY DISPOSAL To minimize hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent in order to remove the batteries and for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

User Manual

Operating Instructions

1. Long press 1.5s **1** turn on the machine; Press and hold to shut down the machine.
2. Short press button **2 3 4** switch between three scenes, Short press a single scene to switch the six sounds in the current scene.
3. Press and hold the button **5** start recording, Start recording, If you release the button halfway to complete the recording, the previous recording will be automatically deleted when recording again

4. Short press button ⑥ turn on the color lights, Press once to switch one light effect. There are 8 light modes in total.
5. Short press button ⑦ adjust brightness, Press once to switch the brightness, There are 3 levels of brightness adjustment in total
6. Short press button ⑧ timing setting, Short press for 30 minutes, 60 minutes, 90 minutes, and play repeatedly, The timing indicator is off in the continuous cycle state.
7. Short press button ⑬ turn on the warm light and breathing light.
8. Short press button ⑰ 12/24-hour system switching, and am/pm display or not display; Long press to enter the time setting. 8. turn the knob to adjust the clock and minute values
9. Press and hold the button ⑲ 2 seconds: Enter the alarm setting mode, briefly press once to enter the alarm 1 setting, Adjust the clock value through the knob, Briefly press the knob again to adjust the minute value: Continue to briefly press the knob once to select the alarm, and then briefly press the knob again to select the no/off alarm; Alarm clock 2 is set similarly; (Note: there are 4 alarm clocks: 3 built-in and 1 self recording)
10. When the alarm goes off, press ⑱ turn on snooze for 5 minutes, After 5 minutes, you can make trouble again, press briefly again, and sleep for 5 minutes again. You can repeat it for 3 times in total; (Note: if it is not pressed, it will stop automatically after 1 minute of normal sound)
11. When the alarm clock rings, briefly press ⑲ you can turn off the alarm clock 1 or 2 of the day;

Note 1: when the machine is turned on, it will default to the sound and light status before the last shutdown.

Note 2: due to the built-in battery, when the machine crashes and cannot be recovered, insert with a fine needle  Press once.

Timing function

The default is to play repeatedly and press the timing button briefly. It will be:

30 minutes, 30 minutes countdown

60 minutes, 60 minutes countdown

90 minutes, 90 minutes countdown

All the time, the three indicators are not on

After sales and storage

In case of quality problems during the use of the machine, coordinate with the seller to solve them in time

When the machine is not in use, store it in a cool and dry place, which can effectively protect the machine


Package Contents

1* Sound Machine

1* TYPE-C Charging Cable

1* User Manual

Function description

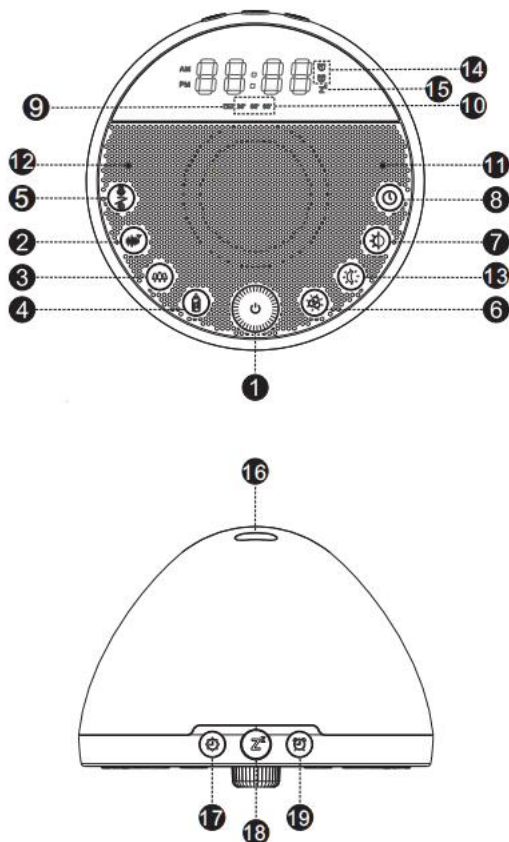

Details:

1. In shutdown state:press once to start the machine;Power on state:long press to shut down;Under startup status:press once to pause; Press play again;(Adjust the volume: clockwise volume: Counterclockwise volume -: Sound effect prompt at maximum.(in the setting state off clock and alarm clock: clockwise digital, counterclockwise digital -;when selecting the alarm sound, rotate to switch the ring tone; Rotate the on/off alarm clock (on means on, off means off)

2. Six white noise tracks

3. Six nature tracks

4. Six infant hypnosis tracks
5. Long press: start recording, and prompt the completion of sound effect after 60 seconds of recording; Release the button halfway to complete the recording.
6. Press once to switch one light mode, a total of eight light modes; Long press: turn off the light effect;
7. 0-three level brightness adjustment
8. Short press: timed for 30 minutes, 60 minutes and 90 minutes. Three indicator lights are not on: play circularly;
9. Light up when charging and off when fully charged
10. Timing status indicator
11. Reset hole: because the product has a built-in battery when the machine crashes and cannot be recovered. Insert a fine needle into the hole and press once.
12. Recording pickup
13. Short press: warm light/ breathing light/ off
14. Alarm clock indication: two alarm clocks can be set. When the alarm clock is set, the icon will light up and display. When the alarm clock rings, it flashes slowly;
15. Snooze instruction: when you are snoozing, flash slowly;
16. Type_C charging port, Dc 5V/1A input
17. Short press: switch the 12/24-hour system, and am/pm displays or does not display; Long press: enter the time setting, turn the knob to adjust the clock and minute value.
18. When the alarm clock rings, briefly press to turn on the snooze for 5 minutes, and then alarm again after 5 minutes. Briefly press the second time to continue snoozing for 5 minutes, which can be repeated for 3 times in total. (if the snooze button is not pressed, the normal sound will stop automatically for 1 minute)
19. When the alarm is ringing, briefly press to turn off the current alarm; Long press for 2 seconds: enter the alarm setting mode, and then short press to confirm the switch. Turn the knob to adjust the time data, select the alarm, and turn on / off the alarm 1 or 2. (4 alarm clocks: 3 built-in and 1 self recording)

Description

Model	CS8
Battery	1200mAh
Input	5V/1A
Timer	30',60',90',Loop playback
Dimension	110*110*80mm
Weight	210g(About)

Listen to the voice of nature

1. Three scenes, six audio for each scene, a total of 18 sleep tracks.
2. The soft music design gives you a relaxed music environment suitable for both adults and children.
3. The audio is designed without breakpoints, so that you can have a better experience without be in a disturbed
4. With sleep night lights: they are color lights / warm light lights / warm light breathing lights,Users can set the brightness according to their own needs, so that it can guard your sleep all the time
5. The white noise with time display and alarm clock can not only display the time, but also send signals according to people's scheduled time.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
----	-----

YH CONSULTING LIMITED. C/O YH Consulting
Limited Office 147, Centurion House, London
Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
----	-----

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.



Technical Support and E-Warranty Certificate
www.vevor.com/support