

DENON

プリセットコード一覧表 / List of Preset Codes / Liste von voreingestellten Codes / Liste des codes pré-réglés / Lista dei codici pre-regolati / Lista de Códigos Pre-ajustados / Lijst van vooringestelde codes / Förteckning över förinställda koder / 預選代碼一覽表 / 预选代码一覽表

CDプレーヤーのセットアップコード
SETUP CODES FOR CD PLAYERS
SETUP-CODES FÜR CD-PLAYER
CODES DE REGLAGE POUR LECTEURS CD
REGOLAZIONE CODICI PER LETTORE CD
AJUSTAR CÓDIGOS PARA LOS REPRODUCTORES DE CD
INSELCODES VOOR CD-SPELERS
INSTÄLLNINGSKODER FÖR CD-SPELARE
鐳射唱盤播放機設置代碼
鐳射唱盤播放机设置代码

A

ADC.....0004
Acoustic Research0048
Adcom0021, 0038
Aiwa0003, 0018, 0023
Akai0022
Alba0058
Alto0059
Arcam0023
Ariston0059
Audio Alchemy0034
Audio Pro0051
Audio Research0023
Audio-Technica0025
AudioTon0023
Audiolab0023
Audiomeca0023

B

BSR0034, 0039
Bestar0024
Burmester0048
Bush0039, 0058

C

CDC.....0048
CEC0027
Cairn0023
California Audio Labs0006, 0043
Cambridge0059
Carrera0034
Carver0023, 0029, 0051
Condor0024
Craig0058
Crown0017
Cyrus0023

D

DAK0039
DBX0040
DKK0001
DMX Electronics0023
Denon0000

Dual0034, 0035
Dynamic Bass0029

E

EEC0034
Eclipse0059
Elektra0046, 0051
Emerson0021, 0024, 0044, 0054

F

Fisher0014, 0027, 0029, 0045

G

GE0002
Garrard0039, 0041, 0046, 0048, 0049
Gemini0059
Genexxa0007, 0024, 0044, 0050
GoldStar0047
Goodmans0039, 0041, 0044, 0058, 0059
Grundig0023

H

HCM0059
Harman/Kardon0023, 0026, 0050
Hiro0059
Hitachi0007, 0021

I

IR0001
Inkel0030, 0035, 0051

J

JVC0012, 0061, 0064

K

Kenwood0005, 0008, 0009, 0033
Kodak0042
Krell0023
Kyocera0004

L

LXI0044
Linn0023
Luxman0015

M

MCS0006, 0010
MTC0048, 0059
Magnavox0023, 0044
Marantz0006, 0023, 0030
Matsui0023
McIntosh0042
Memorex0021, 0024, 0028, 0030, 0044
Meridian0023
Micromega0023
Miro0001
Mission0023
Mitsubishi0022
Myryad0023

N

NAD0001
NEC0010, 0038
NSM0023
Nagaoka0004
Naim0023
Nakamichi0020
Nikko0024, 0025, 0027, 0059

O

Onkyo0016
Optimus0001, 0007, 0009, 0013, 0019,
0028, 0029, 0034, 0035, 0041,
0044, 0045, 0048, 0050, 0051,
0053

P

PMG0024
Panasonic0006, 0043, 0065
Parasound0034, 0048
Philips0023, 0042
Pink Triangle0059
Pioneer0007, 0044, 0053
Polk Audio0023
Poppy0024
Proton0023

Q

QED0023
Quad0023
Quasar0006

R

RCA0002, 0007, 0011, 0021, 0029,
0044, 0053, 0066
Radiotone0058, 0059
Realistic0021, 0024, 0028, 0029, 0030,
0048
Revox0023
Roadstar0052
Rotel0023, 0048
Royal0048

S

SAE0023
STS0004
Sansui0023, 0036, 0044, 0059
Sanyo0013, 0029, 0045
Schneider0058
Scott0021, 0024, 0044
Sears0044
Sharp0009, 0030
Sherwood0030, 0035, 0050
Shure0010
Sonic Frontiers0023
Sony0001, 0056, 0057
Soundesign0019, 0049
SuperTech0059
Synergy0059

T

Tandy0007
Tascam0048
Teac0027, 0030, 0046, 0048, 0058,
0059
Technics0006, 0037, 0043
Thomson0011
Thorens0023

U

Universum0011, 0023, 0051

V

Vector Research0034, 0047
Victor0012

W

Wards0011, 0023
Watson0058

Y

Yamaha0008, 0025, 0032
Yorx0052

Z

Zenith0058

ミニディスクのセットアップコード
SETUP CODES FOR MINIDISC (MD)
SETUP-CODES FÜR MINIDISCS (MD)
CODES DE REGLAGE POUR MINIDISC(MD)
REGOLAZIONE CODICI PER MINIDISCO (MD)
AJUSTAR CÓDIGOS PARA MINIDISCOS(MD)
INSELCODES VOOR MINIDISC(MD)
INSTÄLLNINGSKODER FÖR MD-SPELARE
迷你磁碟播放機設置代碼
迷你磁碟播放机设置代码

B

BSR1000

C

Condor1000

D

Denon1111
Denver1003

J

JVC1015

K

Kenwood1004, 1005, 1012

L

Luxman1009

O

Onkyo1007
Optimus1013
Orion1011

P

Pioneer1013, 1017

S

Schneider1000
Sharp1006
Sherwood1014
Sony1001, 1002

T

Technics1016

U

Universum1018

Y

Yamaha1008

DBSのセットアップコード
SETUP CODES FOR DIGITAL BROADCAST SATELLITE
SETUP-CODES FÜR DIGITALEN SENDESATELLITEN-TUNER
CODES DE REGLAGE POUR TUNER D'ÉMISSION PAR SATELLITE
REGOLAZIONE CODICI PER SINTONIZZATORE VIA SATELLITE PER TRASMISSIONI DIGITALI
AJUSTAR CÓDIGOS PARA SINTONIZADOR DE EMISIONES DIGITALES POR SATÉLITE
INSTELCODES VOOR DIGITALE SATELLIETONTVANGER
INSTÄLLNINGSKODER FÖR SATELLITMOTTAGARE
 衛星設置代碼
 卫星设置代码

A

ABSat	3549
AGS	3528, 3531
ASLF	3533
Akai	3507
Akena	3528
Alba	3516
Allsat	3507
Alltech	3533
Alpha	3528
AlphaStar	3542
Amitronica	3533
Amstrad	3550
Anglo	3533
Ankaro	3533
Armstrong	3510
Asat	3507
Astacom	3528
Astra	3510, 3521
Astro	3506
Athena	3528
Axiel	3528

B

BT	3528, 3531
Bestar	3510
Blaupunkt	3506
Boca	3510
British Sky Broadcasting	3550
Broco	3533
Bubu Sat.....	3533

C

Canal Digital	3551
Canal Satellite	3551
Canal+	3551
Chaparral	3508
CityCom	3501, 3546
Colombia	3528
Columbia	3502
Columbus	3528
Condor	3521
Conrad	3501, 3521
Crown	3510
Cyrus	3507

D

D-box	3536
DNT	3507
Daewoo	3533
Discovery	3531, 3528
Dynasat	3529

E

EP Sat	3516
Echostar	3505, 3513, 3518, 3533, 3543, 3551, 3556, 3560, 3569
Einhell	3510, 3533
Elta	3507
Emme Esse	3529, 3556
Engel	3533

Eurocrypt	3516
Eurosat	3510
Eurosky	3510, 3521
Eurostar	3529, 3564, 3565
Expressvu	3543

F

FTE	3554
Fenner	3528
Ferguson	3532
Finlandia	3516
Finlux	3516
Foxtel	3558
Fracarro	3556
Fuba	3506

G

GE	3519
Galaxis	3512, 3554
Gardiner	3546
General Instrument	3555
Gold Box	3551
Gooding	3520
Goodmans	3516
Gradiente	3559
Granada	3516
Grundig	3506, 3520, 3540, 3550

H

HTS	3543
Helium	3521
Hirschmann	3506, 3568
Hitachi	3516, 3547
Houston	3528
Hughes Network Systems	3539, 3574, 3575
Humax	3554
Huth	3510

I

IR	3506, 3516
ISkyB	3559
InVideo	3556
Indovision	3559
Intertronic	3510
Intervision	3521, 3524

J

JOK	3531
JVC	3520, 3543

K

K-SAT	3533
Kathrein	3506, 3507, 3523, 3527
Kreiselmeyer	3506

L

La Sat	3521
Lenco	3533
Lifesat	3533
Loewe	3510
Lorenzen	3521, 3538

M

Magnavox	3535, 3537
----------------	------------

Manata	3531
Manhattan	3516
Marantz	3507
Maspro	3540
Matsui	3520
Max	3521
MediaSat	3551
Mediamarkt	3510
Medion	3533
Mega	3507
Memorex	3537
Metronic	3510
Metz	3506
Micro	3533
Micro Elektronik	3533
Microtec	3533
Minerva	3520
Mitsubishi	3539
Morgan's	3502, 3510
Multichoice	3526, 3558
Myryad	3507
Mysat	3533

N

Netsat	3559
Neuhaus	3533
Neusat	3533
Next Level	3555
Nikko	3533
Nokia	3516, 3536, 3541, 3557, 3563, 3573
Nordmende	3516

O

Okano	3510, 3528
Orbit	3562
Oxford	3528

P

Pace	3509, 3516, 3517, 3534, 3545, 3550, 3559
Palladium.....	3520
Panasat	3522, 3558
Panasonic	3511, 3530, 3550
Panda	3516
Patriot	3528
Philips	3503, 3507, 3516, 3520, 3531, 3535, 3537, 3539, 3540, 3551, 3567, 3574

Pioneer	3514, 3551
Prima	3545
Profile	3531
Promax	3516
Prosat	3524
Proscan	3515
Pye	3520

Q

Quadral	3524
Quelle	3521

R

RCA	3504, 3515, 3519, 3552
RFT	3507
Radio Shack	3555
Radiola	3507
Roadstar	3533
Rover	3524, 3533

S

SEG	3538
SKR	3533
SKY	3553, 3559
SM Electronic	3533
Saba	3531
Sabre	3516

Sagem.....	3548, 3572
Samsung	3571
Sat Team	3533
Satec	3533
Satline	3524
Schneider	3528
Seemann	3510
Seleco	3556
Siemens	3506
Skantin	3533
Sky Television	3561
Skymaster	3524, 3533
Skymax	3507
Smart	3502
Sony	3525, 3550
Star	3559
Star Choice.....	3555
Strong	3502, 3558
Sumida	3510
Sunsat.....	3533
Sunstar	3510
Super Sat	3529

T

TPS	3548
Tantec	3516
Tatung	3516
Technisat	3570
Technowelt	3521
Teco	3510
Teleka	3510
Telestar	3500
Televés	3516
Televisa	3559
Thomson	3516, 3532, 3551, 3566
Thorn	3516
Tonna	3528
Toshiba	3539, 3544
Triax.....	3501

U

Uniden	3535, 3537
Unisat	3507, 3510
Universum	3506, 3520

V

VTech	3546
Variosat	3506
Ventana	3507
Vestel	3538

W

Wela	3533
Wewa	3516
Wisi	3506, 3516
World Sat	3531

X

XSat.....	3528
Xcom Multimedia	3528

Z

Zehnder	3500, 3546
Zenith	3553
Zeta Technology	3507
Zwergnase	3510

VCRのセットアップコード
SETUP CODES FOR VCR
SETUP-CODES FÜR VIDEOGERÄTE
CODES DE REGLAGE POUR MAGNETOSCOPE
REGOLAZIONE CODICI PER VIDEOREGISTRATORE (VCR)
AJUSTAR CÓDIGOS PARA VCR
INSTELCODES VOOR VIDEORECORDER
INSTÄLLNINGSKODER FÖR VIDEOBANDSPELARE
 録像機設置代碼
 录像机设置代码

A

ASA	3006, 3018
AVP	3034
Adelsound	3002
Admiral	3014, 3026
Adventura	3000
Adyson	3017
Aiko	3030
Aiwa	3000, 3006, 3033, 3034
Akai	3009, 3020, 3031
Akiba	3017
Akura	3017
Alba	3017, 3026, 3030, 3031, 3034
Allstar	3018
America Action	3030
American High	3005
Amstrad	3000, 3030
Anam	3006, 3023, 3028, 3029, 3030
Anam National	3023, 3028, 3036, 3050
Anitech	3017
Ansonic	3002
Aristona	3018
Asha	3029
Asuka	3006
Audiosonic	3030
Audiovox	3006

B

Baird	3000, 3009, 3019
Basic Line	3017, 3030
Beaumark	3029
Bell & Howell	3019
Bestar	3030
Blaupunkt	3023, 3025, 3028
Blue Sky	3030
Bondstec	3017
Brandt	3032
Brandt Electronic	3009
Broksonic	3001, 3021, 3024, 3026, 3033, 3037
Bush	3017, 3026, 3030, 3034

C

CCE	3017, 3030
CGE	3000
Calix	3006
Canon	3005
Carena	3026
Carrefour	3012
Carver	3018
Cathay	3030
Cimline	3017
Cineral	3030
Citizen	3006, 3030
Colt	3017
Combitech	3034
Condor	3030
Craig	3006, 3013, 3017, 3029
Crown	3017, 3030
Curtis Mathes	3005, 3009, 3015, 3023, 3044

Cybernex	3029
Cyrus	3018
D	
Daewoo	3012, 3030, 3043
Dansai	3017
De Graaf	3010
Decca	3000, 3018
Denon	3010
Diamant	3006
Domland	3026
Dual	3009
Dumont	3000, 3018, 3019
Dynatech	3000

E

ESC	3029, 3030
Elbe	3007
Elcatech	3017
Electrohome	3006
Electroponic	3006
Elin	3029
Elsay	3017
Elta	3017, 3030
Emerex	3003
Emerson	3000, 3001, 3006, 3011, 3021, 3024, 3026, 3030, 3037

F

Ferguson	3009, 3032
Fidelity	3000
Finlandia	3018, 3019
Finlux	3000, 3010, 3018, 3019
Firstline	3006, 3011, 3012, 3017, 3026
Fisher	3013, 3019
Flint	3026
Fuji	3004, 3005
Fujitsu	3000
Funai	3000

G

GE	3005, 3014, 3015, 3029, 3044
GEC	3018
Galaxis	3030
Garrard	3000
General Technic	3033
Genexxa	3019
Go Video	3035
GoldHand	3017
GoldStar	3006, 3007, 3027
Goodmans	3000, 3006, 3017, 3030
Gradiente	3000
Graetz	3009, 3019, 3029
Granada	3018, 3019
Grandin	3000, 3006, 3017
Grundig	3017, 3018, 3025, 3028

H

HCM	3017
HI-Q	3013
Hanimex	3034
Hanseatic	3006
Harley Davidson	3000
Harman/Kardon	3007, 3018
Harwood	3017
Hinari	3002, 3017, 3029, 3034
Hisawa	3034
Hischito	3012
Hitachi	3000, 3002, 3009, 3010, 3029
Hornophone	3018
Hughes Network Systems	3010
Hypson	3017

I

IR	3002, 3009, 3010, 3012, 3013, 3017, 3018, 3019, 3020, 3026, 3028, 3029, 3033
ITT	3009, 3019, 3020, 3029
ITV	3006, 3030
Imperial	3000
Ingersol	3002
Inno Hit	3017, 3029
Interfunk	3018
Intervision	3000, 3006, 3026, 3030
Irradio	3017, 3018

J

JVC	3009, 3016
Jensen	3009

K

KEC	3006, 3030
KLH	3017
Kaisui	3017
Kendo	3020, 3026
Kenwood	3007, 3009, 3016
Kimari	3013
Kneissel	3034
Kodak	3005, 3006
Korpel	3017
Kuba Electronic	3013
Kyoto	3017

L

LXI	3006
Lenco	3030
Leyco	3017
Lloyd's	3000
Loewe	3002, 3006, 3018, 3023, 3036, 3050
Logik	3002, 3017, 3029
Luxor	3011, 3014, 3019, 3020

M

M Electronic	3000, 3007
MEI	3005
MGA	3011, 3029
MGN Technology	3029
MTC	3000, 3029
Magnasonic	3030
Magnavox	3000, 3005, 3008, 3018, 3022, 3038
Magnin	3029
Manesth	3012, 3017
Marantz	3005, 3018
Marta	3006
Matsui	3002, 3026, 3033, 3034
Matsushita	3005, 3023, 3036
Medion	3033
Memorex	3000, 3005, 3006, 3008, 3013, 3014, 3019, 3023, 3026, 3029, 3033, 3036, 3037, 3046, 3050, 3052
Memphis	3017
Metz	3006, 3023, 3025, 3036, 3050
Minerva	3025
Minolta	3010
Mitsubishi	3011, 3014, 3016, 3018
Motorola	3005, 3014
Multitech	3000, 3017
Murphy	3000
Myrrad	3018

N

NAD	3019
NAP	3008
NEC	3007, 3009, 3016, 3019
National	3028

Neckermann	3018
Nesco	3017
Nikkai	3017, 3030
Nikko	3006
Noblex	3029
Nokia	3009, 3019, 3020, 3029
Nordmende	3009, 3032

O

Oceanic	3000, 3009
Okano	3031, 3033
Olympus	3005, 3028
Optimus	3006, 3014, 3019, 3023, 3035, 3036, 3047, 3048, 3050, 3052
Orion	3001, 3002, 3021, 3024, 3026, 3033, 3034, 3037
Osaki	3000, 3006, 3017
Otake	3026
Otto Versand	3018

P

Palladium	3006, 3009, 3017
Panasonic	3005, 3023, 3027, 3028, 3036, 3040, 3048, 3050, 3052, 3053
Pathe Cinema	3002, 3011
Pathe Marconi	3009
Penney	3005, 3006, 3007, 3010, 3029
Pentax	3010
Perdio	3000
Philco	3005, 3007, 3026, 3037
Philips	3005, 3018, 3038, 3041, 3049, 3051

Phonola	3018
Pilot	3006
Pioneer	3016, 3018
Polk Audio	3018
Portland	3030
Pro Vision	3030
Profitronic	3029
Proline	3000
Proscan	3015, 3044
Prosonic	3030
Protec	3017
Pulsar	3008
Pye	3018

Q

Quasar	3005, 3023, 3036, 3050
Quelle	3018

R

RCA	3005, 3010, 3014, 3015, 3020, 3022, 3029, 3044
RFT	3017
Radialva	3006, 3014
Radio Shack	3000, 3046
Radiola	3018
Radix	3006
Randex	3006
Realistic	3000, 3005, 3006, 3013, 3014, 3019
ReplayTV	3039, 3040
Rex	3009
Roadstar	3006, 3017, 3029, 3030
Runco	3008

S

SBR	3018
SEG	3029
SEI	3002, 3018
STS	3010
Saba	3009, 3032
Saisho	3002, 3026
Salora	3011, 3020
Samsung	3012, 3029, 3035

Sanky	3008, 3014
Sansui	3000, 3009, 3016, 3026, 3037
Sanwa	3002
Sanyo	3013, 3019, 3029
Saville	3034
Schaub Lorenz	3000, 3009, 3019
Schneider	3000, 3017, 3018
Scott	3011, 3012, 3021, 3024
Sears	3000, 3005, 3006, 3010, 3013, 3019
Seleco	3009
Semp	3012
Sentra	3017
Sharp	3014
Shintom	3017, 3019
Shivaki	3006
Shogun	3029
Shorai	3002
Siemens	3006, 3018, 3019, 3025
Siera	3018
Silva	3006
Singer	3012, 3017
Sinudyne	3002, 3018
Sonneclair	3017
Sontec	3006
Sony	3000, 3003, 3004, 3005, 3042, 3045
Soundwave	3006, 3026
Ssangyong	3017
Stern	3030
Sunkai	3033
Sunstar	3000
Suntronic	3000
Sunwood	3017
Supra	3006
Sylvania	3000, 3005, 3011, 3018
Symphonic	3000
T	
TMK	3029
Taisho	3002, 3026
Tandberg	3030
Tandy	3000, 3019
Tashiko	3000
Tatung	3000, 3009, 3018
Teac	3000, 3009, 3030, 3043
Tec	3017, 3030
Tech Line	3017
Technics	3005, 3023, 3028
Teknika	3000, 3005, 3006
Teleavia	3009
Telefunken	3009, 3032
Teletex	3017
Tenosal	3017
Tensai	3000
Thomas	3000
Thomson	3009, 3015, 3016, 3032
Thorn	3009, 3019
Tivo	3041, 3042
Tokai	3017
Toshiba	3009, 3011, 3012, 3018
Totevision	3006, 3029
U	
Uher	3029
Ultravox	3030
Unitech	3029
Universum	3000, 3006, 3018, 3020, 3025, 3029

V	
Vector	3012
Vector Research	3007
Victor	3009, 3016
Video Concepts	3012
Videosonic	3029
W	
Wards	3000, 3005, 3010, 3013, 3014, 3015, 3017, 3018, 3022, 3029, 3044
Watson	3018
White Westinghouse	3017, 3026, 3030
X	
XR-1000	3000, 3005, 3017
Y	
Yamaha	3007
Yamishi	3017
Yokan	3017
Yoko	3029
Z	
Zenith	3000, 3004, 3008, 3026, 3037

CDRのセットアップコード
SETUP CODES FOR CDR
SETUP-CODES FÜR CDR
CODES DE REGLAGE POUR CDR
REGOLAZIONE CODICI PER CDR
AJUSTAR CÓDIGOS PARA CDR
INSTELCODES VOOR CDR
INSTÄLLNINGSKODER FÖR CDR

D	
Denon	0000, 0001
H	
HHB	0500
K	
Kenwood	0501
M	
Marantz	0501
N	
NAD	0503
P	
Philips	0501
Pioneer	0500, 0502
R	
RCA	0502

ケーブルのセットアップコード
SETUP CODES FOR CABLE
SETUP-CODES FÜR KABEL
CODES DE REGLAGE POUR CABLE
REGOLAZIONE CODICI PER CAVI
AJUSTAR CÓDIGOS PARA CABLE
INSTELCODES VOOR KABEL
INSTÄLLNINGSKODER FÖR KABEL-TV-MOTTAGARE
線纜設置代碼
线缆设置代码

A	
ABC	4001, 4002, 4005, 4006
Alcatel	4028, 4029
Americast	4030
B	
Bell & Howell	4005
Bell South	4030
Birmingham Cable Communications	4012
British Telecom	4001
C	
Cable & Wireless	4034
Cabletime	4018, 4024
D	
Daeryung	4002
F	
Filmnet	4017
France Telecom	4019, 4028, 4029
G	
Galaxi	4002
General Instrument	4020, 4025
GoldStar	4008
H	
Hamlin	4003, 4011
J	
Jerrold	4001, 4004, 4005, 4012, 4020, 4025
M	
MNet	4017
Macab	4026
Memorex	4000
Motorola	4020, 4035
Mr. Zap	4036
N	
Noos	4026
O	
Ono	4034
P	
PVP Stereo Visual Matrix	4001
Pace	4009, 4032, 4034
Panasonic	4000, 4007
Paragon	4000
Philips	4015, 4016
Pioneer	4008, 4023, 4027, 4037
Pulsar	4000
Q	
Quasar	4000
R	
Regal	4011, 4014
Runco	4000
S	
Sagem	4026
Samsung	4008

Scientific Atlanta	4002, 4006, 4013, 4021, 4027, 4037
Sony	4031
Starcom	4001
Supercable	4012
T	
Tele+1	4017
Tocom	4004
Toshiba	4000
U	
United Cable	4001
V	
Videoway	4010
Visionetics	4033
Visiopass	4019
Z	
Zenith	4000, 4022, 4030

テレビのセットアップコード
SETUP CODES FOR TELEVISION
SETUP-CODES FÜR FERNSEHGERÄTE
CODES DE REGLAGE POUR TELEVISION
REGOLAZIONE CODICI PER TELEVISIONE
AJUSTAR CÓDIGOS PARA TELEVISIÓN
INSTEPCODES VOOR TELEVISIE
INSTÄLLNINGSKODER FÖR TV-APPARATER
 電視機設置代碼
 电视机设置代码

A

A-Mark	4501
A.R. Systems	4593
AOC	4501, 4508, 4512, 4519, 4554
AWA	4502
Acura	4502
Admiral	4531, 4545, 4585
Adventura	4516
Adyson	4564
Aiko	4530
Aiwa	4612
Akai	4502, 4512, 4562, 4565, 4596
Akib	4572
Akiba	4514, 4565, 4571, 4572, 4584
Akura	4565, 4569
Alaron	4552, 4563
Alba	4502, 4513, 4514, 4565, 4579, 4607
Allorgan	4572
Allstar	4514
Ambassador	4550
America Action	4553
Amplivision	4564
Ampro	4619
Amstrad	4502, 4514, 4549, 4550, 4579, 4581
Anam	4501, 4502, 4553, 4568
Anam National	4522, 4568, 4605
Anglo	4569
Anitech	4502
Ansonic	4502, 4514, 4578
Arcam	4563, 4564
Archer	4501
Aristona	4514, 4593
Asora	4502
Asuka	4565
Atlantic	4561
AudioTon	4564, 4569
Audiosonic	4514, 4536
Audiovox	4501, 4530, 4553, 4583, 4599
Autovox	4561

B

BPL	4571
BSR	4572
BTC	4565
Baird	4526, 4527, 4557, 4558, 4562, 4564
Basic Line	4502, 4565
Baur	4514, 4590, 4592
Baysonic	4553
Bazin	4564
Beaumark	4551
Beko	4578, 4615
Belcor	4508
Bell & Howell	4505, 4542
Beon	4514
Best	4578
Bestar	4514, 4578, 4580

Binatone	4564
Blaupunkt	4560, 4573, 4574
Blue Sky	4565, 4607
Blue Star	4571
Boots	4564
Bradford	4553
Brandt	4536, 4575
Brinkmann	4512, 4582
Britannia	4563
Brockwood	4508
Broksonic	4501, 4567, 4585
Bush	4502, 4513, 4514, 4565, 4571, 4572, 4576, 4579, 4580, 4607

C

CCE	4514, 4564
CGE	4578, 4582
CS Electronics	4563
CXC	4553
Candle	4512, 4516, 4523, 4555
Canton	4565
Carad	4598
Carena	4514, 4584
Carnivale	4512
Carrefour	4513
Carver	4521, 4548
Cascade	4502
Cathay	4514
Celebrity	4500
Centurion	4514
Cimline	4502
Cineral	4530, 4583
Citizen	4512, 4515, 4516, 4523, 4524, 4530, 4555, 4570
City	4502
Clairtone	4554
Clarivox	4514
Clatronic	4578
Concerto	4523
Condor	4578
Contec	4502, 4513, 4553, 4554, 4563
Continental Edison	4536, 4588
Cosmel	4514
Craig	4553
Crosley	4521
Crown	4502, 4514, 4515, 4553, 4578, 4582
Curtis Mathes	4505, 4512, 4515, 4517, 4518, 4521, 4523, 4524, 4531, 4539, 4542, 4547, 4583, 4586, 4618, 4622, 4626
Cybertron	4565

D

DER	4557, 4558
Daewoo	4502, 4508, 4514, 4515, 4530, 4542, 4580, 4583, 4599, 4600
Dainichi	4565
Dansai	4514
Dayton	4502
Daytron	4508
De Graaf	4562
Decca	4514, 4526
Denko	4569
Denon	4539
Denver	4514
Desmet	4502, 4514
Diamant	4514
Dixi	4502, 4514
Dual	4514, 4564
Dual Tec	4564
Dumont	4506, 4508, 4525
Dwin	4617, 4620

E

ECE	4514
Elbe	4564
Electroband	4500, 4554
Electa	4569
Elin	4514
Elite	4565
Elta	4502
Emerson	4508, 4515, 4542, 4550, 4551, 4552, 4553, 4554, 4567, 4570, 4571, 4585, 4599, 4600
Emperor	4571
Envision	4512
Erres	4504, 4514
Etron	4502
Euromann	4514, 4569
Europa	4514
Europhon	4564
Expert	4561
Exquisit	4514

F

Fenner	4502, 4580
Ferguson	4514, 4527, 4536, 4557, 4558, 4575
Fidelity	4558, 4563
Filsai	4564
Finlandia	4562
Finlux	4514, 4525, 4526, 4552
Firstline	4502, 4563, 4564, 4572, 4607
Fisher	4542, 4544, 4562, 4564, 4578
Flint	4584
Forgestone	4558
Formenti	4514
Fortress	4531
Fraba	4514, 4578
Friac	4502, 4578
Frontech	4545, 4569
Fujitsu	4526, 4552, 4561, 4609
Funai	4549, 4552, 4553, 4569, 4572
Futuretech	4553

G

GBC	4502, 4565, 4580
GE	4510, 4511, 4517, 4518, 4522, 4531, 4538, 4551, 4571, 4583, 4618, 4622, 4626
GEC	4514, 4526, 4564
GPM	4565
Galaxi	4514
Galaxis	4514, 4578
Geloso	4502
General	4555
General Technic	4502
Genexxa	4545, 4565
Gibralter	4506, 4508, 4512
GoldStar	4508, 4512, 4514, 4515, 4523, 4536, 4551, 4564
Gooding	4588
Goodmans	4513, 4514, 4526, 4552, 4564, 4579, 4580, 4600
Gorenje	4578
Gradiente	4520, 4523, 4548
Graetz	4545
Granada	4514, 4526, 4562, 4564
Grandin	4571, 4598
Grundig	4514, 4525, 4560, 4588, 4593, 4595
Grunpy	4552, 4553

H

HCM	4502, 4571, 4581
Halifax	4564
Hallmark	4551
Hampton	4563, 4564
Hanimex	4572
Hanseatic	4514, 4593
Hantarex	4514
Hantor	4514
Harley Davidson	4552
Harman/Kardon	4521
Harvard	4553
Harwood	4502, 4514, 4581
Hema	4502, 4564
Hikona	4565
Hinari	4502, 4513, 4514, 4552, 4565
Hisawa	4571, 4584
Hitachi	4505, 4513, 4523, 4536, 4539, 4541, 4545, 4564, 4594
Hornophone	4514
Huanyu	4563, 4580
Hyper	4502, 4563, 4564
Hypson	4514, 4569, 4571

I

ICE	4564, 4569, 4579
ICeS	4565
IR	4503, 4504, 4513, 4514, 4525, 4526, 4527, 4531, 4534, 4535, 4536, 4545, 4557, 4558, 4559, 4560, 4561, 4563, 4564, 4566, 4572, 4573, 4578, 4580, 4590, 4592, 4593
ITS	4579
ITT	4545
ITV	4514, 4569
Iberia	4514
Imperial	4578, 4582
Indiana	4514
Infinity	4521
Ingelen	4545
Ingersol	4502
Inno Hit	4526
Innova	4514
Inteq	4506
Interbuy	4514, 4569
Interfunk	4514, 4545, 4592
Internal	4514
Intervision	4514, 4564, 4569
Irradio	4565, 4579
Isukai	4565

J

JBL	4521
JCB	4500
JVC	4513, 4520, 4532, 4557, 4579, 4606
Janeil	4516

K

KB Aristocrat	4545
KEC	4553
KTV	4512, 4515, 4553, 4554, 4564, 4570
Kaisui	4502, 4563, 4564, 4565, 4571
Kamp	4563
Kapsch	4545, 4561
Karcher	4598
Kasui	4571
Kathrein	4593
Kawasho	4563
Kaypani	4519
Kendo	4514

Kennedy4561
Kenwood4508, 4512
Kingsley4563
Kloss4516
Kneissel4514, 4580, 4598
Kolster4514
Konka4602, 4603, 4604, 4613, 4614
Korpel4514
Kosmos4514
Koyoda4502
Kyoshu4581
Kyoto4545

L
LG4523
LXI4517, 4521, 4542, 4543, 4551, 4618
Leyco4514, 4526, 4569, 4572
Liesen & Tter4514
Liesenkotter4514, 4573
Lifetec4514, 4565, 4580
Loewe4592
Logik4505
Luma4561
Lumatron4564
Luxman4523
Luxor4559

M
M Electronic4502, 4514, 4536, 4545, 4564, 4580, 4587
MEI4554
MGA4508, 4512, 4540, 4551
MTC4508, 4512, 4523, 4524, 4554, 4563, 4592
Magnafon4527, 4563
Magnavox4509, 4512, 4513, 4521, 4533, 4552, 4555, 4556, 4624
Magnum4514
Majestic4505
Manesth4564, 4569
Marantz4512, 4514, 4521, 4593
Mark4514
Matsui4502, 4503, 4513, 4514, 4526, 4550, 4562, 4564, 4572, 4576, 4579, 4588
Matsushita4568, 4605
Mediator4504, 4514
Medion4607
Megas4598
Megatron4501, 4539, 4551
Memorex4502, 4505, 4523, 4540, 4542, 4551, 4552, 4568, 4585
Metz4577
Midland4506, 4515, 4517, 4518, 4538, 4618
Minerva4525, 4588
Minoka4581
Minutz4510
Mitsubishi4508, 4513, 4531, 4535, 4540, 4551, 4592
Mivar4563
Monaco4502
Motorola4522, 4531
Multibroadcast4558
Multitech4502, 4553, 4563, 4564
Murphy4515, 4526, 4545, 4563
Myryad4593

N
NAD4543, 4547, 4551
NEC4508, 4512, 4513, 4523, 4548, 4584, 4589
NEI4514
NTC4530
Nakimura4514, 4580
Nakio4587
National4566
Neckermann4514, 4590, 4593
Nesco4552
Netsat4514
Neufunk4514, 4593
New Tech4564
Nicomagic4563
Nikkai4514, 4526, 4563, 4565, 4569
Nikko4512, 4530, 4551
Nobliko4525, 4563
Nokia4587
Nordmende4536
Noshi4507
Novak4504
Novatronic4514

O
Oceanic4545
Okano4502, 4514, 4569, 4578
Omega4569
Onwa4553
Optimus4542, 4547, 4568, 4605
Optonica4531, 4546
Orion4514, 4550, 4552, 4567, 4572, 4576, 4585
Orline4514, 4565
Osaki4526, 4564, 4565, 4569, 4581
Osio4514
Oso4565
Osume4526
Otto Versand4513, 4514, 4564, 4590, 4592, 4593

P
Pael4563
Palladium4578, 4582
Panama4564, 4569
Panasonic4518, 4522, 4537, 4545, 4566, 4568, 4577, 4605
Panavision4514
Pathe Cinema4563
Pausa4502
Penney4501, 4507, 4508, 4510, 4511, 4512, 4515, 4517, 4518, 4523, 4524, 4538, 4543, 4551, 4618, 4626
Perdio4514, 4545
Philco4508, 4509, 4512, 4521, 4533, 4539, 4585
Philips4504, 4514, 4521, 4558, 4580, 4593
Phoenix4563
Phonola4504, 4514
Pilot4508, 4512, 4515
Pioneer4536, 4545, 4547, 4608
Plantron4502
Playsonic4564
Portland4508, 4515, 4530
Precision4564
Prima4569
Princeton4616
Prinz4559
Prism4518
Profex4502

Profi4502
Profitronic4514
Proline4526
Proscan4517, 4618
Prosonic4514
Protech4502, 4514, 4564, 4569, 4582, 4607
Proton4501, 4519, 4551, 4586
Pulsar4506, 4508
Pye4504

Q
Quasar4518, 4522, 4546, 4568, 4605
Quelle4503, 4514, 4525, 4573, 4574, 4590, 4592
Questa4513

R
R-Line4514
RBM4525
RCA4507, 4508, 4517, 4518, 4529, 4531, 4538, 4608, 4618, 4621, 4622, 4623, 4626, 4627
RFT4526
Radialva4514, 4565
Radio Shack4508, 4512, 4515, 4517, 4523, 4542, 4546, 4551, 4553, 4618
Radiola4504, 4514
Radiomarelli4514
Radiotone4502, 4514, 4569
Rank Arena4513
Realistic4508, 4512, 4515, 4523, 4542, 4546, 4551, 4553
Recor4514
Redstar4514
Reflex4514
Revox4514
Rex4545, 4561, 4569
Rhapsody4554, 4563
Roadstar4502, 4565, 4569, 4582
Royal Lux4581
Runco4506, 4512, 4589, 4597

S
SBR4504, 4514, 4558
SEG4513, 4564, 4569, 4607
SEI4550, 4572
SEI-Sinudyne4514
SKY4514
SSS4508, 4553
Saba4536, 4545, 4575
Sagem4598
Saisho4502, 4503, 4550, 4569
Salora4545, 4559
Sampo4512, 4515, 4519
Samsung4502, 4508, 4512, 4514, 4515, 4523, 4524, 4529, 4551, 4564, 4569, 4578, 4593, 4595
Samsux4515
Sandra4563
Sansei4583
Sansui4585
Sanyo4503, 4513, 4526, 4542, 4544, 4562
Schneider4514, 4565, 4579, 4607
Scimitsu4508
Scotch4551
Scotland4545
Scott4508, 4551, 4552, 4553, 4567
Sears4517, 4521, 4523, 4542, 4543, 4544, 4549, 4551, 4552, 4618
Seleco4545, 4561
Semivox4553

Semp4543
Sencora4502
Sentra4565
Serino4598, 4563, 4584
Sharp4513, 4515, 4531, 4546, 4610, 4611
Shintoshi4514
Shogun4508
Shorai4572
Siemens4514, 4560, 4573, 4574
Signature4505
Silva4563
Silver4513
Simpson4555, 4556
Sinudyne4550, 4572
Sky-Worth4514
Solavox4545
Sonitron4562
Sonoko4502, 4514
Sonolor4545, 4562
Sontec4514
Sony4500, 4503, 4513, 4528, 4590, 4605
Sound & Vision4580
Soundesign4551, 4552, 4553, 4555
Soundwave4514, 4582
Spectricon4501
Squareview4549
Ssangyong4502
Standard4502, 4564, 4565
Starlite4553
Stenway4565, 4571
Stern4545, 4561
Strato4514, 4569
Stylandia4564
Sunkai4572, 4576
Sunstar4502, 4514, 4579
Sunwood4514
SuperTech4563
Supra4523
Supre-Macy4516
Supreme4500
Susumu4565
Sylvania4509, 4512, 4521, 4533
Symphonic4549, 4553
Sysline4514
Sytong4563

T
TMK4523, 4550, 4551
TNCi4506
TVTEXT 954593
Tandberg4577
Tandy4515, 4526, 4531, 4545, 4564, 4565
Tashiko4513, 4564
Tatung4501, 4514, 4522, 4526, 4564
Teac4502, 4514, 4569, 4571, 4581, 4582, 4584, 4607
Tec4564
Technics4518, 4568, 4605
Technol Ace4552
Techwood4501, 4518, 4523
Teknika4505, 4508, 4515, 4521, 4523, 4524, 4530, 4540, 4552, 4553, 4555
Telefunken4523, 4534, 4536, 4575, 4601
Telegazi4514
Telemeister4514
Telesonic4514
Telestar4514
Teletech4502

Teleton4513, 4555, 4561, 4564
 Televideo4563
 Temco4572
 Tennessee4514
 Tensai4565, 4572
 Texet4563, 4565
 Thomson4536, 4601, 4627
 Thorn4514, 4526, 4557, 4558, 4590,
 4592
 Tokai4502, 4514, 4545
 Tomashi4571
 Toshiba4513, 4524, 4525, 4542, 4543,
 4591, 4625
 Tosonic4554
 Totevision4515
 Trans Continens4564
 Tristar4558, 4565
 Triumph4550
 Tsoschi4571
U
 Uher4561
 Ultravox4514, 4563
 Unic Line4514
 United4514
 Universal4511
 Universum4514, 4569, 4578
 Univox4514, 4545
V
 Vector Research4512
 Vestel4514
 Victor4513, 4520, 4568, 4605
 Videologic4565, 4563
 Videotechnic4564
 Vidikron4521
 Vidtech4508, 4513, 4551
 Viking4516
 Vision4564
 Vistar4561
 Voxson4545
W
 Waltham4564
 Wards4505, 4508, 4509, 4510, 4511,
 4512, 4521, 4523, 4528, 4533,
 4546, 4551, 4552
 Watson4514
 Watt Radio4563
 Wega4513
 Wegavox4502
 White Westinghouse4514, 4563, 4585, 4599, 4600
 Windstar4571
X
 Xrypton4514
Y
 Yamaha4508, 4512
 Yamishi4564, 4571, 4584
 Yokan4514
 Yoko4514, 4564, 4569
Z
 Zanussi4561
 Zenith4505, 4506, 4530, 4585, 4600
 Zonda4501

レーザーディスクのセットアップコード
SETUP CODES FOR LASER DISC
SETUP-CODES FÜR LASER-DISCS
CODES DE REGLAGE POUR DISQUE LASER
REGOLAZIONE CODICI PER DISCHI LASER
AJUSTAR CÓDIGOS PARA DISCOS LÁSER
INSTELCODES VOOR LASERDISC
INSTÄLLNINGSKODER FÖR LASER DISC-SPELARE
 鐳射影碟播放機設置代碼
 鐳射影碟播放机設置代码

A
 Aiwa2507
C
 Carver2502, 2505, 2510
 Cyrus2511
D
 Denon1111, 1112, 1113
 Disco Vision2500
F
 Funai2507
G
 GoldStar2503
H
 Harman/Kardon2505
 Hitachi2500
M
 Magnavox2505, 2509
 Marantz2502, 2505
 Mitsubishi2501
N
 NAD2501
O
 Optimus2501
P
 Panasonic2508
 Philips2502, 2505, 2511
 Pioneer2500, 2501
 Polk Audio2505
Q
 Quasar2508
R
 Radiola2511
 Realistic2507
 Renaissance2510
S
 Salora2502
 Samsung2510
 Sega2500
 Sony2504, 2506
T
 Technics2508
 Telefunken2501
 Theta Digital2505
Y
 Yamaha2509

DVDのセットアップコード
SETUP CODES FOR DVD
SETUP-CODES FÜR DVD
CODES DE REGLAGE POUR DVD
REGOLAZIONE CODICI PER DVD
AJUSTAR CÓDIGOS PARA DVD
INSTELCODES VOOR DVD
INSTÄLLNINGSKODER FÖR DVD
 數碼視頻影碟播放機設置代碼
 数码视频影碟播放机设置代码

A
 Afreey2039
 Aiwa2022
 Akai2015
 Apex2028, 2049
B
 Bush2035
D
 Denon0000, 0001
E
 Emerson2014
F
 Fisher2027
G
 GE2003
 Go Video2044
 Gradiente2023
H
 Harman/Kardon2013, 2041
 Hitachi2012, 2025
 Hiteker2028
J
 JMB2037
 JVC2010, 2017
K
 Kenwood2000, 2006, 2032, 2048
 Konka2043, 2045, 2046, 2047
L
 LG2014
 Lecson2038
M
 Magnavox2001, 2030
 Marantz2007
 Microsoft2003
 Mitsubishi2002
N
 NAD2036
O
 Onkyo2001, 2016, 2018
 Optimus2011
 Oritron2023
P
 Panasonic2000, 2020, 2031
 Philco2035
 Philips2001, 2007
 Pioneer2004, 2011, 2020
 Princeton2029
 Proline2024
 Proscan2003

R
 RCA2003, 2011, 2042
 REC2034
 Realmagic2029
 Roadstar2034
S
 SM Electronic2035
 Sampo2039
 Samsung2012
 Sanyo2027
 Sharp2019
 Sherwood2021
 Sony2005
T
 Teac2011
 Technics2000
 Techwood2036
 Theta Digital2011
 Thomson2003, 2009
 Toshiba2001
U
 Universum2014
W
 Wesder2040
 Wharfedale2033, 2038
Y
 Yamaha2000, 2008
 Yamakawa2026
Z
 Zenith2001, 2014

カセットプレーヤーのセットアップコード
SETUP CODES FOR CASSETTE PLAYERS
SETUP-CODES FÜR CASSETTEN-PLAYER
CODES DE REGLAGE POUR LECTEURS DE CASSETTE
REGOLAZIONE CODICI PER RIPRODUTTORE A CASSETTE
AJUSTAR CÓDIGOS PARA REPRODUCTORES DE CASSETTE
INSTELCODES VOOR CASSETTESPELERS
INSTÄLLNINGSKODER FÖR KASSETTBANDSPELARE
卡式錄音座設置代碼
卡式录音座设置代码

A	
Aiwa	1502, 1516, 1517
Akai	1525, 1529
Arcam	1506
C	
Carver	1502
D	
Denon	0000
F	
Fisher	1505
G	
Garrard	1527, 1529
Grundig	1502
H	
Harman/Kardon	1502, 1514
I	
Inkel.....	1503, 1504, 1528
J	
JVC	1521, 1522, 1523
K	
Kenwood	1503, 1504
M	
Magnavox	1502
Marantz	1500, 1502
Memorex	1509, 1510
Mitsubishi	1525, 1529
Myryad	1502
O	
Onkyo	1511, 1512, 1524
Optimus	1501, 1518, 1528, 1529
P	
Panasonic	1519
Philips	1502
Phonotrend	1528
Pioneer	1501, 1509, 1510, 1518
Polk Audio	1502
R	
RCA.....	1501, 1518
Revox	1502, 1515
S	
Sansui	1500, 1502
Sanyo	1505
Sherwood	1528
Sony	1513, 1520, 1526
T	
Tae Kwang	1529
Teac.....	1525, 1527
Technics	1519
Thorens	1502
V	
Victor	1521, 1522, 1523

W	
Wards	1501
Y	
Yamaha	1507, 1508