

OPERATION

ARMING THE S080K

Set the function switch to "ALARM" position. When a protected door or window is opened, the alarm will sound immediately and continuously until disarmed.

DISARMING THE S080K

Set the function switch to the "OFF" position to disarm the unit.

CAUTION

THE MAGNETIC SENSOR ALARM IS EXTREMELY LOUD. FOR YOUR SAFETY, NEVER PLACE THE UNIT CLOSE TO YOUR EARS. TO TEST THE ALARM, DIRECT THE UNIT AWAY FROM YOU AT ARM'S LENGTH AND ACTIVATE.

Customer Service :
1-888-8TECHKO (1-888-883-2456)
Website: www.techkomaid.com

 
Mfg. By **TECHKO**[®]
9767 Research Drive
Irvine, CA 92618-4626
MADE IN CHINA

PATENT PENDING NOTICE
THIS PRODUCT IS PROTECTED UNDER FEDERAL TRADEMARK AND COPYRIGHT LAWS. PREVENTING UNFAIR COMPETITION. NO DUPLICATION OR SIMULATION OF THIS PRODUCT IS PERMITTED EXCEPT BY WRITTEN AUTHORIZATION OF TECHKO, INC.

TECHKO AND THE CONFIGURATION OF THIS PRODUCT ARE TRADEMARKS OF TECHKO INC.
COPYRIGHT 1992 TECHKO INC.
ALL RIGHTS RESERVED
MADE IN CHINA

TECHKO[®]

MIGHTY MINI MAGNETIC SENSOR ALARM MODEL S080K

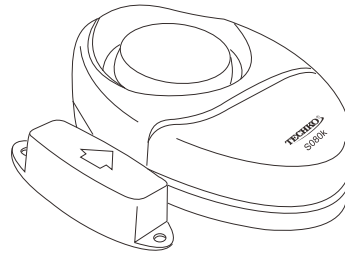

S080K

OPERATION MANUAL

IMPORTANT

Your S080K Mini Magnetic Sensor Alarm can provide valuable protection for your home and property if utilized properly. However, this unit cannot guarantee complete protection against burglary or robbery. Therefore, TECHKO will not be held responsible for loss or damage which may occur.

GENERAL DESCRIPTION

Your S080K Mini Magnetic Sensor Alarm is used to protect your home from unauthorized entry by detecting the opening of a door or window. The S080K is furnished with its own batteries.

ALARM MODE

When the opening of a protected door or window is detected by the sensor, the S080K will sound an alarm immediately.

INSTALLATION

1. Peel double sided tape (included) from the back of the S080K alarm and magnet. Mount the S080K on the door or window. Mount the magnet to the frame of the door or window. (Fig.1) The magnet must be mounted no further than 1/4" from the alarm body - If the unit goes off continuously

when you turn it on, check the distance between the magnet and alarm body. The magnetic sensor must be mounted on the left side of the alarm body. Be sure the arrow on the magnet lines up with the line on the left side of the alarm body.

2. Batteries are installed in the unit already. Please make sure to open the cover and remove the plastic battery tag which may have been installed for battery protection. To replace the batteries, press the cover down and pull it out. Replace with three new AG13 button cell batteries. (Fig.2)

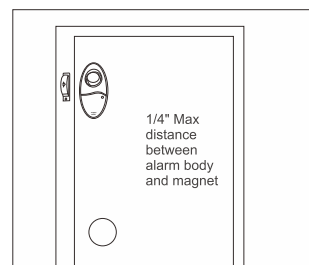 


Fig.1

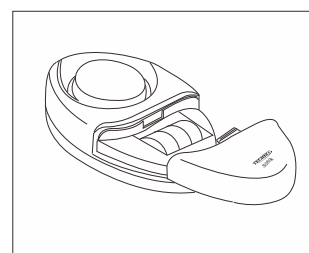 


Fig.2