



Watch this video to find out about configuring ChilliNet areas.

<https://youtu.be/vH8pOu9ChS0>

This option is only available when the dimmer is in ChilliNet mode.

This option allows you to assign each of the dimmer channels to an Area (1 - 10).

Select the *Area Control* option from the top level menu options, and press the **ENT** key to enter the Area Control menu.

The following options are available:

- [Set Chan Area](#)
- [Set All Chans](#)

## Set Channel Area

This option allows you to assign an area to each of the dimmer channels individually.

Select the *Set Chan Area* option from the menu, and press the **ENT** key. The screen shows:

Channel: 1

Area: 1

The cursor is in the *Channel* field. Press the **ENT** key to move between the *Channel* and *Area* fields, and adjust the values using the cursor keys and numeric keypad.

Repeat operation for each channel.

## Set All Channels

This option allows you to assign an area to all the channels on the dimmer in a single operation.

Select the *Set All Chans* option from the menu, and press the **ENT** key. The screen shows:

All Channels

Area: 1

Use the numeric keypad or cursor keys to enter the required area number (1-10) and then press the ENT key.