

Personal Electric 2-Hole Punch

Model # 9401 (110V), 9402 (220V)

Capacity: 12 sheets (80 gsm paper)

Electrical Specifications

100-240 Volts, 60 Hz, 14 Watts

1.5V (AA+) battery x 6 pcs



KU-trio®

HOW TO USE YOUR KU-trio® PERSONAL ELECTRIC 2-HOLE PUNCH

1. Connect the adaptor into the punch and insert the adaptor plug into the nearest, easily-accessible outlet.
2. If Use battery operating, then put LR6 1.5V (AA+) battery x 3 pcs into the battery storage on back of the punch.
3. Adjust the paper guide for suitable paper size use.
4. Insert paper into the opening. Motor will start to work on punching automatically.
5. When punching action finish, please remove the punched paper from the unit to prevent motor damage.
6. If paper stuck in the opening, then please press red "Reverse" button on top to will draw the paper.

MAINTENANCE & SAFETY INSTRUCTIONS

1. To ensure smooth, trouble-free punching, please only use this unit to punch paper (no staples or other hard materials with paper).
2. Empty the receptacle on the base in a regular basis. The punch will not operate properly when full.
3. Always unplug the punch before cleaning or emptying the receptacle.
4. Never submerge your puncher in water, plugged or unplugged.
5. Never pull on the adaptor cord to turn the punch off. Instead, take hold of the adaptor plug and pull it slowly out of the unit.
6. As with all electrical appliances, keep out of the reach of small children.

If you have a problem with the materials or workmanship of this puncher,

we will replace it free of charge which the product is under warranty.

To have your puncher replaced while under warranty, contact your local

distributor for customer service or our e-mail: ps@ku-trio.com. Proof of purchase required.

The warranty does not cover damage to the product resulting from abuse or misuse.