 


# Sound Bar

|                   |    |
|-------------------|----|
| Reference Guide   | EN |
| 參考指南              | CT |
| Panduan Referensi | ID |



©2022 Sony Corporation  
Printed in China  
https://www.sony.net/

|          |                                                  |
|----------|--------------------------------------------------|
| HT-S2000 | Model, 型號: YY2079C                               |
|          | <div> <div></div> <div></div> <div></div> </div> |
| English  | Sound Bar                                        |

Before using the unit, be sure to access the following URL and read the End User License Agreement (EULA). The content of the agreement also applies to speakers (available separately) connected to the unit (unless those speakers have a separate license agreement).

https://rd1.sony.net/help/vs/eI22/h\_zz/

Model: YY2079C

The term "product" in this document refers to the unit or its accessories.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the unit with newspapers, tablecloths, curtains, etc. Do not expose the unit to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquid, such as vases, on the product.

The AC adaptor is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

As the main plug of the AC adaptor is used to disconnect the AC adaptor from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

For Remote Commander  
**CAUTION**  
Risk of explosion if battery is replaced by an incorrect type.  
Dispose of used batteries according to local rules and regulations.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like for a long time.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

The nameplate and important information concerning safety are displayed on the bottom of the following:

- The sound bar
- The AC adaptor

 
This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

The validity of the CE marking is restricted to only those countries/regions where it is legally enforced, mainly in the EEA (European Economic Area) countries/regions and Switzerland.  
The validity of the UKCA marking is restricted to only those countries/regions where it is legally enforced, mainly in the UK.


## Mounting the Bar Speaker on a Wall

- Note**
- Prepare screws (not supplied) that are suitable for the wall material and stability. Depending on the wall material, the wall may be damaged.
  - Fasten the screws securely in the wall beam.
  - Hang the bar speaker horizontally on the reinforced wall.
  - Have the installation done by a Sony dealer or licensed contractor and pay special attention to safety during the installation.
  - Sony shall not be held responsible for accidents or damage caused by improper installation, insecure wall stability, improper screw installation, natural disasters, etc.
  - Two or more persons are required to hang the bar speaker for safety.


- Prepare two screws (not supplied) that are suitable for the wall mount holes on the rear of the bar speaker.

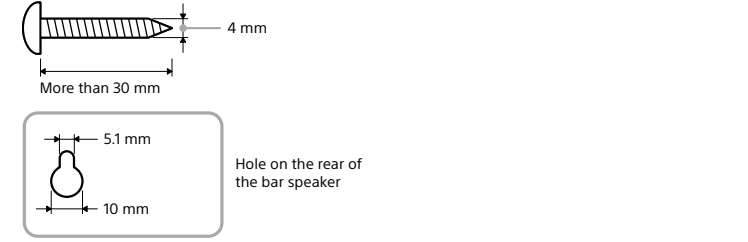

 
- Align the vertical line above the "↑ TV CENTER LINE" printed on the WALL MOUNT TEMPLATE (supplied) with the center of the width of your TV.

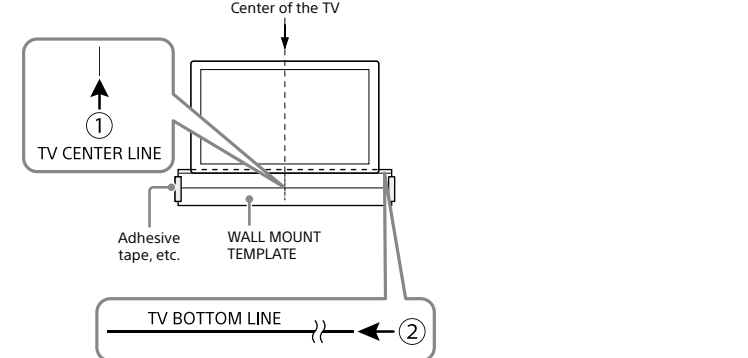

 
- Align the "← TV BOTTOM LINE" printed on the WALL MOUNT TEMPLATE with the bottom of your TV, then adhere the WALL MOUNT TEMPLATE on the wall with a commercially available adhesive tape, etc.
- Fasten the screws prepared in step 1 securely into the screw marks on the "← TV SCREW LINE" printed on the WALL MOUNT TEMPLATE.

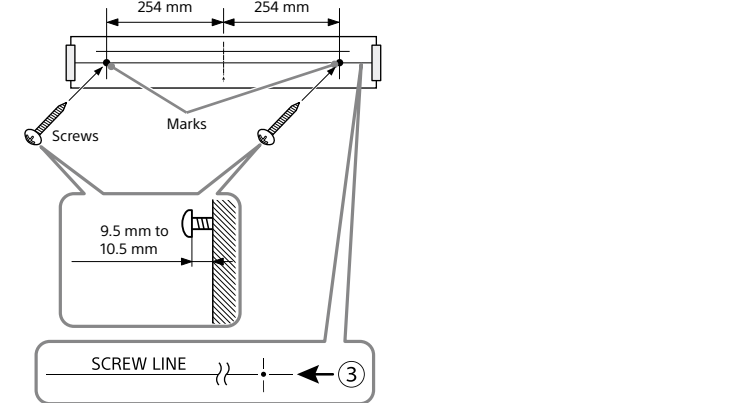

 - Remove the WALL MOUNT TEMPLATE.
- Connect cables to the bar speaker.
  - Connect the HDMI cable (supplied) to the HDMI OUT (TV (eARC/ARC)) jack on the bar speaker.
  - Connect the AC adaptor (supplied) to the DC IN terminal on the bar speaker and then the AC power cord (mains lead) (supplied) to the AC adaptor.

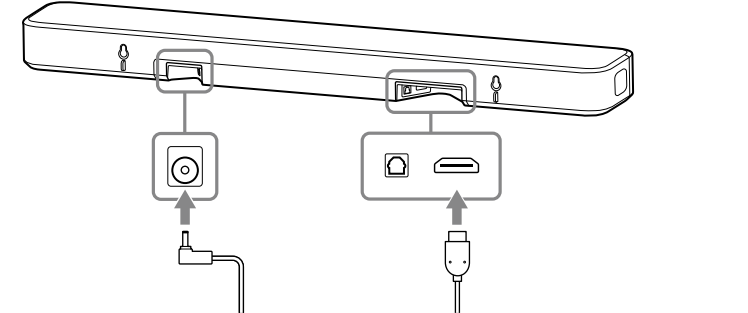

 - Note**
- If your TV is not compatible with eARC or ARC, connect the optical digital cable (not supplied) besides the HDMI cable (supplied).
  - For TV connections, refer to Help Guide.
- Hang the bar speaker on the screws.

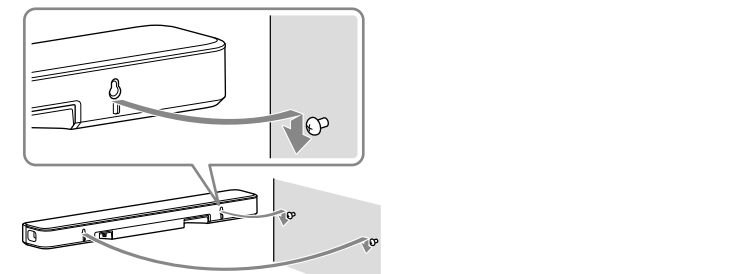

- Note**
- When adhering the WALL MOUNT TEMPLATE on the wall, smooth it out fully.
  - Install the bar speaker apart from the TV by 70 mm or more.
- Connect the HDMI cable (supplied) to the HDMI IN jack on the TV.
  - Connect the AC power cord (mains lead) connected with the bar speaker to the AC outlet (mains).

- Licenses**
- Dolby, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.  
Manufactured under license from Dolby Laboratories. Confidential unpublished works.  
Copyright © 1992-2021 Dolby Laboratories. All rights reserved.
  - For DTS patents, see http://patents.dts.com.  
Manufactured under license from DTS, Inc. DTS, DTS-X, and the DTS-X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2022 DTS, Inc. ALL RIGHTS RESERVED.
  - This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
  - This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.  
https://rd1.sony.net/help/ht/sl/v1/23/
  - The software included in this product contains copyrighted software that is licensed under the GPL/LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL.  
You may obtain the source code as required by the GPL/LGPL on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at the following URL.  
This offer is valid to anyone in receipt of this information.  
https://oss.sony.net/Products/Linux/  
Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.
- Disclaimer regarding services offered by third parties**
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

## Precautions

- Before operating the unit, check that the operating voltage is identical to your local power supply. The operating voltage is indicated on the nameplate on the bottom of the unit.
- The supplied AC adaptor is designed exclusively for this unit. It should not be used in combination with any other devices.
- Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.
- AC power cord (mains lead) must be changed only at a qualified service shop.

### On placement

- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- Do not place the unit near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- The speakers of this unit are not of magnetically shielded type. Do not place magnetic cards on the unit or near it.
- Do not place metal objects other than a TV around the unit. Wireless functions may be unstable.
- Although the unit heats up during operation, this is not a malfunction.
- Place the unit in a location with adequate ventilation to prevent heat buildup and prolong the life of the unit.
- Use caution when placing the unit on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.

### How to care for the unit

- Clean the unit with a soft, dry cloth. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzene.

### On BLUETOOTH® communications

- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident:
  - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.

### Turning the BLUETOOTH and Wireless LAN functions on/off

- Touch and hold -> (Input) and & (BLUETOOTH) on the unit for about 5 seconds to turn off the BLUETOOTH and Wireless LAN functions. [BT POWER] appears on the front panel display and then [OFF] appears.
- Touch and hold -> (Input) and & (BLUETOOTH) on the unit again for about 5 seconds to turn on the BLUETOOTH and Wireless LAN functions. [BT POWER] appears on the front panel display and then [ON] appears.

### Other notes

- Deactivating the [Auto Standby] function will increase the energy consumption of the product.
- When connecting the unit to the Internet, use the router (ADSL, modem or optical line termination device with the router function supplied with the Internet provider, or Wi-Fi access point). If you connect to the Internet without using the router, a security problem may occur. If you are not sure that the wall outlet for the network line has the router function, ask your manager of the apartment house or Internet provider.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

## Trademarks

- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony group Corporation and its subsidiaries is under license.
- The terms HDMI™, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, TM and ® marks are not specified.

## Specifications

### Sound Bar (HT-S2000)

#### Amplifier section

POWER OUTPUT (rated)

Front L + Front R speaker blocks: 37 W + 37 W (at 6 ohms, 1 kHz 1 %THD)

Center speaker blocks: 37 W (at 6 ohms, 1 kHz 1 %THD)

Subwoofer blocks: 37 W + 37 W (at 6 ohms, 100 Hz 1 %THD)

POWER OUTPUT (reference)

Front L/Front R speaker blocks: 50 W (per channel at 6 ohms, 1 kHz)

Center speaker blocks: 50 W (at 6 ohms, 1 kHz)

Subwoofer blocks: 50 W (per channel at 6 ohms, 100 Hz)

#### HDMI Section

Connector

Type A (19pin)

#### USB section (For service use only)

For SERVICE port

Type A (For connecting USB memory)

#### Wireless LAN section

Communication system

IEEE 802.11 a/b/g/n/ac

Frequency band

2.4 GHz, 5 GHz

#### BLUETOOTH section

Communication system

BLUETOOTH Specification version 5.2

Frequency band

2.4 GHz band (2 400 0 GHz - 2 483 5 GHz)

#### General

Power requirements

DC 25 V (using the supplied AC adaptor connected to AC 100 V - 240 V, 50 Hz/60 Hz power supply)

Power consumption

On: 42.0 W

[Network/Bluetooth Standby] is set to ON: Less than 2.0 W

[Network/Bluetooth Standby] is set to OFF: Less than 0.5 W

Dimensions\* (approx.) [w/h/d]

800 mm × 64 mm × 124 mm

\* Not including projection portion

Mass (approx.)

3.7 kg

### Wireless Transmitter/Receiver Section

Communication system

Wireless Sound Specification version 4.0

Frequency band

5 GHz

## Included Items

- Sound Bar (1)
- Remote control (1)
- ROS (size AAA) battery (2)
- WALL MOUNT TEMPLATE (1)
- HDMI cable (supports the specification equal to High Speed HDMI Cable with Ethernet) (1)
- AC adaptor (1), AC power cord (mains lead) (1)
- Reference Guide (This manual)

Design and specifications are subject to change without notice.

| 繁體中文 | 主動式揚聲器 |
|------|--------|
|------|--------|

使用本裝置之前，請務必連接下列URL，並閱讀產品使用者授權協議（EULA）。該協議的內容也適用於連接到此裝置的揚聲器。（另售）（揚聲器具有獨立的授權協議為例外。）

https://rd1.sony.net/help/vs/eI22/h\_zz/

型號: YY2079C

本文件中的用語“產品”是指裝置或其配件。

請勿將本產品安裝於密閉的空間內，例如書架或內建的櫥櫃內。

為減少起火之危險，請勿用報紙、桌布、窗簾等遮蔽本裝置的通風口。請勿將本裝置置於明火（例如，點燃的蠟燭）。

為減少火災或電擊的危險，請勿將本產品放置於滴水或洩水之處，也請勿在本產品上放置裝有液體的物品，例如杯底。

只要將AC變壓器連接到牆壁插座，即使處於關閉狀態，也不會斷開本裝置與AC主電源的连接。

由於AC變壓器的主端調用於斷開AC變壓器與主電源的连接，請將其連接到容易接觸到的AC插座。如果發現其正在異常，請立即斷開AC插座的連接。

應用於遙控器

注意

如果電池更換類型不正確，會有爆炸的危險。請按照當地法規或規則廢棄舊電池。

請勿將電池（電池組或已安裝的電池）長時間暴露於過熱的環境，例如陽光、火源等等。

本產品（含配件）有磁石，可能干擾心臟律調節器、用於腦积水治療的可調式引流管或其他醫療器材。請勿將本產品放在此類醫療器材使用者的附近。如果使用任何此類醫療器材，請在使用本產品前諮詢您的醫生。

銘牌和有關安全的重要資訊位於下列裝置的底部：

- 主動式揚聲器
- AC變壓器

經測試，本裝置符合EMC規定中使用≤3 m以下連接線的限制。

CE標誌的有效性僅限於其獲得合法執行的國家/地區，主要是EEA（歐洲經濟區）國家/地區和瑞士。UKCA標誌的有效性僅限於其獲得合法執行的國家/地區，主要是英國。

### 對於台灣客戶

取得輸輸證明之低功率射頻器材，非經核准，公、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規訂作業之無線電通信。低功率射頻器材須符合電信法規或工業、科學及醫用電磁相容性電磁干擾之干擾。

應避免影響附近電路系統之操作。高電磁指向性天線只得應用於固定式點對點系統。

## 僅適用於台灣



## 廢電池請回收

委託廠商: Sony Corporation  
進口商: 台灣索尼股份有限公司  
地址: 台北市中山北路二段42號5樓  
投訴專線: 4499111（手機撥號請加02）

| 單元                   | 設備名稱：主動式揚聲器，型號（型式）：YY2079C | 限用物質及其化學符號                                   |
|----------------------|----------------------------|----------------------------------------------|
|                      |                            | 鉛（Pb）汞（Hg）鎳（Ni）六價鉻（Cr+6）多溴聯苯（PBB）多溴二苯醚（PBDE） |
| 電路板                  | —                          | ○ ○ ○ ○ ○ ○                                  |
| 外殼                   | —                          | ○ ○ ○ ○ ○ ○                                  |
| 揚聲器                  | —                          | ○ ○ ○ ○ ○ ○                                  |
| 配件（遙控器、AC電源供應器、電源線等） | —                          | ○ ○ ○ ○ ○ ○                                  |

備註：○：指該設備限用物質之百分比含量未超出百分比含量基準值。

備註2：—：指該設備限用物質為排除項目。

警語：觸電危險，請勿拆解

 
## 在牆壁上安裝主動式揚聲器

### 註


準備適合牆壁材料和穩定性的螺絲（無附帶）。根據壁材料而定，可能會損壞牆壁。

- 將螺絲端部固定於牆柱上。
- 將主動式揚聲器水平掛在牆面的牆壁上。
- 將DTS經銷商或授權承包商完成安裝，並在安裝期間特別注意安全事宜。
- 防火安全組裝，應避免鉚接，螺絲安裝錯誤或自然災害等引起的事故或損壞，Sony概不負責。
- 出於安全需要，懸掛主動式揚聲器必須至少兩人。


- 準備兩個適合主動式揚聲器背面壁掛孔的螺絲（無附帶）。

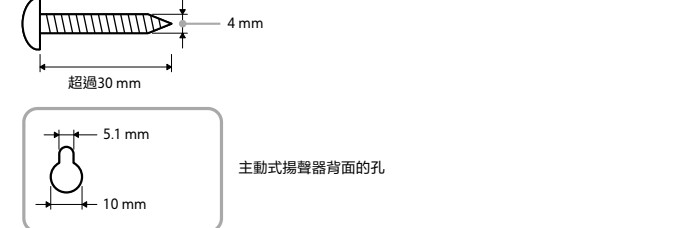

 
- 將壁掛式安裝模板（附帶）上印有的“↑ 電視機中心線”上的垂直線對準電視機寬度的中間。

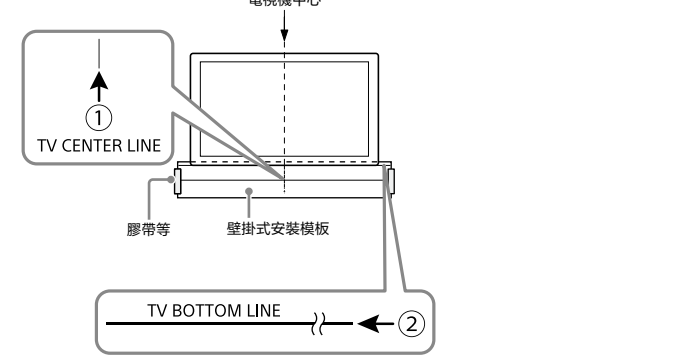

 - 將壁掛式安裝模板上印有的“↑ 電視機底部線”對準電視機底部，隨後用市售的膠帶等將壁掛式安裝模板黏貼在牆壁上。
- 將步驟1中做好的螺絲半固定在壁掛式安裝模板上印有的“← 螺絲線”上的螺絲標記處。

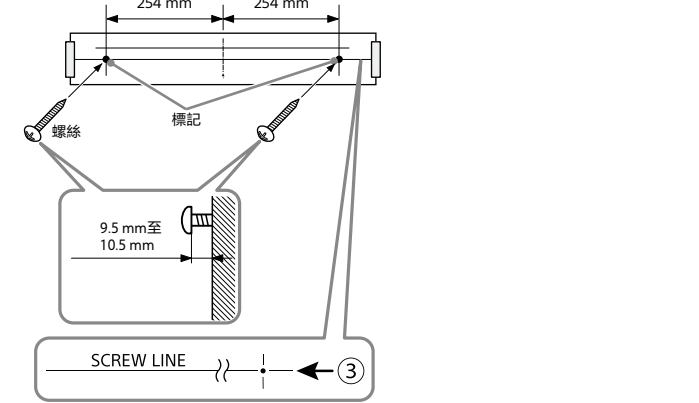


 - 取下壁掛式安裝模板。
- 將螺絲接線連接到主動式揚聲器。
  - 將HDMI連接線（附帶）連接到主動式揚聲器上的HDMI OUT（TV（eARC/ARC））插孔。
  - 將AC變壓器（附帶）連接到主動式揚聲器上的DC IN插孔，然後將交流電源線（附帶）連接到AC變壓器上。

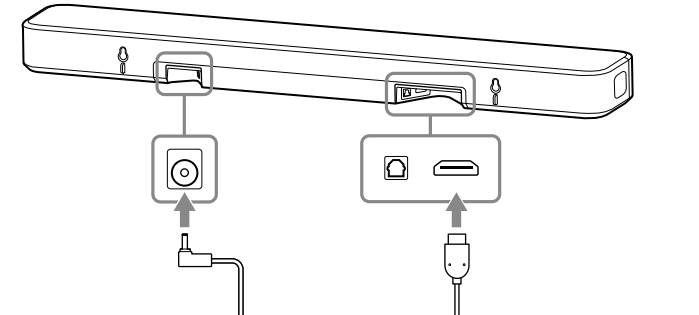

- 如果電視機與eARC或ARC不相容，除了HDMI連接線（附帶）以外，請連接數位音軌線（無附帶）。有關電視連接的詳細，請參閱說明指南。

 - 將主動式揚聲器背面上的孔對準螺絲線，然後將主動式揚聲器掛在兩個螺絲線上。

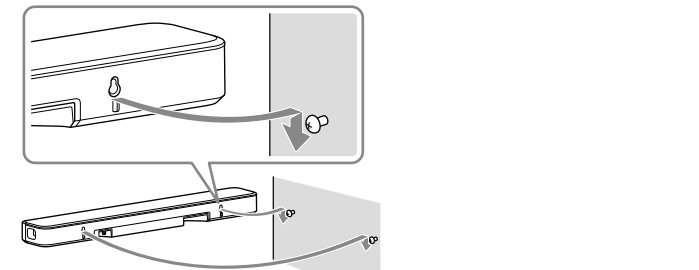

- 將壁掛式安裝模板黏貼在牆上時，將它完全撫平。
- 將主動式揚聲器安裝在離電視機至少70 mm的地方。

- 將HDMI連接線（附帶）連接到電視機上的HDMI IN插孔。

- 將連接主動式揚聲器的交流電源線連接到交流電源插座。

### 關授權

- Dolby, Dolby Atmos, Dolby Audio 和 D 符號是 Dolby Laboratories Licensing Corporation 的商標。Dolby Laboratories 授權製造、機密的未發佈作品。
- 著作權所有 © 1992–2021 Dolby Laboratories。保留所有權利。
- 關於DTS專利，請參閱http://patents.dts.com。
- 依據DTS, Inc.的授權製造，DTS、DTS-X和DTS-X標誌是DTS, Inc.在美國和其他國家的註冊商標或商標。© 2022 DTS, Inc. 保留所有權利。
- 本產品受Microsoft Corporation的某些智慧財產權保護。未經Microsoft或授權Microsoft子公司許可，禁止在本產品外使用或複製任何技術。
- 本產品包含Sony的專利其軟體著作權所有人簽訂的授權合約而使用的軟體。我們依據該軟體著作權所有人的要求，必須向客戶發佈合約的內容。請存取下列URL並閱讀授權內容。  
https://rd1.sony.net/help/ht/sl/v1/23/
- 本產品中所含的軟體含有著作權保護軟體，該軟體得到了GPL/LGPL和其他許可（可能需要存取原始碼）的授權。您可以在以下網址找到GPL/LGPL（和其他許可）所要求的相關原始碼的拷貝。您可以在我們最後一次發貨後的三年內，透過以下網址中的申請表格，從本公司獲得GPL/LGPL要求的實施條件中的詳細資訊。此項內容對收到此資訊的任何人均有效。  
https://oss.sony.net/Products/Linux/
- 請注意，Sony無法回答或回應與原始程序碼相關的任何詢問。

### 關於第三方提供的服務免費聲明

- 第三方所提供的服務可能在未事先告知的情況下變更、暫停或終止。對於此種情況，Sony概不負責。

## 預先注意事項

- 製作本裝置之前，請先確定電壓與當地電壓供應相符。操作電壓如本裝置底部的標示顯示。
- 附帶的AC變壓器專為本裝置而設計。它不應配合任何其他裝置來使用。
- 如果本裝置將長時間不使用，請從交流電源插座完全拔出交流電源線。拔出交流電源線時，務必握住插頭末拔出，應勿拉扯電線。
- 交流電源線必須在合格服務商店更換。

### 關於放置

- 如果有任何固體或液體掉入本裝置，請拔出本裝置的插頭，並在繼續操作前讓合格的技术人員進行檢查。
- 請勿將本裝置置於靠近熱源的地方，或者會受到陽光直射、灰塵過多或機械性撞擊的地方。
- 本裝置的排氣扇並非機械扇，請勿將灰塵或垃圾放在本裝置上或靠近附近。
- 請勿將電視機以外的金屬物體放在本裝置附近。無線功能可能不穩定。
- 本裝置會在操作時發熱，這不是故障。
- 持續觸碰本裝置上的“<（輸入）”和“&（BLUETOOTH）”約5秒鐘，以關閉BLUETOOTH和無線LAN功能。前觸碰面板上顯示[BT POWER]。接著顯示[ON]。

### 其他注意事項

- BLUETOOTH發放的無線電波可能會影響電子醫療裝置的操作。請關閉下列位置的本裝置和其他BLUETOOTH裝置的電源，因為它可能造成危害：
  - 在醫院內、火車上博覽會附近、有惡臭氣體之處、自動門附近，或火警警報器附近。
- 開啟/關閉BLUETOOTH和無線LAN功能
  - 持續觸碰本裝置上的“<（輸入）”和“&（BLUETOOTH）”約5秒鐘，以關閉BLUETOOTH和無線LAN功能。前觸碰面板上顯示[BT POWER]。接著顯示[OFF]。
  - 再次持續觸碰本裝置上的“<（輸入）”和“&（BLUETOOTH）”約5秒鐘，以開啟BLUETOOTH和無線LAN功能。前顯示面板上顯示[BT POWER]。接著顯示[ON]。

### 其他注意事項

- 使用自動檢出功能會增加產品的電力消耗。

- 將本裝置連接到網路網路時，請使用路由器（ADSL數據機，或網路網路提供者所提供具備路由功能的光線網路；或Wi-Fi存取點）。如果沒有使用路由器而連接到網路網路，可能會發生安全問題。如果您不確定網路網路的類型或是否具備路由功能，請詢問公債管理局或網路網路提供者。

- 如果您對本裝置有任何本手冊沒有說明的問題或疑問，請就近與Sony經銷商聯絡。

## 指標

- Windows Media是Microsoft Corporation在美國和/或其他國家的註冊商標或商標。
- BLUETOOTH®字樣與商標為

- Letakkan unit di lokasi yang ventilasinya memadai untuk mencegah penumpukan panas dan memperpanjang masa pakai unit.
- Berhati-hatilah saat menempatkan unit ini di atas permukaan yang diberi perlakuan khusus (dengan lilin, minyak, pernis, dll.), karena permukaannya bisa terkena noda atau berubah warna.

#### Cara merawat unit ini

- Bersihkan unit ini dengan kain lembut dan kering. Jangan gunakan sejenis bantalan kasar, bubuk pembersih, atau pelarut seperti alkohol atau benzena.

#### Tentang komunikasi BLUETOOTH®

- Gelombang mikro yang keluar dari perangkat BLUETOOTH dapat memengaruhi pengoperasian perangkat medis elektronik. Pastikan unit ini dan perangkat BLUETOOTH lainnya di lokasi-lokasi berikut ini karena dapat menyebabkan kecelakaan:
  - di rumah sakit, di dekat tempat duduk prioritas di kereta api, lokasi yang terdapat gas yang mudah terbakar, di dekat pintu otomatis, atau di dekat alarm kebakaran.

#### Mengaktifkan/menonaktifkan fungsi BLUETOOTH dan LAN Nirkabel

- Sentuh dan tahan  (Input) dan  (BLUETOOTH) pada unit selama sekitar 5 detik untuk menonaktifkan fungsi BLUETOOTH dan LAN Nirkabel. [BT POWER] ditampilkan di layar panel depan lalu [OFF] muncul.
- Sentuh dan tahan  (Input) dan  (BLUETOOTH) pada unit lagi selama sekitar 5 detik untuk mengaktifkan fungsi BLUETOOTH dan LAN Nirkabel. [BT POWER] ditampilkan di layar panel depan lalu [ON] muncul.

#### Catatan lain

- Meronaktifkan fungsi [Auto Standby] akan meningkatkan konsumsi energi produk.
- Saat menyambungkan unit ke Internet, gunakan router (model ADSL atau perangkat akhir jalur optik dengan fungsi router yang disertakan oleh penyedia Internet, atau titik akses Wi-Fi). Jika Anda menyambungkan ke Internet tanpa router, bisa terjadi masalah keamanan. Jika Anda tidak yakin bahwa stopkontak untuk saluran jaringan memiliki fungsi router, tanyakan kepada manager apartemen atau penyedia Internet.
- Jika ada pertanyaan atau masalah terkait unit ini yang tidak dibahas di buku panduan, konsultasikan dengan dealer Sony terdekat.

## Merek dagang

- Windows Media merupakan merek dagang terdaftar atau merek dagang Microsoft Corporation di Amerika Serikat dan/atau negara lainnya.
  - Merek kata dan logo BLUETOOTH® adalah merek dagang terdaftar yang dimiliki oleh Bluetooth SIG, Inc. dan penggunaan tanda tersebut oleh Sony Group Corporation serta anak perusahaannya adalah berdasarkan lisensi.
  - Istilah HDMI™, HDMI High-Definition Multimedia Interface, dan logo HDMI adalah merek dagang atau merek dagang terdaftar dari HDMI Licensing Administrator, Inc.
- Semua merek dagang dan merek dagang terdaftar lainnya adalah merek dagang atau merek dagang terdaftar dari pemiliknya masing-masing. Dalam manual ini, tanda TM dan ® tidak ditentukan.

## Spesifikasi

### Alat Pemutar Suara (HT-S2000)

#### Bagian amplifier

OUTPUT DAVA (nominal)  
Blok speaker L Depan + R Depan: 37 W + 37 W (pada 6 ohm, 1 kHz 1 %THD)  
Blok speaker tengah: 37 W (pada 6 ohm, 1 kHz 1 %THD)  
Blok subwoofer: 37 W + 37 W (pada 6 ohm, 100 Hz 1 %THD)

OUTPUT DAVA (referensi)  
Blok speaker L Depan/R Depan: 50 W (per saluran pada 6 ohm, 1 kHz)  
Blok speaker tengah: 50 W (pada 6 ohm, 1 kHz)  
Blok subwoofer: 50 W (per saluran pada 6 ohm, 100 Hz)

#### Bagian HDMI

Konektor

Tipe A (19 pin)

#### Bagian USB (Untuk penggunaan USB saja)

UNTUK port SERVIS

Tipe A (Untuk menyambungkan memori USB)

#### Bagian LAN nirkabel

Sistem komunikasi

IEEE 802.11 a/b/g/n/ac

Pita frekuensi

2,4 GHz - 5 GHz

#### Bagian BLUETOOTH

Sistem komunikasi

Spesifikasi BLUETOOTH versi 5.2

Pita frekuensi

Pita 2,4 GHz (2,400 0 GHz - 2,483 5 GHz)

#### Umum

Ketentuan daya

DC 25 V (dengan adaptor AC yang disertakan yang tersambung ke catu daya AC 100 V - 240 V, 50 Hz/60 Hz)

Konsumsi daya

Menyala: 42,0 W

[Network/Bluetooth Standby] diatur ke ON: Kurang dari 2,0 W

[Network/Bluetooth Standby] diatur ke OFF: Kurang dari 0,5 W

Ukuran\* (sekitar) (l/t/d)

800 mm × 64 mm × 124 mm

\* Tidak menyertakan bagian proyeksi

Berat (sekitar)

3,7 kg

### Bagian Pemancar/Penerima Nirkabel

Sistem komunikasi

Spesifikasi Suara Nirkabel versi 4.0

Pita frekuensi

5 GHz

### Item yang Disertakan

- Alat Pemutar Suara (1)
- Remote control (1)
- Baterai R03 (ukuran AAA) (2)
- TEMPLATE BRACKET PEMASANGAN DINDING (1)
- Kabel HDMI (mendukung spesifikasi yang setara dengan Kabel HDMI Berkecepatan Tinggi dengan Ethernet) (1)
- Adaptor AC (1), kabel daya AC (1)
- Panduan Referensi (Buku panduan ini)

Desain dan spesifikasi dapat berubah tanpa pemberitahuan.

