

WARRANTY


Limited 24-Month Warranty: Subject to the exceptions and exclusions specified below, upon receipt of the product, we will repair or replace (with new or remanufactured components or products), at our discretion, free of charge from the original purchase date.

We offer a one-year warranty for any defective or malfunctioning device. Please refer to the information below if your product requires service.

This warranty excludes routine maintenance components such as accessories (e.g., window squeegee tool, measuring cup, nylon brush) and does not cover damage or malfunction resulting from negligence, abuse, neglect, unauthorized repair, or any other misuse not in accordance with the User's Guide.

For information about repairs or questions regarding your warranty, please contact our Consumer Services.

This warranty provides specific legal rights, and you may have additional rights that vary from state to state. For further details on this warranty or to inquire about coverage, please contact our Consumer Services via email.(support@SteamFusion.net)

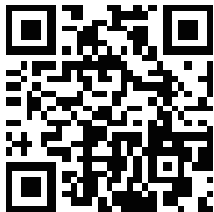

Scan Me

EMAIL: support@SteamFusion.net
PHONE: +1 (808) 400-8893
(Work Time: Monday-Friday
8:00am-5:00pm PST)



IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING THE DEVICE

- » Do not allow the device to be used as a toy.
- » Keep the appliance and its cord out of reach of children.
- » Close attention is necessary when used by or near children.
- » People with physical sensory or mental capabilities or lack of knowledge and experience, must have supervision when using the appliance, and understand the hazards involved.
- » Plastic film and pack-aging may present suffocation risk.
- » Keep the device away from children.
- » Do not use appliance in an enclosed space filled with vapor given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- » Electrical outlet voltage must correspond to that of the appliance. Connecting to incorrect voltage may cause damage to the unit and will void your warranty.
- » High pressure and temp of steam may cause some material to melt, damage, or deform. Please ensure the material can withstand the high temp 230°F (110°C) and pressure.
- » Do not use the device when there is no water.

- » Never point the nozzle to your face or any part of your skin. this can cause scalding and serious injuries.
- » Always turn off this appliance before connecting or disconnecting the nozzle.
- » Never put descaling, aromatic, alcoholic, detergent or vinegar products into the steam cleaner, as this may damage it or make it unsafe for use.
- » When in use, do not flip over the main unit. Use the steamer horizontally, not upside down.
- » To protect against electrical shock do not put steamer body in water or other liquid.
- » Never operate the steam cleaner without water inside the tank.
- » If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- » Do not use with damaged cord or plug.
- » Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- » Do not pull or carry this product by its cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord.
- » Keep the appliance out of reach of children when it is energized or cooling down.

- » Not use the device for space heating.
- » A thermostat within the steam cleaner is used to control the temperature of the appliance and to avoid overheating. If you notice that temperature of the appliance keeps rising continuously, stop using the appliance immediately and unplug it from the electrical outlet.
- » Do not attempt to clean:
 - * Chemical fiber synthetic fibers
 - * Low temperature plastic materials such as nylon, steam sensitive materials
 - * Leather
 - * Wax polished furniture or floor
 - * Porous surfaces
- » Do not attempt to steam the following objects:
 - * Electrical switches
 - * Electrical sockets any electrical appliance
 - * Any other objects with live electrical parts
- » High pressure and temp of steam may cause some material to melt, damage, or deform. Please ensure the material can withstand the high temp 230°F (110°C) and pressure.
- » This product is designed for household use only. Do not use on wet surfaces. Do not handle plug or appliance with wet hands. Do not use the product for any purpose that is not compatible with its application.

SAVE THESE INSTRUCTIONS

PLEASE NOTE

Please do not return this product to Amazon for quality issues. Instead, please contact us by email first. We can offer a full free refund or exchange the unit free of charge if there are any quality issues with the product.

