

INSTRUCTION MANUAL SPEAKER

TECHNICAL DATA

MODEL	VT-6203-2
SKU	6664
INPUT POWER	5V == 1A
OUTPUT POWER	20W
WOOFER	2X3 INCHES
SPEAKER	3Ω 10W
FREQUENT EFFECT	100HZ - 18KHZ
BT VERSION	5.0
S/N	≥80DB
FM RADIO FREQUENCY	87.5-108MHZ
P.M.P.O	150
RECHARGEABLE BATTERY	3.7V 3000MAH
WORKING TIME	PLAYTIME 3-6 HOURS
CHARGING TIME	5-6 HOURS
DIMENSIONS	153.7X143.73X341.5MM
SUPPORTING	USB/TF CARD PLAY
SPEAKER WEIGHT	1480G



INTRODUCTION

Thank you for selecting and buying V-TAC Product. V-TAC will serve you the best. Please read these instructions carefully & keep this user manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.



MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.



FR

Cet appareil,
ses accessoires
et cordons
se recyclent

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



ou

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

PACKAGE INCLUDED

- Speaker (1Pc)
- User Manual (1Pc)
- USB Cable (1Pc)



This marking indicates that this product should not be disposed of with other household wastes.

RADIO-FREQUENCY

- Radio-frequency power transmitted : --2dBm
- Radio frequency band : 2.4GHz to 2.4835GHz

CHARGING INDICATOR

Connect the charging cable to the DC: 5V == 1A adapter, plug it into the charging port after the machine is turned off; red light will be on when charging, red light will be off when it is fully charged. The time of full charge is about 6 hours.

ATTENTION

1. To maintain battery life, please charge the battery every time the power is completely depleted. Damage may occur if the battery is not charged for longer periods, so please use and charge the battery at regular intervals.
2. Our company reserves the right to update the product without any notice.
3. If you have any issue with the product, kindly contact a professional technician. Do not open the unit yourself.
4. For safety reasons, keep the device away from children.

INSTRUCTIONS

1. This unit uses a rechargeable battery. When the battery power is depleted, please plug the device to an electric socket with the correct input voltage.
2. When the unit is charging, please make sure to switch on the AC/DC option, then safely unplug when finished.
3. On first use, the battery must be charged for 10 to 12 hours.
4. The unit's battery working time lasts up to 3 to 6 hours, depending on the usage.


BLUETOOTH FUNCTION

When you turn on the speaker, Bluetooth function will be activated. Search for the Bluetooth "V-TAC VT-6203-2" on your device and connect

SAFETY INSTRUCTIONS

- Read these instructions carefully.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings.
- Do not use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

PANEL FUNCTION

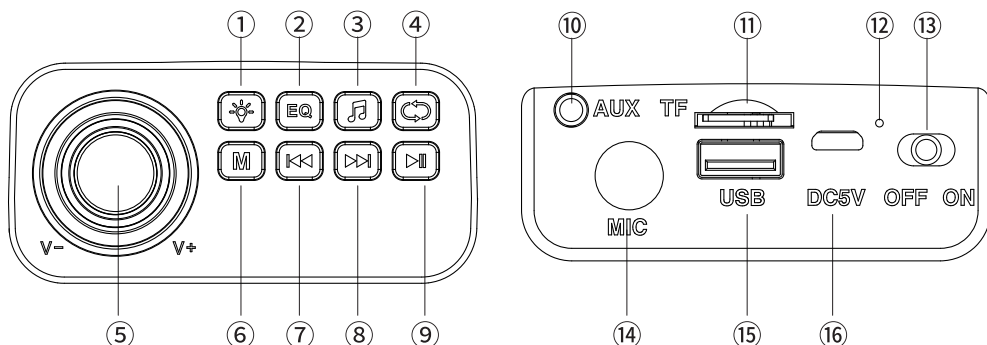

1. (🔥) : Short press, light effect 1/ 2/ 3/ 4/ 5/ turn off horn light / turn off knob light; each short press changes one kind of light effect. Among them, lamp effect 3 is the changing lamp according to the rhythm of playing music, Aux mode plays music in light effect 3, the light does not change with the music.
2. (EQ) : Short press two kinds of sound effects, EQ0 (default indoor sound effect at power-on); EQ1 (outdoor sound effect).
3. (🎵) : Short press to switch the accompaniment/origin vocals.
4. (🔄) : In music mode, Short press is a single loop (ONE) All loops (ALL)
5. (V-/V+Volume Knob) : Rotate to the left to decrease volume, and
6. to the right to increase volume.
7. (M) :Short press mode conversion: BT mode, TF card, U disk mode, FM mode conversion, long press in FM mode to automatically search for channels.
8. (⏮) : Short press previous song/select previous radio station, long press to rewind.
9. (⏭) : Short press next song/select next radio station, long press to fast forward.
10. (⏸) : Short press play/pause, long press in FM mode to automatically search for channels.
11. (AUX) : Insert AUX line for external power supply.
12. (TF) : Insert TF card to play MP3 music.
13. (Charging Indicator) : Red light will be on when charging, red light will be off when it is fully charged.
14. (ON/OFF) : Power on/off.
15. (MIC) : Insert microphone.
16. (USB) : Insert USB Flash Disk to play MP3 music.
17. (DC 5V) The charging jack can use the dedicated USB Charging cable delivered by this machine to connect to the charger for charging.

RoHS



UK
CA



IMPORTANT NOTES

- This product contains battery type "Secondary" (rechargeable).
- Electrical and electronic equipment that has become waste is known as old equipment/device. Old devices must not be disposed of with other household waste.
- Owners of old devices at the end of its service life must return the device by taking them to the collection points set up by public waste disposal authorities or distributors. This return does not entail any costs for you.
- Owners of old devices have an obligation to remove accessible batteries / rechargeable batteries as well as non-destructively removable lamps from the old device prior to return. This does not apply if old devices are being prepared for reuse with the participation of a public law firm.
- Battery removal warning: The battery contained in this product must be removed only by professional personnel only. The battery must never be removed by the end user, if not removed correctly it could damage the battery which could cause fire.
- Batteries removed from an old electronic device should be disposed of separately. This return of battery does not entail any costs for you and the user is obliged to return the battery.
- Please make sure that this product is not powered on when removing the battery. Fire hazard! Avoid short-circuiting the contacts of a detached battery. Do not incinerate the battery. Please handle the battery with Caution!
- If electrical appliances or batteries are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



- The symbol of "Crossed rubbish bins "indicates that this product should not be disposed of with other household wastes and must be collected separately from unsorted municipal waste at the end of its service life.
- Please use the link below to view the online directory of the collection and return points:<https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen>

We V-TAC Europa Ltd declare that this equipment is in compliance with the essential requirement and other relevant provisions of Directive 2014/53/EU and Directive 2011/65/EU Declaration of conformity can be obtained from the below

<https://www.vtacexports.com/media/ftp-upload/certificates/DOC/EU/VT-6203-2-DOC%20Bluetooth%20Speaker-EN-BG.pdf>

Bulgaria, Plovdiv 4000. 9B, Lyuben Karavelov blvd. VAT Number: BG201233995
manager@v-tac.eu | TEL: +359888712879.