



AND Technologies Co., LTD

Breakout A7608 User Manual



-----*****-----
AND Wireless : <http://www.and-global.com>
OEM PCBA : <http://www.buypcba.com>
Retail Store : <http://www.aliexpress.com/store/605000>
Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
Email : info@and-global.com
Tel : +86-755-28099797



1. Preparation:

Board	BK-A7608
Serial tool	sscom32E.exe


2. Overview

2.1 Module feature

- A7608 is the LTE Cat 4 module which supports wireless communication modes of LTE-TDD/ LTE-FDD/HSPA+/GSM/GPRS/EDGE. It supports maximum 150Mbps downlink rate and 50Mbps uplink rate.
- Suitable for 4G, 3G and 2G networks
- Supports multiple built-in network protocols, supports drivers for main operation systems (USB driver for Windows, Linux and Android etc.) and software function.
- Control Via AT Command, Rich interfaces including UART,USB2.0
- Operation temperature:-40℃ to +85 ℃

-----*****-----
AND Wireless : <http://www.and-global.com>
OEM PCBA : <http://www.buypcba.com>
Retail Store : <http://www.aliexpress.com/store/605000>
Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
Email : info@and-global.com
Tel : +86-755-28099797

2.2 BOARD overview

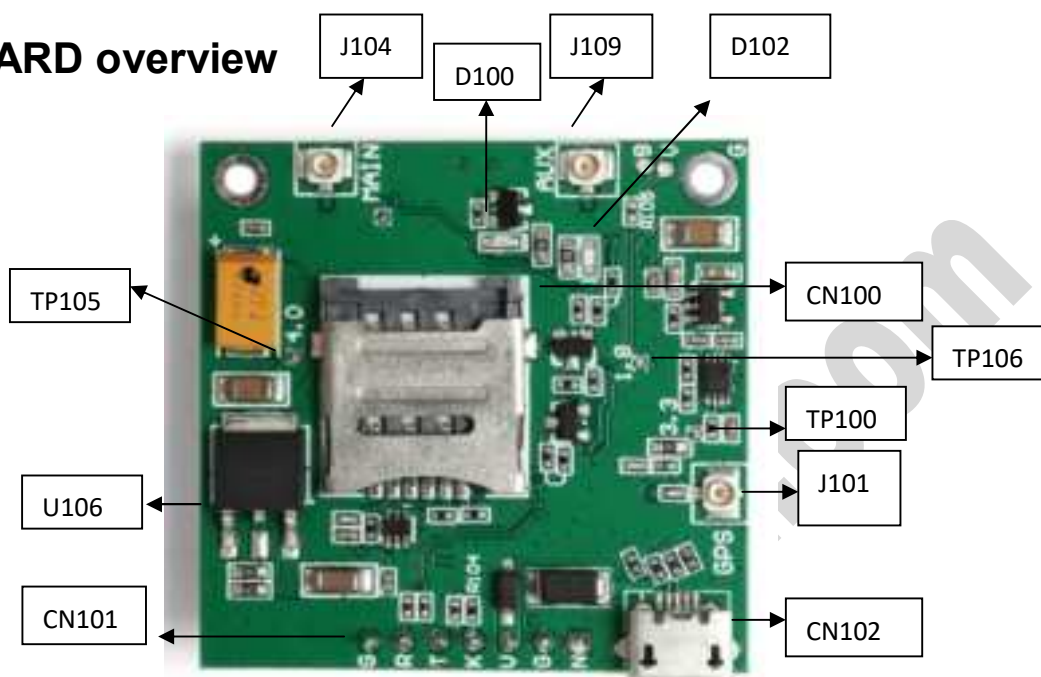


CN100	Micro SIM card socket
CN101	7pin 2.54mm header interface
CN102	Micro USB interface
D102	Power indicator(RED)
D100	NET LIGHT indicator(Green)
U106	The power conversion chip
J109	Auxiliary antenna
J101	GNSS antenna(optional)
J104	LTE antenna
TP105	4.0V
TP100	3.3V
TP106	1.8V

AND Wireless : <http://www.and-global.com>
OEM PCBA : <http://www.buypcba.com>
Retail Store : <http://www.aliexpress.com/store/605000>
Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
Email : info@and-global.com
Tel : +86-755-28099797




2.3 PCBA dimension: 40*40mm

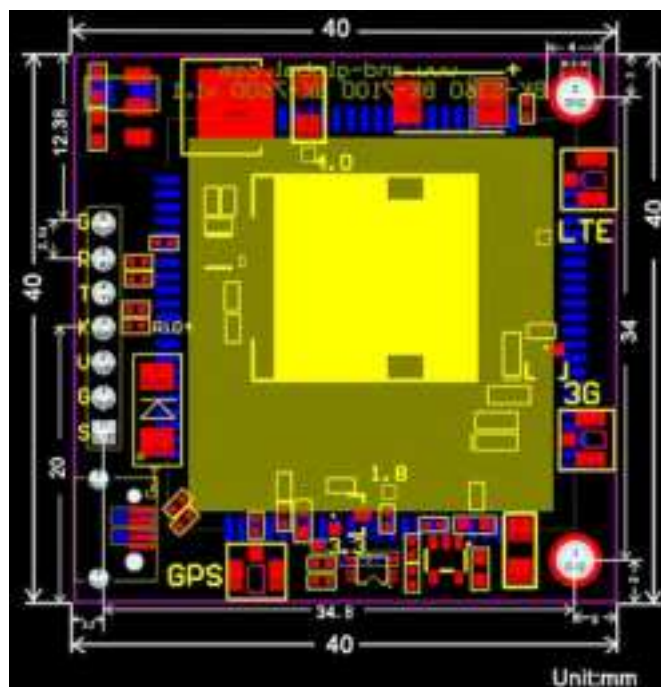

3. Pin definition

-----*****-----
AND Wireless : <http://www.and-global.com>
OEM PCBA : <http://www.buypcba.com>
Retail Store : <http://www.aliexpress.com/store/605000>
Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
Email : info@and-global.com
Tel : +86-755-28099797

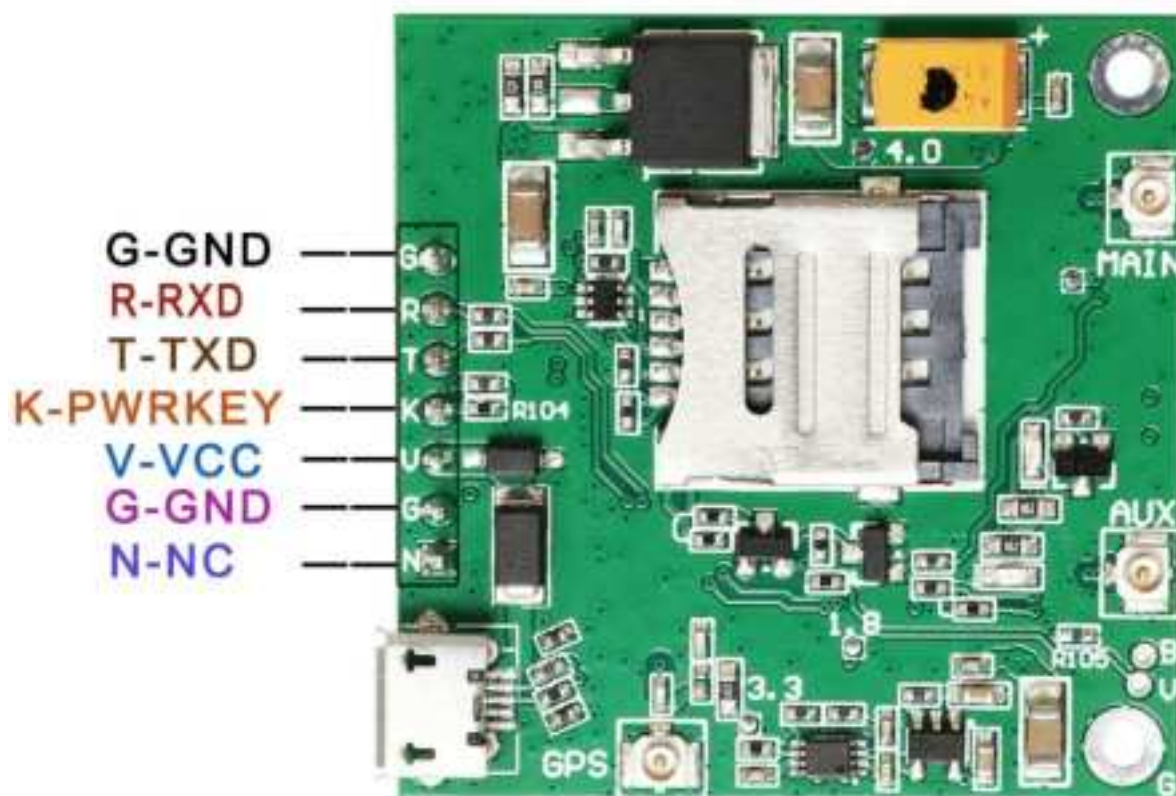

Note: VCC range is from 5.0V to 10V, 5.0V is recommended.

TXD /RXD are 3.3V TTL level which can be directly connected with 3.3V MCU.


3.1 Pin definition of 6pin connector

Pin name	Pin number	Mark on PCB	Description	Comment
NC	0	N	Not connected	
GND	1,6	G	GND	
VCC	2	V	The power supply	5V-10V
PWRKEY	3	K	Power on/off the module	Shorted with GND via R104 by default
TXD	4	T	Output, Transmit Data	TTL Series data Output,3.3V logic level
RXD	5	R	Input, Receive Data	TTL Series data Input,3.3V logic level

-----*****-----

AND Wireless : <http://www.and-global.com>
OEM PCBA : <http://www.buypcba.com>
Retail Store : <http://www.aliexpress.com/store/605000>
Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
Email : info@and-global.com
Tel : +86-755-28099797

3.2 How to use TXD and RXD (Default baud rate is 115200bps)

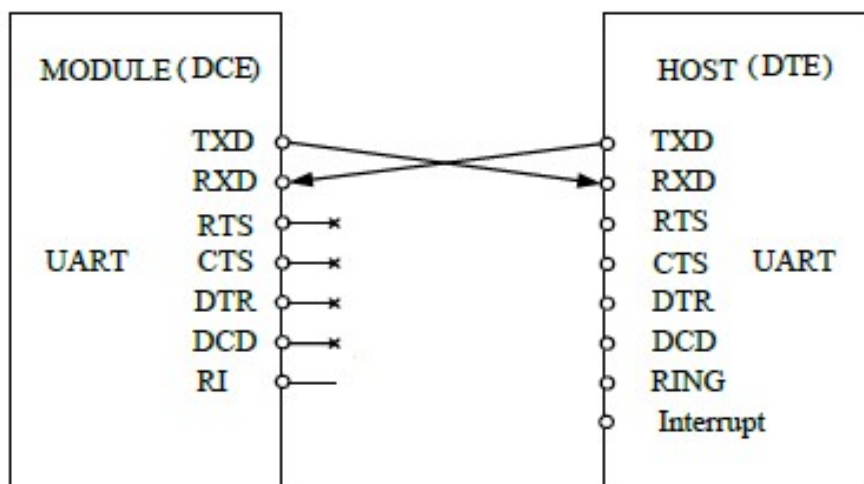

4. How to test the BK-A7608 by AT command via UART

4.1 Installing MAIN antenna , GPS antenna, and sim card for BK-A7608 Board.

4.2 Feed power supply to VCC pin, RED LED indicator will be lighted. (Note: VCC range is from 5.0V to 10V. 5.0V is recommended.)

4.3 GREEN LED indicator, Blinking shows registration successful.

NETLIGHT pin status	Module status
Always On	Searching Network; Call Connect (include VOLTE, SRLTE)
200 ms ON, 200 ms OFF	Data Transmit; 4G registered;
800 ms ON, 800 ms OFF	2G/3G registered network
OFF	Power off; Sleep

-----*****-----
 AND Wireless : <http://www.and-global.com>
 OEM PCBA : <http://www.buypcba.com>
 Retail Store : <http://www.aliexpress.com/store/605000>
 Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
 Email : info@and-global.com
 Tel : +86-755-28099797



4.4 Open serial software and choose right serial number, Baud rate as below, please keep "SendNew" selected:

BaudRate: 115200
DataBits: 8
StopBits: 1
Verify: None
FlowControl: None
DTR
RTS
Send even: 1000 ms/Time
SendHEX
SendNew (checked)
Data input: SEND
AT+GSV

SSCOM3.2

AT+SIMCOMATI
Manufacturer: INCORPORATED
Model: A7600SA-M
Revision: ASD4B11AT500MT
A7600MT_311V05_231109
QCN:
IMEI: 06273306085282
MEID:
+OCAP: +CGSM, +PCLASS, +DS
DeviceInfo:
OK
AT+CSQ
+CSQ: 28, 99
OK
AT+CFIM?
+CFIM: READY
OK
AT+IFREQ=115200
OK
AT+CIMI
460002815752533
OK
AT+CPST?
+CPST: LTE, Online, 460-00, 0x262C, 47128332, 239, EVTRAN-
BAND3, 1300, 5, 5, 21, 54, 54, 4
OK
AT+CGSSINFO
+CGSSINFO
3, 12, 05, 00, 22, 6377859, 8, 114, 0332870, E, 230524, 082411, 00, 06, T, 0,
187, 3, 5, 2, 5, 2, 6, 07
OK

Set Multi Char | COM DATA |

HEX	DATA	SEND
☐	AT+SIMCOMATI	1
☐	AT+CSQ	2
☐	AT+CFIM?	3
☐	AT+IFREQ=115200	4
☐		5
☐	AT+CIMI	6
☐	AT+CPST?	7
☐		8
☐	AT+CGSSINFO=1	9
☐	AT+CGSSINFO	10
☐		11
☐		12
☐		13
☐		14
☐		15
☐		16
☐		17
☐		18
☐		19
☐		20
☐		21
☐		22
☐		23
☐		24
☐	AT+CGSSINFO	25

Sound send interval: 1000 ms

OpenFile | File& | SendFile | SendData | Clear | MaxData

ComPort: COM4 | CloseCom | Help | Hide

BaudRate: 115200 | DTR | RTS | Send even: 1000 ms/Time | SendHEX | SendNew (checked) | Data input: SEND | AT+CGSSINFO


www.mcu51.com S:670 R:3686 COM4 opened 115200bp CTS=0 DSR=0 RLSD=0

AND Wireless : <http://www.and-global.com>
OEM PCBA : <http://www.buypcba.com>
Retail Store : <http://www.aliexpress.com/store/605000>
Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
Email : info@and-global.com
Tel : +86-755-28099797




5. How to test the BK-A7608 by AT command via USB

5.1 Remove all connection on CN101 7pin connector, Power up the A7608 Breakout board only via USB, Install "SIMCom_Windows 1803 USB Virtual COM port driver.zip" driver following the computer indication. The computer will show as belows, it means that the driver is installed correctly.

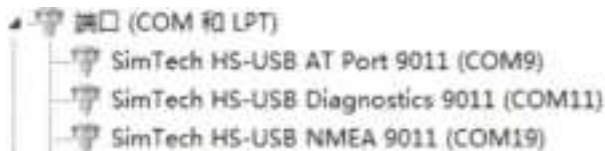

5.2 Select AT Port 9001, 115200bps and SendNew, you can repeat all command in Item4.4.

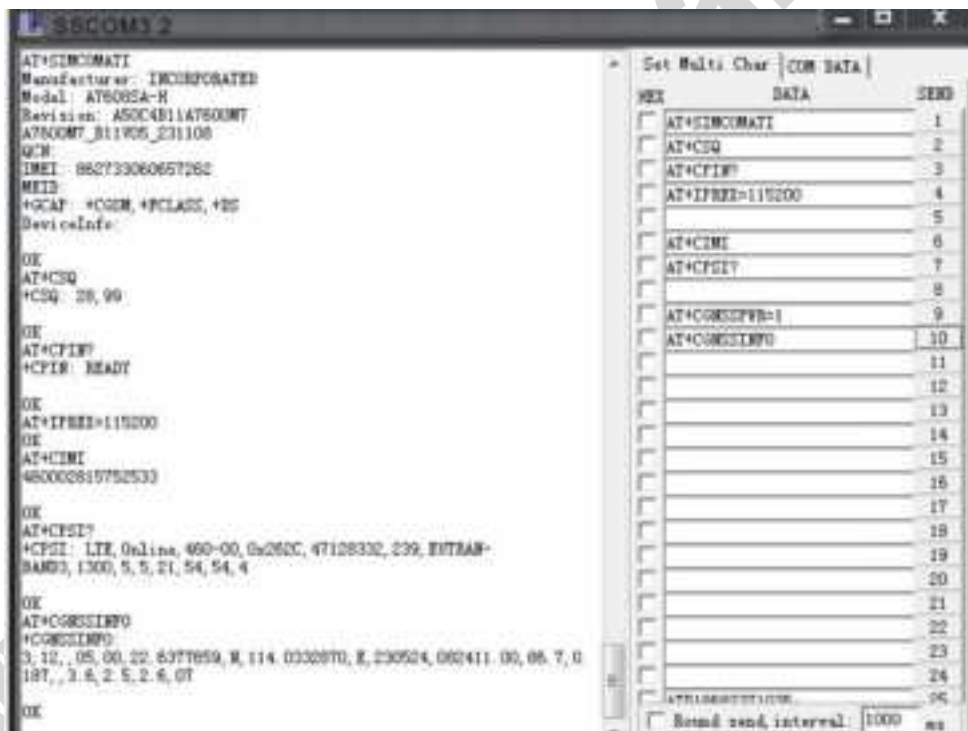

6.Package list:

Name	Qty	Unit
BK-A7608	1	Pcs

-----*****-----
AND Wireless : <http://www.and-global.com>
OEM PCBA : <http://www.buypcba.com>
Retail Store : <http://www.aliexpress.com/store/605000>
Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
Email : info@and-global.com
Tel : +86-755-28099797