



**PLEASE NOTE:**

All acrylic parts have protective film applied on both sides.


Some pieces appear with slightly translucent film, this will need to be removed before assembly.

Ensure all engraved lines face outwards.


# INSTRUCTIONS FOR: LEGO® Balrog Book Nook (10367) Display Case

LDS765


**Parts list:**

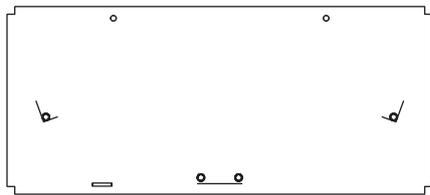


**1 - PRT1**

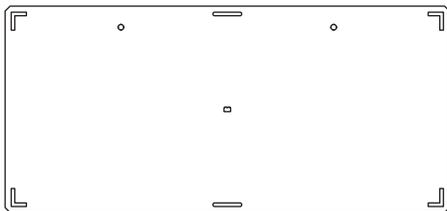


**2 - PRT2**

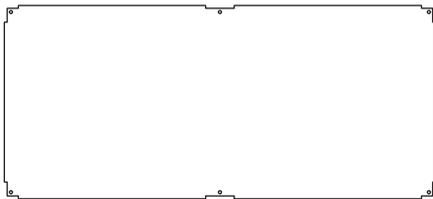


**3 - PRT3**

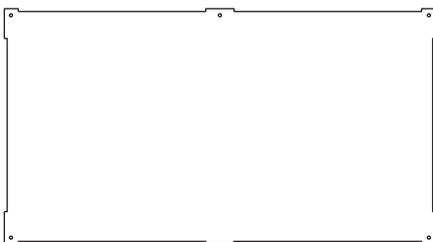


**4 - PRT4**

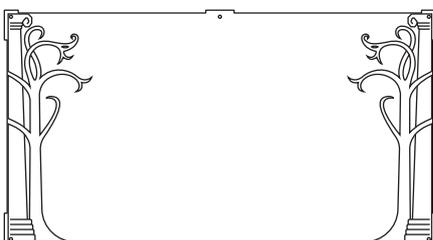

**5 - PRT5** (Etching only applicable for limited edition)

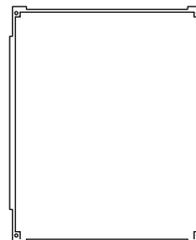

**6 - PRT6**

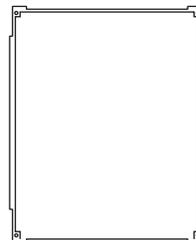


**7 - PRT7**



**8 - PRT8**



 **9 - PRT9** (if applicable)



**10 - CPT3** (5x packs)



**11 - CPT2** (1x pack)



# INSTRUCTIONS FOR: Wicked Brick Display Cases

These instructions cover the basic directions for the majority of our display case products.  
More specific details will be found on your chosen products website listing.

