


HYUNDAI
ELECTRONICS

EVAPORATIVE COOLER

(7.5L, White)

HYAIRC075LA

USER MANUAL

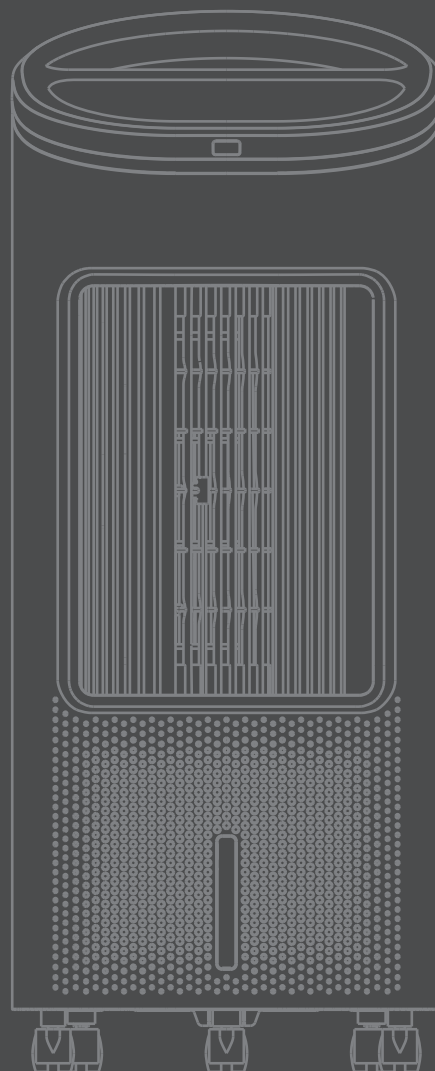

Safety Warnings and Precautions:


- Please read all instructions carefully before using this product.
- Before use, please check whether the operating voltage matches the voltage on the label of the unit.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Check the power supply cord of the fan regularly. If damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not place the power supply cord under the object or cover the cord. Place the power supply cord properly to avoid tripping over.
- Place the air conditioning fan on a flat and secure floor before use.
- When the fan isn't used, unplug the power supply cord. Please hold the plug and do not pull the cord.
- Make sure that the fan won't touch any obstructions while it is running.
- When the fan is running, do not put your fingers or other objects into the air inlet and outlet. If there are children nearby, pay more attention to avoid children playing with the fan.
- When the fan is running, do not put soft objects such as hair and curtains close to the fan to avoid getting caught in the fan.
- When the power cord or plug of the fan is damaged, or the fan is damaged due to falling off, please stop using the product.
- Do not use this fan outdoors. This product is for indoor use only.
- Do not use this fan in a humid place such as a bathroom.
- Do not use this fan near the window or in direct sunlight.
- Do not use this fan with other semi-conductors.
- The fan can't be used without a base and isn't placed horizontally.
- Do not use this fan where gasoline, paint or other flammable materials are stored.
- Unplug the power supply cord before cleaning, repairing or moving the product.
- When no one uses the fan, unplug the power plug.
- Please use this fan according to the instructions on the User's Guide.
- Do not disassemble the fan without permission. For repair, please return it to the service center.
- The product should be kept clean and regularly maintained.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- The appliance is only intended for the purpose described in user manual. Do not use appliance or any part of the appliance out of the intended use to avoid risk.
- The use of attachments which are not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
- Unplug the appliance during filling and cleaning.
- Do not use an extension cord.

Features

1. Four speed levels: Silent, low, medium, high.
2. Working modes: normal wind, natural wind, and sleep wind.
3. Four timer settings: 1h, 2h, 4h, 8h.
4. Water shortage protection function.
5. Air outlet 0-65° swing.
6. The function status is indicated by illuminated LED light, which becomes dark after one minute without operation.
7. Ultra-thin IR remote control (maximum 6m, left/right 30°)
8. Dry wind function.
9. Power failure memory function.
10. Touch button control function.
11. The product automatically shuts down after 15 hours of continuous operation.


Functions and Names of Product Components



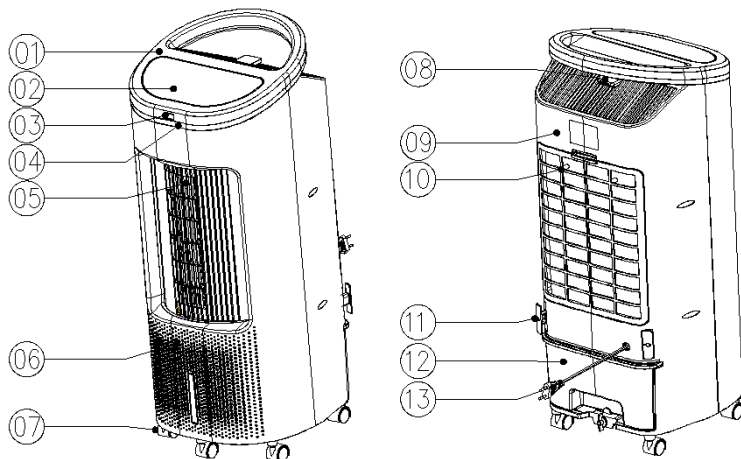



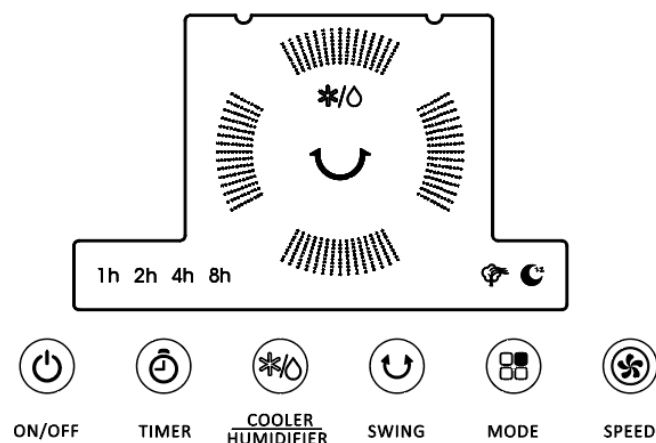

● Product overview



- | | |
|-------------------------------------|-----------------------|
| 01: Top cover | 08: Remote control |
| 02: Display panel | 09: Rear case |
| 03: Remote control receiving window | 10: Rear screen |
| 04: Decorative ring | 11: Winding frame |
| 05: Outlet grille | 12: Water tank |
| 06: Front shell | 13: Power supply cord |
| 07: Casters | |

● Operation panel



1	 ON/OFF	On/off
2	 TIMER	Timer setting: 1, 2, 4, 8 hours
3	 COOLER HUMIDIFIER	Humidify
4	 SWING	Swing
5	 MODE	Mode selection: Normal wind, natural wind (), sleep wind ()
6	 SPEED	Wind speed control: High, medium, low, silent

Product Installation and Usage

- Installation method

1. Unpack the product and take it out: Check the instructions and other accessories.
2. The unit can be used immediately after being taken out.

- Use of function buttons



1. When the power is turned on, all the indicators are off. The buzzer beeps twice when the power is first turned on, the air outlet rotates from the current angle to 0°, and the system enters the standby state; if there is no button operation in 1 minute, the indicator light will become dark (33% of the original brightness). If the button is pressed again, the indicator light will turn on.
2. The unit can be operated by pressing the button on the control panel. The instructions are as follows:

- On/off control: Press the “On/Off” button for the first time to enter the normal wind mode, and the air outlet automatically pops out; press the “On/Off” button again to shut down, the fan stops running, and the air outlet automatically hides. At this moment, the fan is in the standby state. To completely turn off the fan, remove the power plug.

Note: In order to extend the life of the product, it is recommended to completely power off the product after use.

- Wind speed selection: After the power is turned on, the fan enters the normal wind mode. You can press the “Speed” button to select the wind speed from high, medium, low and silent. The LED indicator will light up accordingly: High → Medium → Low → Silent.

Note: If you select the low speed, the motor will start at medium speed for a few seconds and then switch to low speed.

- Wind mode selection: Press the “Mode” button to select normal wind, natural wind or sleep wind, and the LED indicator will light up accordingly: Natural mode (), sleep wind ().

Natural mode: The fan is automatically set to match the air conditioner. The wind speed changes every once in a while, and the cool breeze is blown to every corner.

Sleep wind: The fan automatically sets the soft air supply program that adapts to the human body during sleep. The wind speed changes at regular intervals to provide a comfortable sleeping environment. In sleep wind mode, high, medium and low speeds are also available.

Note: In natural mode, the speed button is invalid, so the speed indicator will not light up.

- Timer setting: Press the “Timer” button to select 1 hour, 2 hours, 4 hours or 8 hours. If the LED is off, it means that the timer function is not set. After selecting the time, the LED indicator will display the set time and will automatically shut down after the time has elapsed.
- Swing function: Press the “Swing” button to make the fan swing left and right, and press it again to stop the swing.

3. When the fan is turned on in standby state, all functions except timer and sleep wind have memory settings.

Repair and Maintenance

- Before cleaning, repairing and maintaining, please turn off the power and remove the plug.
 - If too much foreign matter or dust adheres to the rear mesh cover and the wind wheels of the air inlet in the rear shell of the machine, the wind effect will be affected. Therefore, it is recommended to clean it at least once every other month.
1. Turn off the power and remove the power cord (be sure to unplug the power cord when cleaning the body, or else it may cause electric shock or mechanical damage).
 2. When cleaning, use ordinary detergent and soft brush. Do not use chemical agents.
- Cleaning the surface of the unit
1. To clean the surface of the machine, wipe with a damp cloth. It is strictly forbidden to rinse directly with water.
 2. Do not use corrosive detergent or solvent.
 3. When cleaning the body, be sure to turn off the power switch and unplug the power cord, or else it may cause electric shock.
- Maintenance
1. When the product is not used for a long time, remove the power plug, package the product and prevent dust from entering the body.
 2. After packaging, store in a dry and ventilated place.

Technical Parameters

Product model	HYAIRCO75LA
Rated voltage	AC220-240V
Rated frequency	50Hz
Rated power	65W
Noise	≤55dB (average sound pressure level)
Dimensions (length × width × height)	L322*W325*H797mm

Environmental Protection



■ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

HYUNDAI
ELECTRONICS

For Inquiries, Please Contact:

Kogan Australia Pty Ltd
139 GLADSTONE STREET SOUTH MELBOURNE, VIC 3205 AUSTRALIA
<https://help.kogan.com/>

Imported/Distributed by Kogan Australia Pty Ltd
Licensed by HYUNDAI Corporation Holdings, Korea