


225x315mm


80g书写纸 单黑 正反面印刷



AC1200

Dual-band Smart WiFi Router

Model No.:RSD0611



Website: www.rockspace.hk
Support Email: router@rockspace.co
please read this instructions completely and keep it properly.

Network Configuration

Wireless Connection

Phone Pad Computer

1200M Dual Band 1200M Gigabit Wired Through-wall Parents Control Safety Guaranteed

LAN1~3

Connect the Computer

Power on the device

Connect Router WAN Port


Intelligent Home Gateway (Optical Modem)

Home Network Cable


Cable TV Modem

1. Computer Setting


1.1 Click: "【Start】—【Control Panel】—【Network and Internet】—【Network and Sharing Center】—【Change adapter settings】—【Local Area Connection】", select the connected network card, Then right click "Local Area Connection", select 【Properties】

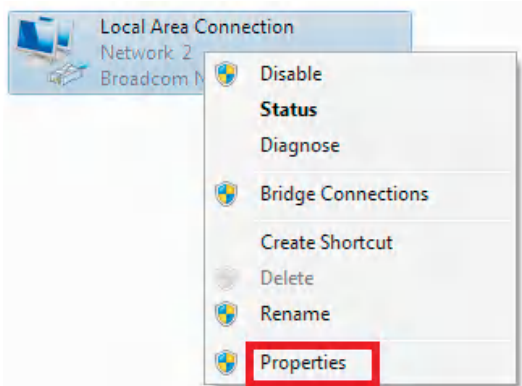

1.2 Select 【Internet Protocol Version 4 (TCP/IPv4)】, click 【Properties】

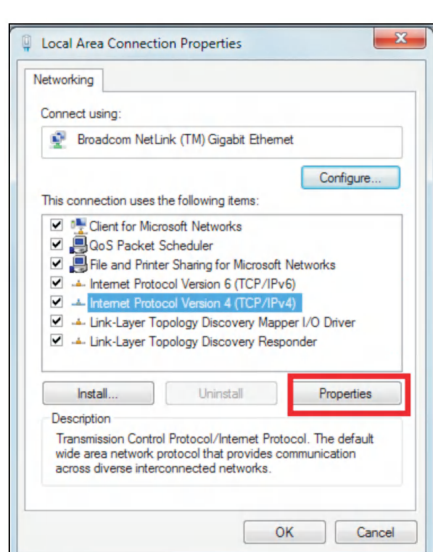


1.3 Select 【Obtain an IP address automatically】. 【Obtain DNS Server address automatically】, click 【OK】. Return back to the previous interface and click 【OK】.

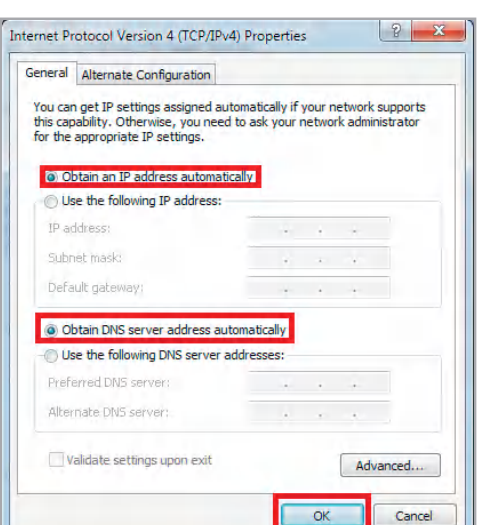


2. Router setting

2.1 Open the browser, input and connect: http://192.168.1.1 input user name "admin" and password "admin" Click "Next"

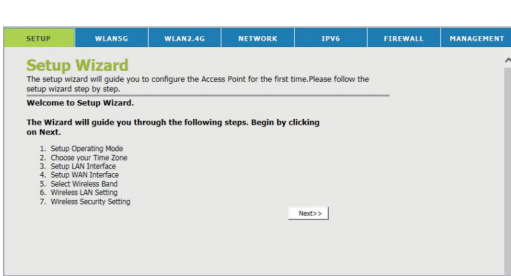


2.2 Setup Operation Mode


The device support various operation modes, which allows you to use different interfaces for NAT and bridging. Select proper operation mode accordance to your network topology. Default Gateway Mode.Click "Next".

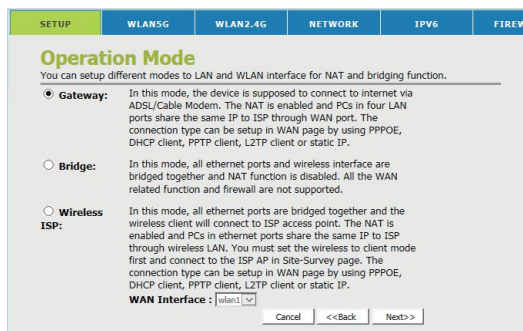

2.3 Setup Time Zone. Click "Next".




2.4 Setup LAN Settings. Click "Next".




2.5 Setup WAN Settings

Here you can also set the connection types. The router supports three common connection types: fixed IP, obtaining IP automatically and PPPoE dial-up.


Auto Config(DHCP)

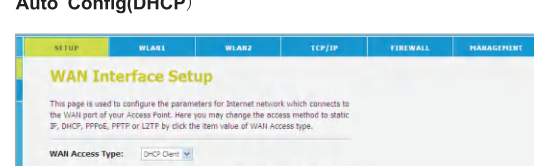


Fixed IP

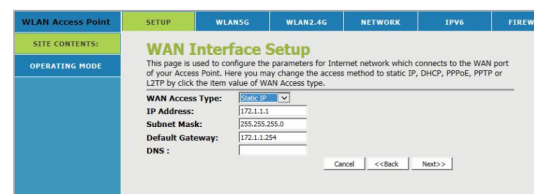


PPPoE Dial-Up

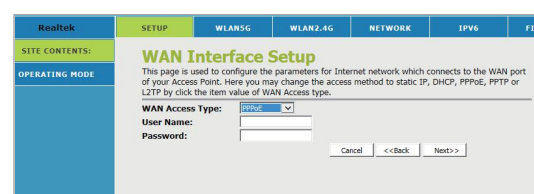


2.6 Wireless 5GHz Basic Settings




2.7 Wireless 5GHz Security Settings



2.8 Wireless 2.4GHz Basic Settings

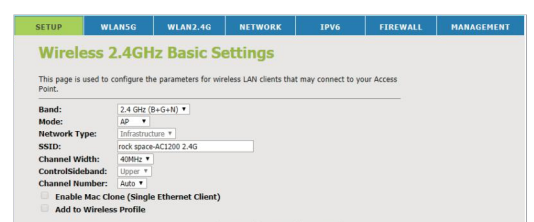


2.9 Wireless 2.4GHz Security Settings




3. wireless connection: (Here we take an win7 for instance)

2.6

3.1 Click"Start---Control Panel---Network and Internet---Network and Sharing Center---Change adapter settings---Wireless Network Connection", Then right click"Wireless Network Connection", select"Connect/Disconnect".

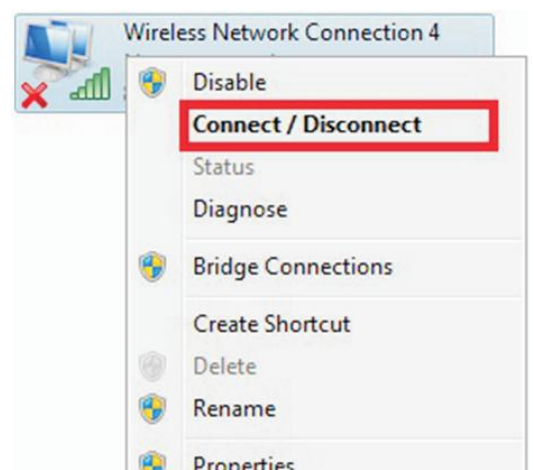


3.2 Select the wireless network name (SSID) in the wireless network list, click "Connect."

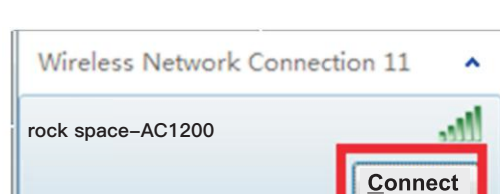


3.3 Enter Wi-Fi key, click "OK."

Note: the default SSID and Network Key is on the product label on the bottom

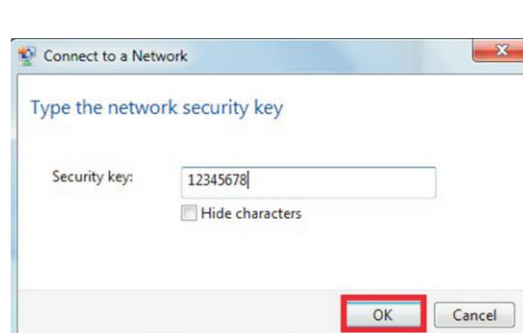

3.4 Connection is successful

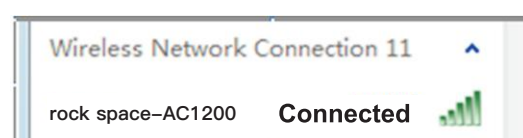

4. FAQs

4.1 How to reset to defaults?
Keep pressing the Reset button near to the wan port and guarantee the device is in power, releasing it after 5~10 seconds.

4.2 Laptop can not search out the wifi signal?
a. If your laptop is with built-in wireless adapter,please confirm that the wireless adapter is working or not.
b. Check the wireless service in the laptop is open or not. Methods is as follows: Right-click "my computer",choose "management",then choose"service and application", check the"wireless Zero Configuration" in the "Service" page. If the stage is not open,please right-click "wireless zero configuration "and click "open". If the open type shows it is forbidden,please right-click and choose the attribute, change the open type to automatic,then change the state to open.
c. Confirm the wireless function of Router is opening.
d. Check the driver of the wireless adapter in the device manager is successfully installed or not.