# CT-S1-76/CT-S1 Casiotone

## CASIO<sub>®</sub>

ΕN

### **Quick Start Guide**

After reading this document, keep it in a safe place along with the warranty certificate. Be sure to read the "Safety Precautions" in the separate "READ THIS!" sheet, and use the product correctly.

#### **Included Accessories**

- AC adaptor 
   AD-A12150LW (CT-S1-76) 
   Power cord (C 
   Music Stand Power cord (CT-S1-76 only)
- Strap Lock (CT-S1 only) · AD-E95100L (CT-S1)

 Leaflets
 READ THIS! Sheet Other (Warranty, etc.)

#### **Separately Available Accessories**

You can get information about accessories that are separately available for this product from your retailer or from the CASIO website.

## Please refer to the website below for more detailed operating instructions and product information, including the USER'S GUIDE, Dedicated App (CASIO MUSIC SPACE) download, Operating Precautions, etc. CT-S1-76 CT-S1


#### Preparation Computer, smartphone, etc. (commercially available) • Connect using a USB cable that is no more than **Preparing a Power Supply** two meters long ■ Using the AC Adaptor Headphones (sold separately) (1) Connect the AC adaptor as shown in the right illustration. AC adaptor Make sure that you use only the AC adaptor specified for this Digital Keyboard. Pedal (sold separately) Bottom of con Wireless MIDI & audio adaptor (sold separately: WU-BT10) the back of the console. 2 Insert AA-size batteries into the battery case (CT-S1-76: 8 batteries/CT-S1: 6 batteries). TO HOST (4) Specify the battery type.


## • The illustration shows the CT-S1. The CT-S1 has 61 keys; the CT-S1-76 has 76 keys


# \*For the CT-S1-76, connect the power cord to the AC adaptor. To install the music stand Insert the stand into the holes on Back See "Specifying the Battery Type" on the reverse side of 0[===

#### **Practicing with the Metronome**



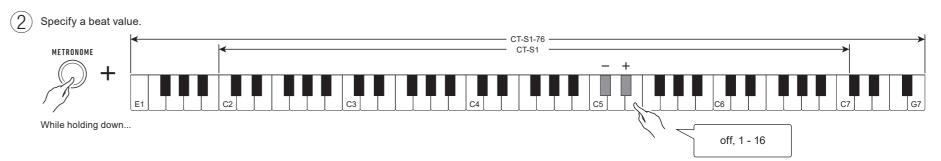


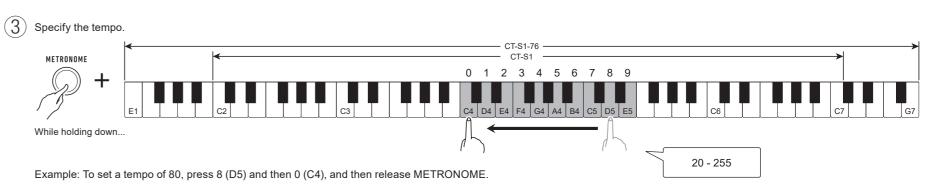

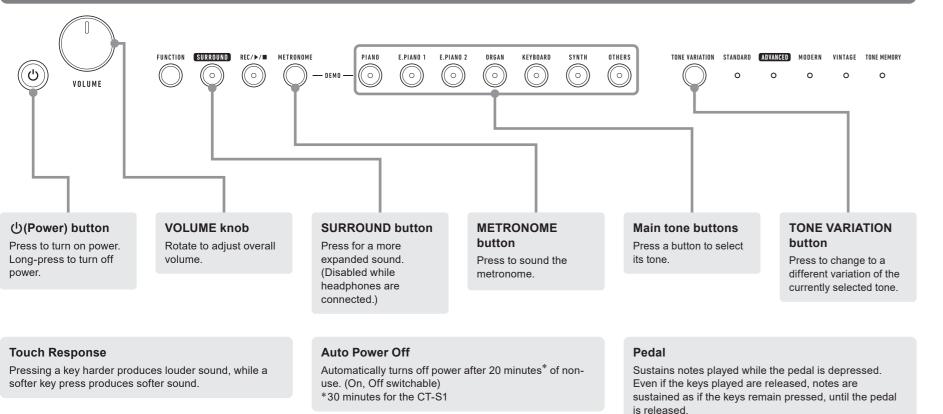

### Selecting a Tone

 
#### To use the main tones to select an instrument








#### To select a tone using the keyboard keys

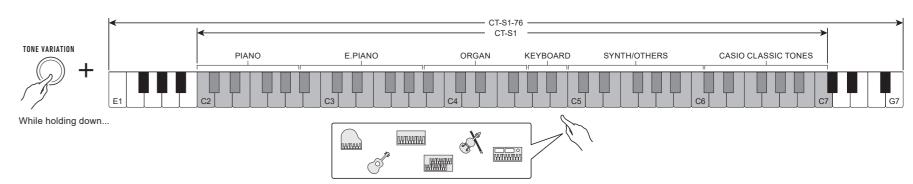

2 Select a variation

#### Registering the Current Main Tone Setup to a Button (Tone Memory)

 

#### **Useful Functions**

Basic Operation

For details about operations, refer to the User's Guide on the CASIO Website.

# ■ My Setup

Save the current setup (tone, etc.) for later recall.

Output sounds using room, hall, and other acoustic effects.

Raise or lower the pitch of the keyboard in octave units.


#### ■ Transpose


Raise or lower the overall pitch in semitone steps.

#### ■ Scale Tuning (Temperament)

You can set the scale tuning of the keyboard for music that uses a scale tuning other than equal temperament.

# Playing with Two Layered Tones FUNCTION While holding down.. Low tone: Off Layers the tones While holding down... Keeping FUNCTION depressed, press the tone you want to layer. E.PIANO KEYBOARD SYNTH/OTHERS CASIO CLASSIC TONES

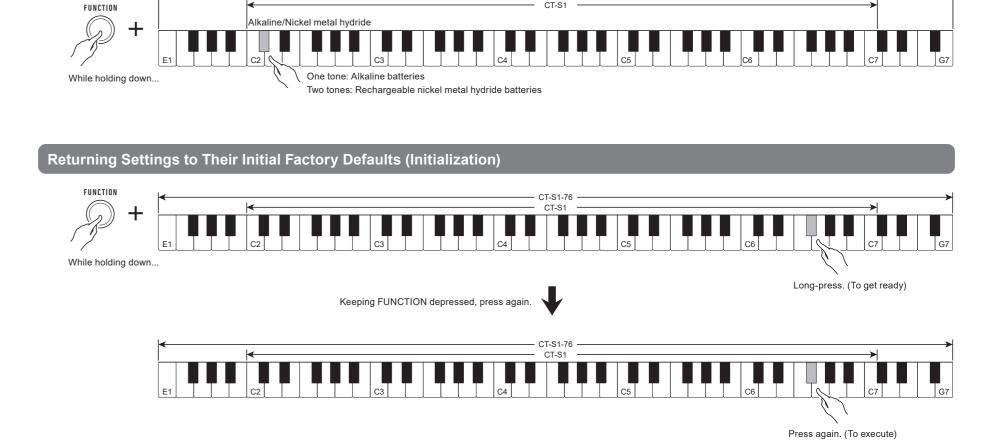

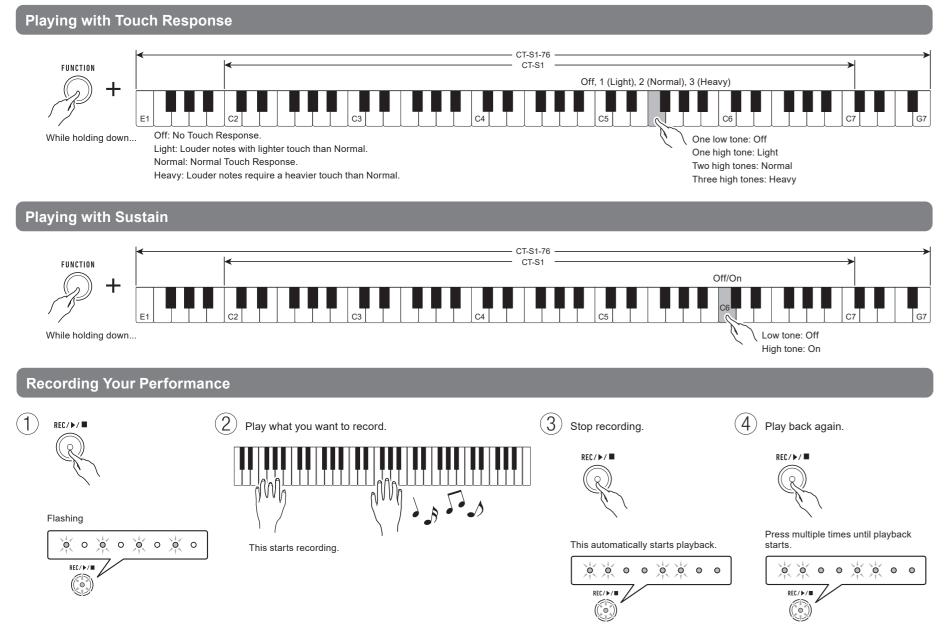

### **Using the Dedicated App (CASIO MUSIC SPACE)**

Enjoy a range of fun functions using the Digital Keyboard together with the CASIO MUSIC SPACE app. Please visit the "Downloads" section of our website. Only the CT-S1-76 is compatible with the Remote Controller, which allows remote control of functions and settings on the Digital Keyboard via an app.

• The WU-BT10 (sold separately) or a commercially available USB cable is required to connect the Digital Keyboard to a smart device.

#### Reference

#### **Product Specifications**

Model: CT-S1-76BK/CT-S1-76WE

**Specifying the Battery Type** 

Keyboard: 76 keys

Acoustics: Amp output: 6.5W + 6.5W

Speakers: 13cm × 6cm (oval) × 2

Power Supply: 2-way power supply

Batteries: 8 AA-size alkaline batteries or AA-size rechargeable nickel metal hydride

AC Adaptor: AD-A12150LW

Power consumption: 12V --- 10W

Dimensions: 114.0(W) × 25.8(D) × 8.3(H) cm (44 7/8 × 10 3/16 × 3 1/4 inch)

Weight: Approximately 5.3 kg (11.7 lbs) (Excluding batteries)

Model: CT-S1BK/CT-S1WE/CT-S1RD

Keyboard: 61 keys

Acoustics: Amp output: 2.5W + 2.5W

Speakers: 13cm × 6cm (oval) × 2 Power Supply: 2-way power supply

Batteries: 6 AA-size alkaline batteries or AA-size rechargeable nickel metal hydride

AC Adaptor: AD-E95100L

Power consumption: 9.5V --- 7.5W

**Dimensions:** 93.0(W) × 25.8(D) × 8.3(H) cm (36 5/8 × 10 3/16 × 3 1/4 inch)

Weight: Approximately 4.5 kg (9.9 lbs) (Excluding batteries)

Specifications and designs are subject to change without notice

• Any reproduction of the contents of this manual, either in part or its entirety, is prohibited. Except for your own, personal use, any other use of the contents of this manual without the consent of CASIO is prohibited under copyright laws.

This causes a re-start.

- IN NO EVENT SHALL CASIO BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS MANUAL OR PRODUCT, EVEN IF CASIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- The contents of this manual are subject to change without notice.
- Company and product names used in this manual may be registered trademarks of others.

#### **Declaration of Conformity**

Model Number: CT-S1-76/CT-S1

Trade Name: CASIO COMPUTER CO., LTD. Responsible party: CASIO AMERICA, INC.

Address: 570 MT. PLEASANT AVENUE, DOVER, NEW JERSEY 07801

Telephone number: 973-361-5400

CFR 47 §2.938 (b)(2) Attestation

As of the date of first importation or marketing of this device, the device is not produced by any entity identified on the Covered List, established pursuant to 47 CFR § 1.50002, as producing covered communications equipment.

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

A labels rating is affixed to the bottom of the product.

#### **!**WARNING

If Auto Power Off is set to [Off], the Digital Keyboard does not automatically turn off and continues to use power.

#### CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome Shibuya-ku, Tokyo 151-8543, Japan

> Published: 2/2024 C MA2402-A Printed in China

© 2024 CASIO COMPUTER CO., LTD.