


INSTALLATION MANUAL

CEILING FAN WITH LIGHTS

Model No.: CFL-8366-36CF02

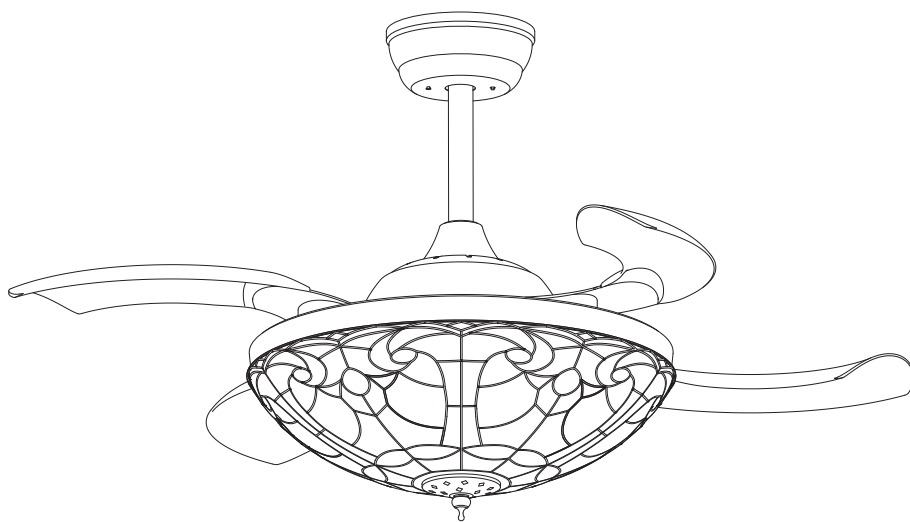

Scan for Installation Video



APP Control Applicablle

 
TOOLS REQUIRED




Ladder



Pliers




Wire
Strippers

 






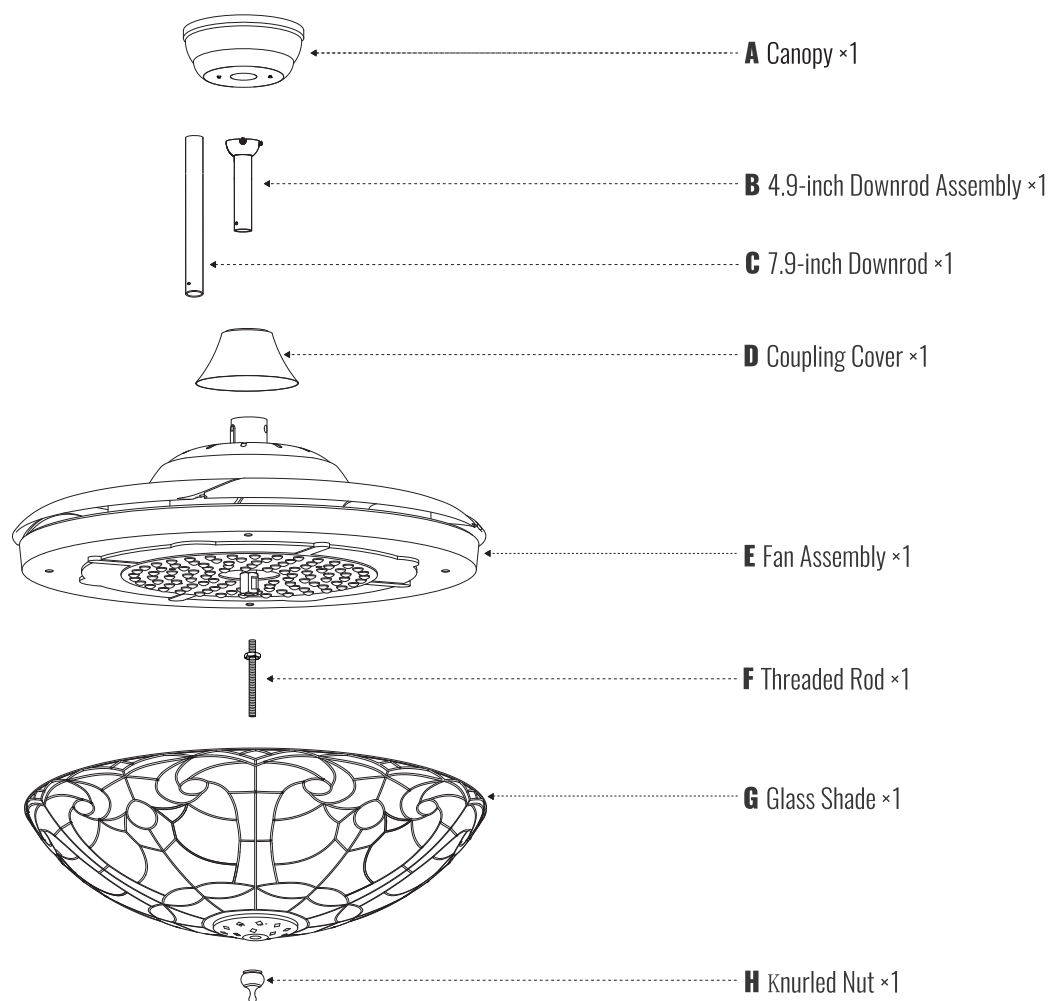




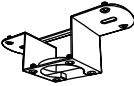

Screwdrivers

PACKING LIST

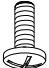



INSTALLATION KIT

AA  Mounting Bracket	BB  Wire Nut	CC  Outlet Box Screw	DD  Flat Washer	EE  "R" Pin	FF  Clevis Pin
GG  Gloves	HH  Set Screw	II  Wood Screw	JJ  Remote Holder Anchor	KK  Remote Control	LL  Remote Holder

NOTE:




1. The listed quantity is for installation, extra hardware may be included.
2. Clevis pin (FF) and "R" pin (EE) are pre-installed on downrod assembly (B).

INSTALLATION

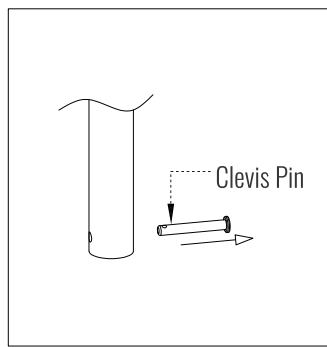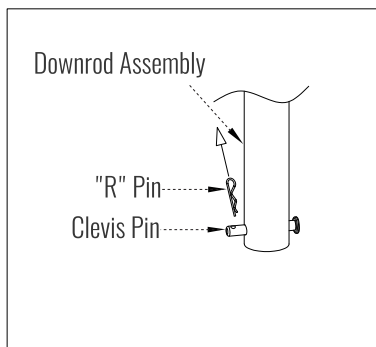

1. Disassemble the Downrod Assembly (B)

Remove the "R" pin (EE) and clevis pin (FF) from the downrod assembly (B).

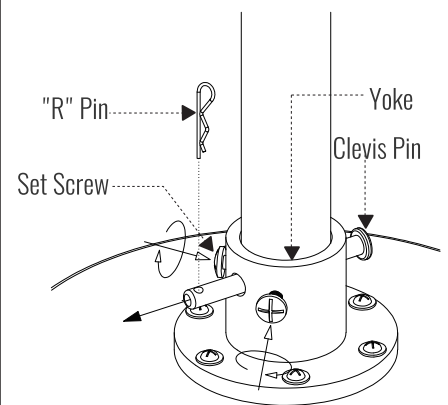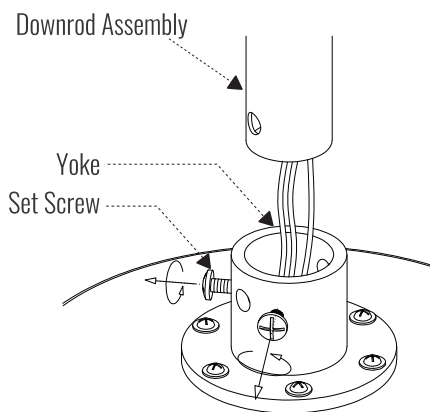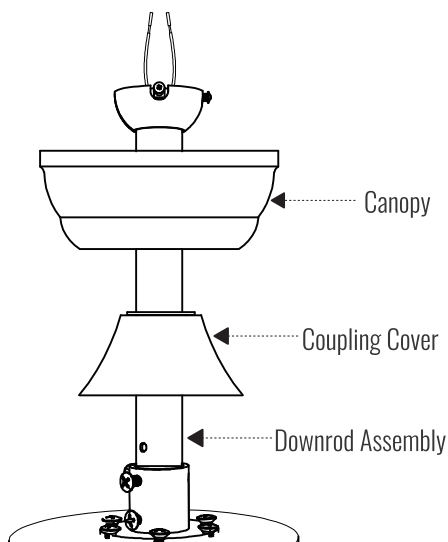


2. Install the Downrod (B/C)

Step 1: Assemble the canopy (A) and coupling cover (D). Route wires from the fan through the downrod (B/C).

Step 2: Loosen the set screw on yoke (do not remove), insert downrod (B/C) into yoke, and align the holes of downrod (B/C) with those of yoke.

Step 3: Pass clevis pin (FF) through the holes of downrod (B/C) and yoke, insert "R" pin (EE) into the hole of clevis pin (FF), and tighten set screws.


Step 4: Fit coupling cover (D) onto fan assembly (E).

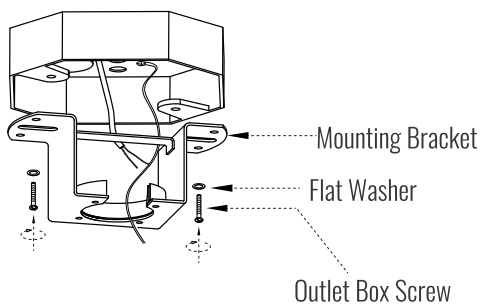

3. MOUNT THE BRACKET


Step 1: Pass the power wires through the center hole in the mounting bracket (AA).

Step 2: Fix the mounting bracket (AA) to the ceiling outlet box using outlet box screws (CC) and flat washers (DD).

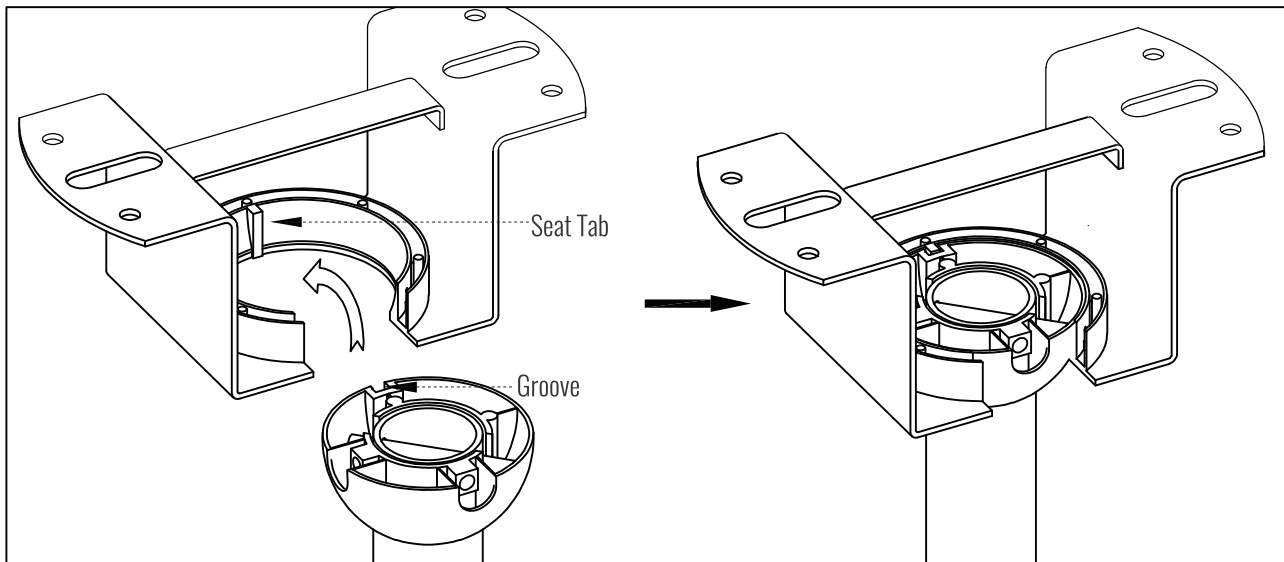

Step 3: Hang the downrod (B/C) of the installed fan onto the mounting bracket (AA).

Step 4: Rotate the downrod (B/C) until the seat tab in the mounting bracket (AA) is seated in the groove in the downrod ball.

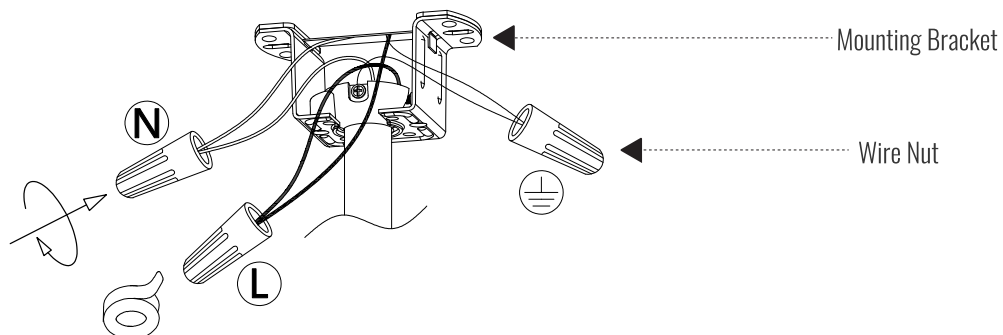




4. CONNECT THE WIRES

Step 1: Connect the wires from the fan to the house supply wires with wire nuts (BB), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire. Wrap the connection with electrical tape.

Step 2: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

NOTE:

This fan only needs one set of input wires (black, white, and ground wire). Both of the fan and lights will be controlled by the remote controller. This fan can only be connected to an on/off switch if you have one, not a dimmer switch.

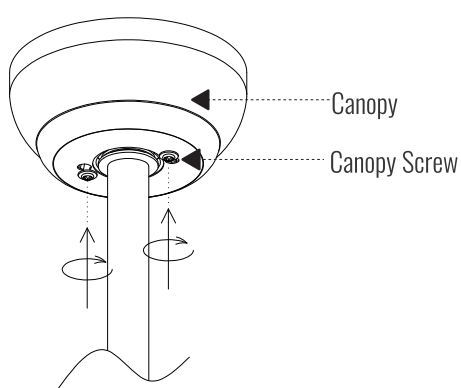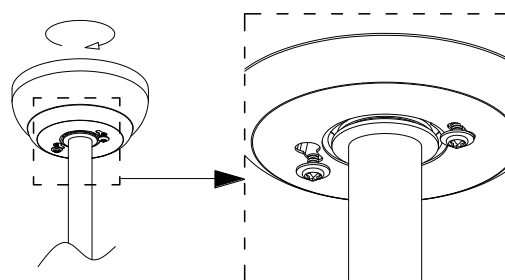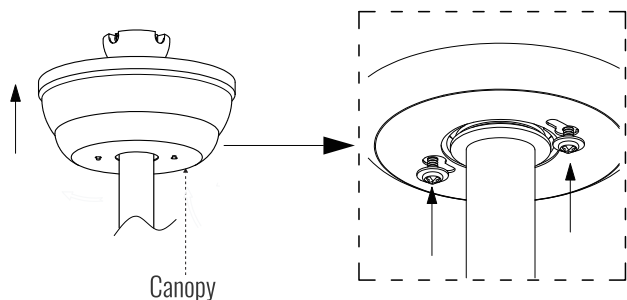


5. INSTALL THE CANOPY

Step 1: Loosen canopy screw from mounting bracket (AA), but do not take off.

Step 2: Push canopy (A) upwards, allowing canopy screw to pass through the hole in canopy.

Step 3: Rotate canopy clockwise so that it is caught by canopy screw and does not fall down.


Step 4: Tighten canopy screw to secure canopy.

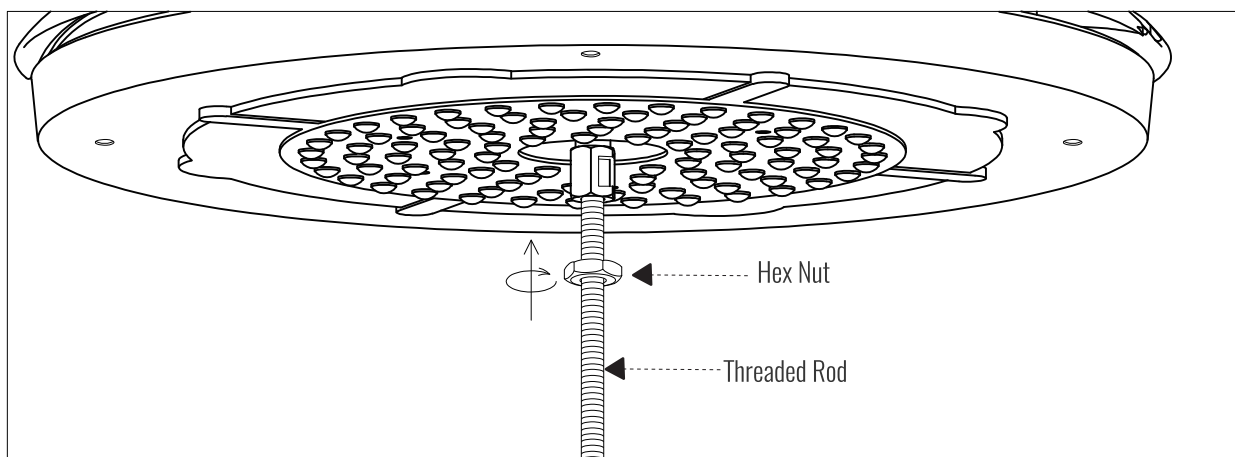

6. INSTALL THE Glass Shade

Step 1: Tighten the threaded rod (F) to the appropriate length, then secure it with the hex nut.

Warning: Avoid excessive rotation to prevent wire damage.

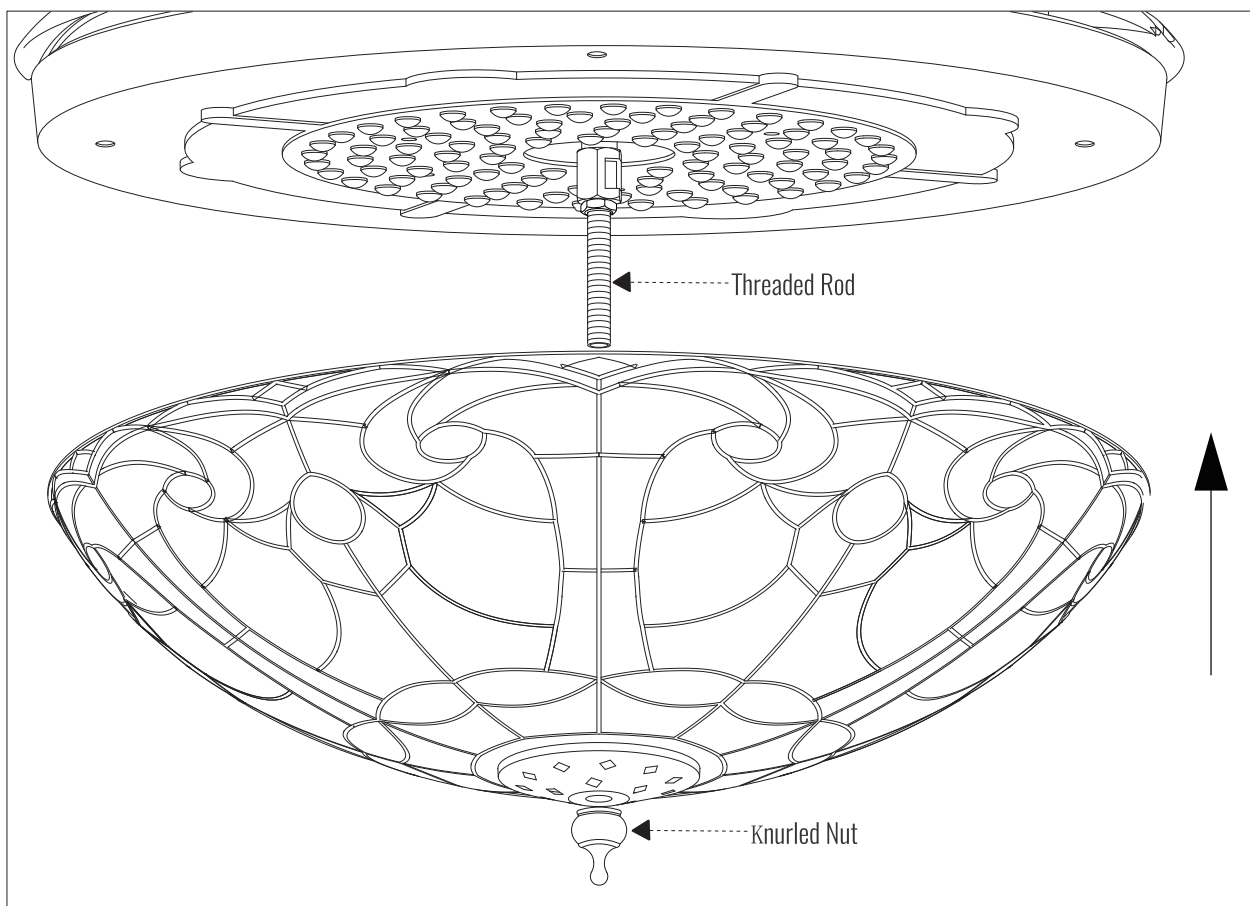

Step 2: Secure the glass shade (G) to the fan assembly (E) using a knurled nut (H).

INSTALL THE REMOTE HOLDER

<p>①</p>	<p>②</p>	<p>③</p> <p>JJ LL II</p>	<p>④</p> <p>KK LL</p>	<p>⑤</p>
<p>1. Insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included). 2. Mark and drill screw holes in the wall, then insert the remote holder anchors (JJ). 3. Use wood screws (II) to fix the remote holder (LL) onto the wall.</p>				

REMOTE CONTROL INSTRUCTIONS

		Turn off fan and light.
		Turn on/off the light.
		Quick switch of the light color: Yellow Light → White Light → Natural Light
		Adjust the brightness of the light.
		Adjust the light color temperature.
		Night mode, lights will be dimmed when press this button.
		Fan speeds 1 through 6.
		Fan moves forwards or reversely
		Natural Wind Mode: Fan speed automatically adjusts.
		Turn off the fan.
		Timing for 2 hours for the fan.
		Remote signal pairing.


NOTE: Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included)









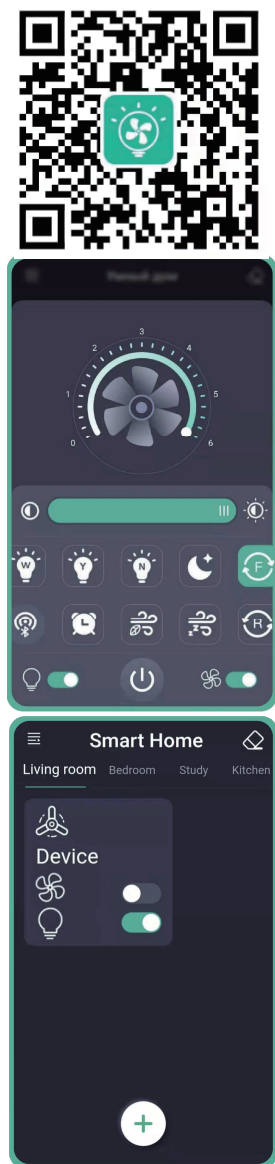







Remote Signal Pairing:

If the remote control loses the signal from the fan, press and hold the button right after the fan is powered on from the wall switch. After the fan flashes or beeps, it means the pairing has been successful.

APP CONTROL INSTRUCTIONS

Install the "FanLamp Pro" app from Google Play, Apple App Store, or other app stores by scanning the QR code or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.



-  Pairing: Click the Pair button within 5 seconds after turning on the fan from the wall switch. Once the fan flashes or beeps, it has been successfully paired with your phone and can now be controlled through the app.
-  Slide the slider to change the fan speed.
-  Slide the slider to change the brightness of the light.
-  Quick switch for "White" light color.
-  Quick switch for "Yellow" light color.
-  Quick switch for "Natural" light color.
-  Night mode: Dim the lights.
-  Fan moves forward.
-  Fan moves reversely.
-  Change the direction of the wind. (Not supported)
-  Timing the fan.
-  Natural wind: The fan speed will change automatically when you use this function
-  Sleeping wind. (Not supported)
-  Turn on/off the light.
-  Turn on/off the fan.
-  Unpairing: Click the unpair button within 5 seconds after turning on the fan. Once the fan flashes or beeps, it has been successfully unpaired from your phone.