




Keyboard WK-700

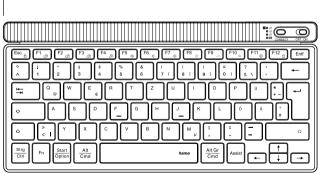


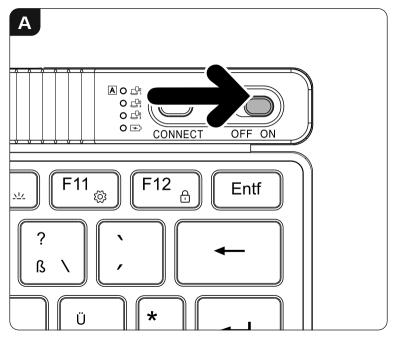

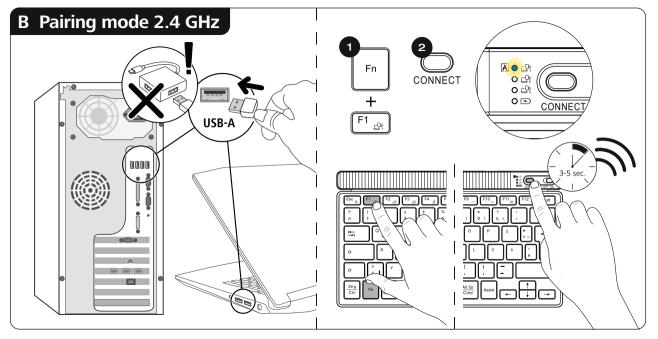






## **C** Pairing mode Bluetooth

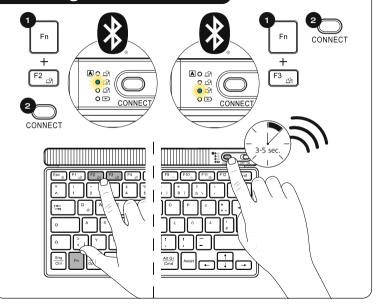

D

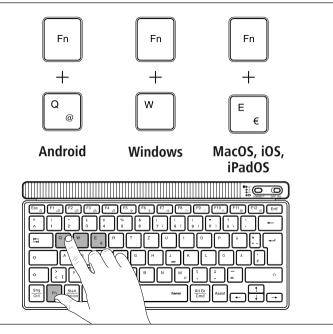

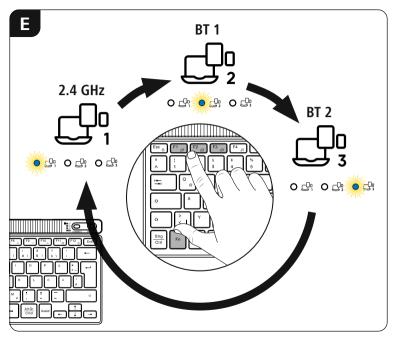

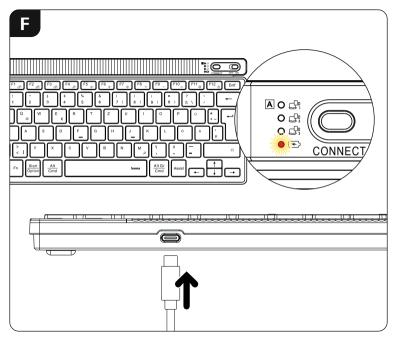

G

Fn + 
$$\frac{F10}{M}$$
 =  $\frac{1}{2}$  (ON/OFF)

Fn +  $\frac{F10}{M}$  =  $\frac{1}{2}$  + (brighter)

Fn +  $\frac{F9}{M}$  =  $\frac{1}{2}$  - (darker)

Н


Assist = Al assistant

Fn +

Esc 
$$_{\triangle}$$
 F1  $_{\triangle}$  F2  $_{\triangle}$  F3  $_{\triangle}$  F4  $_{B}$  F5  $_{\triangle}$  F6  $_{\triangle}$  F7  $_{\triangle}$  F8  $_{\triangle}$ 

$$= \stackrel{\square}{\square} = \stackrel{\square}{\square}_{1} = \stackrel{\square}{\square}_{2} = \stackrel{\square}{\square}_{3} = \stackrel{\square}{\square}_{4} = \stackrel{\square}{\square}_{$$

F9 \_\_ F10 \_\_ F11 \_\_ F12 \_\_

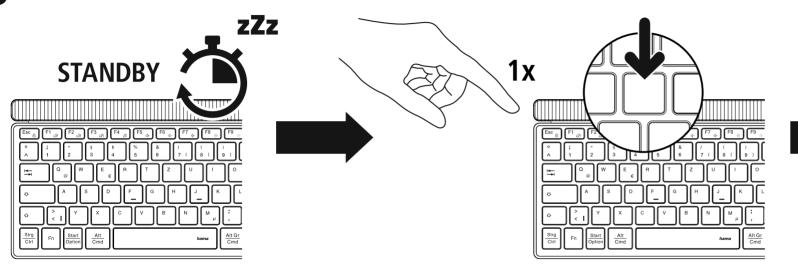



## hama

## **Service & Support**



support.hama.com/00173067

**(** +49 9091 502-0





86652 Monheim/Germany www.hama.com

www.hama.com/nep

