




Thank you for choosing the boAt Rockerz 245v2. This manual is meant to guide you through to the shores of Nirvana without too much difficulty. Please read this manual as your map. Knowledge of Bluetooth and device connection is essential. Therefore, we strongly advise that this manual be read before beginning of use, and referred to when in times of difficulty.

Package contents

- 1 x boAt Rockerz 245v2
- 1 x Micro USB charging cable
- 2 x Pairs of additional earbuds (Small & Large)
- 1 x Manual
- 1 x Warranty Card

Product Diagram:

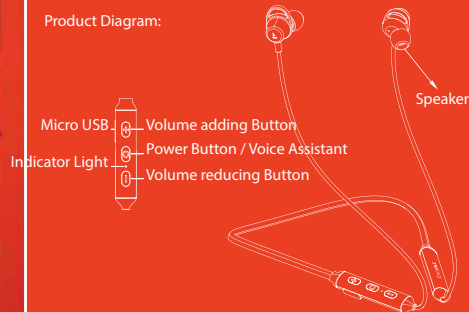

Pairing with Bluetooth:

- (1) When switched off, press the multifunction button for 5 seconds. The LED light will flash white and blue lights to indicate this.
- (2) Open Bluetooth on your device and search for "boAt Rockerz 245v2" available devices.
- (3) Choose "boAt Rockerz 245v2" from the list and enter the pairing "0000" to establish Bluetooth connectivity.
- (4) A voice prompt "You're now connected to boAt Rockerz 245v2" will confirm the connection. The blue LED light flashes twice every 4 seconds when connected.

Functions:

- (1) Power on: When switched off, press and hold the multifunction button for 5 seconds. A voice prompt "power on" will confirm the same. The red and blue LED light will flash.
- (2) Power off: In any mode, press and hold the multifunction button for 5 seconds. A voice prompt "power off" will confirm the same. The red and blue LED light will flash twice every 4 seconds before the device will turn off.
- (3) Play/Pause: Tap the multifunction button once to play/pause the music.
- (4) Volume up: Tap the volume "+" buttons in steps to increase the volume. The LED light will indicate maximum volume.
- (5) Volume down: Tap the volume "-" button in steps to decrease the volume. The LED light will indicate minimum volume.
- (6) Answer/End call: Tap the multifunction button once when an incoming call is received to answer the call or to complete the action.

- (7) Reject call: Press and hold the multifunction button for 2 seconds to reject a call to reject it. A beep will indicate this.
- (8) Previous Track: To go to the previous track, press and hold the "-" button for 2 seconds.
- (9) Next Track: To skip to the next track, press and hold the "+" button for 2 seconds.
- (10) Voice Assistant : Click the Multi-function Button for 3 times to activate Voice Assistant.

To Charge:

Use a micro USB charging cable to charge the earphone through either a laptop or an adaptor.

- (1) Low Battery: The remaining talk time is less than 10 minutes. There will be a 'tone' and a reminder every minute.
- (2) Charging: The red light is steady (please note that the earphone will not work when charging).
- (3) Fully charged: the blue light is steady.

Specifications:

Bluetooth version:	5.0	Transmission distance:	about 10m
Speaker size:	12mm	Battery use:	Polymer lithium battery 32V/100mAh
Frequency range:	20 – 20000Hz	Charging time:	about 1.5 hours
Impedance:	32Ω±15%	Play / talk time:	about 8 hours
Sensitivity:	105±3dB	Standby time:	about 180 hours
Microphone Sensitivity:	-42 ± 3db	Magnetic suction:	back suction

Problem troubleshooting:

Problem description	cause problem	problem solution
Not working	Battery is exhausted	Fully charge with the charger
Not charging	Long press the power button for too short	Press and hold the main button for 3 seconds to reset
Not charging	Charging plug is not plugged in	Reset the charging plug
Not shut down	Misoperation caused the headset program to go wrong	Charge reset with the charger
Unable to connect	The headset did not enter pairing status	Put the headset into the pairing state
Unable to connect	Pairing status	reset
Unable to connect	Mobile phone Bluetooth application error	Turn off the phone and reboot

Safety Cautions:

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.
- Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are Plugging into Nirvana. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

