

KOGAN SMARTERHOME™ PAN & TILT MOTION TRACKING SMART CAMERA 2S

KAPTCAM2EA & KAPTCAM2SA

COMPONENTS



Security Camera



Bracket (Optional)



Wall Mount Screws
(Optional)



Power Adapter

 
 


USB Cable



User Guide

OVERVIEW

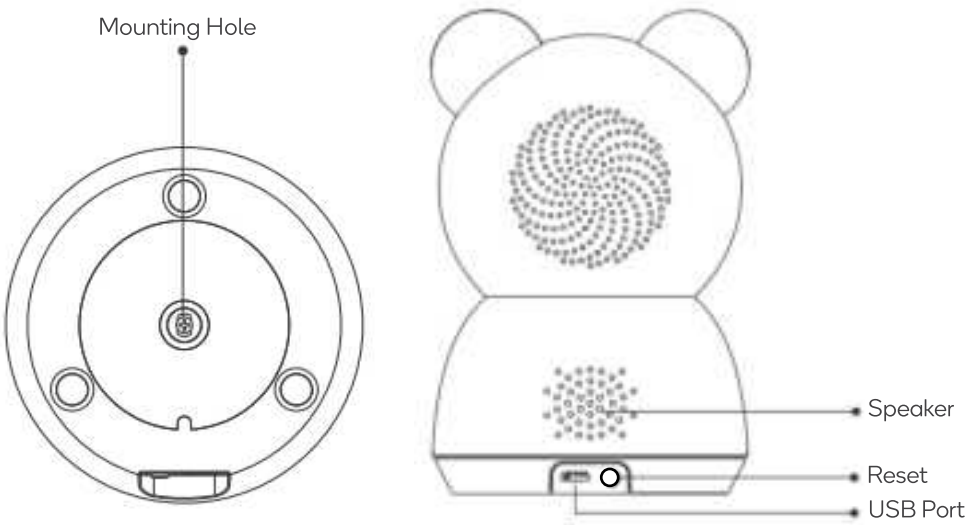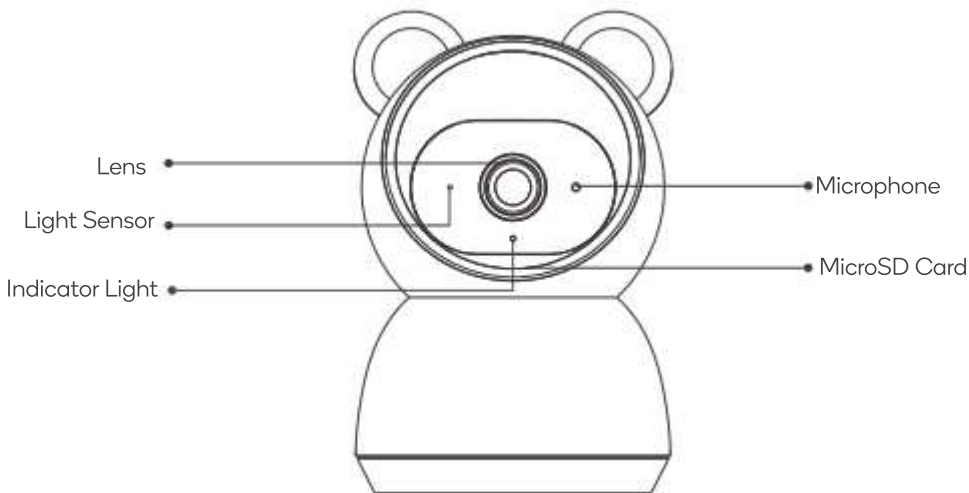

GETTING STARTED

Connection preparation

Bring the camera and your phone within 30 – 100cm of the router.



 
Insert the Micro SD card

Insert the Micro SD card gently on the side edge of camera.



Connect the power to the camera

Connect the camera to power using the Micro USB power adapter and USB cable.

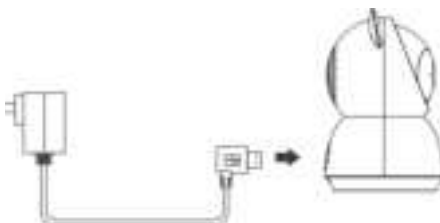

LED Guide

LED Status

Red LED on
Red LED flashes rapidly
Blue LED flashes rapidly
Blue LED on
Red LED flashes slowly

Camera Status

System starting up
Standby for configuration
Network pairing
Camera online
OTA upgrade

INSTALL THE APPLICATION

Install App

Download the “Kogan SmarterHome™” app from the Play Store (Android) or App Store (iOS).

Register

If you do not have a Kogan SmarterHome™ account, register or sign in with a verification code sent by SMS.

To register:

1. Tap to enter registration page.
2. The system automatically recognises your country/area. You can also select your country code manually. Enter your email address and tap ‘Next.’
3. Alternatively, you can select ‘Register by mobile number’ and enter the verification code sent to you by SMS.
4. Create a profile on the next page to define your location and room.



Set device in pairing mode

When the device is first turned on, it may automatically enter pairing mode (indicator light rapidly flashing).

If not automatically in pairing mode when powered on, you can manually set the device in pairing mode by pressing and holding the reset button for 5 seconds until the indicator light is rapidly flashing.

Add device through network

 
5. Once registered, tap “+” in the upper right corner of the app’s home page to add a new device through the network.
6. Select the product type from the list of options in the app (Home Security > Cameras).
7. Ensure that the device is in pairing mode, with the indicator light rapidly flashing, and tap “Confirm light is rapidly flashing”.



8. Upon successfully confirming pairing mode, enter your Wi-Fi details. It is important that your SmarterHome™ device and the app are connected to the same Wi-Fi network during setup.
9. The camera will next activate and begin scanning for a QR code. When pressing “Continue” in the app, the next screen will display the code. Ensure you are ready to hold your phone in front of the camera before selecting “Continue”, then wait until a sound confirms that it has been scanned.
10. Select “I heard a prompt” when that sound is made. If no sound is made, select “No prompts” and try again.



11. The device will commence the pairing process and connect to the app. Ensure your Wi-Fi router, mobile phone, and the SmarterHome™ device are kept close until connection is complete.
12. After successfully being added, you will have the option to rename the device and assign it to a location. It will now be listed on the app's home page. Tap the device listing to enter its control page.

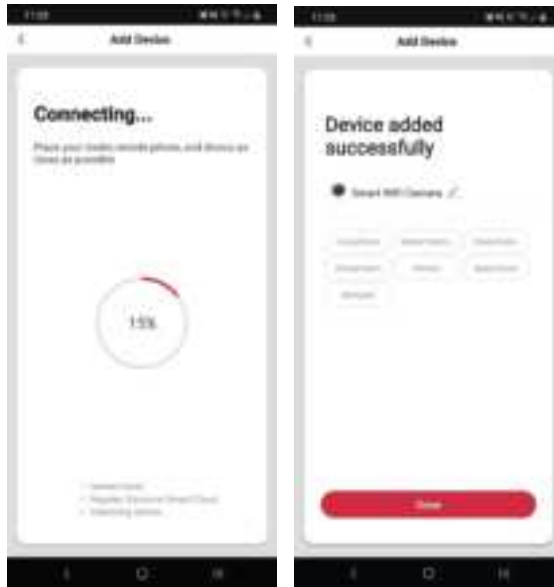

Notes:

- The device and the app have to use the same Wi-Fi network.
- The device is only compatible with 2.4Ghz networks.

GOOGLE HOME CONTROL

Note:

 
You will need to have set up a Google Home account prior to linking your Kogan SmarterHome™ device.

Adding “SmarterHome” to the Google Home app

1. From the home page of the Google Home app, select the “+” icon to access the ‘Add and manage’ page.
2. Select ‘Set up device’, then under the Works with Google banner, select ‘Have something already set up?’
3. Select the search bar and type ‘Smarter Home’ to locate the Kogan SmarterHome™ service.




4. Tap 'Authorise' to grant Google permission to access the SmarterHome™ app and your devices.
5. From here, you will be prompted to sign into your SmarterHome™ account using either your email or mobile phone number, depending on which method you used to register your account.

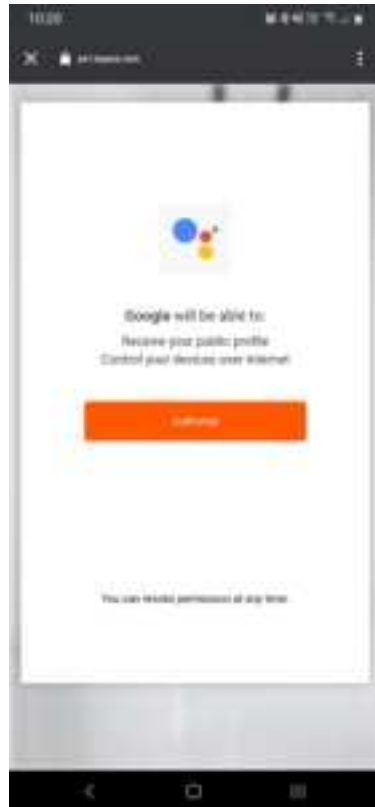

GOOGLE HOME CONTROL

 - Once connected, the app will display any compatible devices linked to your SmarterHome™ account. From here you can assign them to rooms and set up any routines.
- Tap on any of the devices to view a list of available commands.

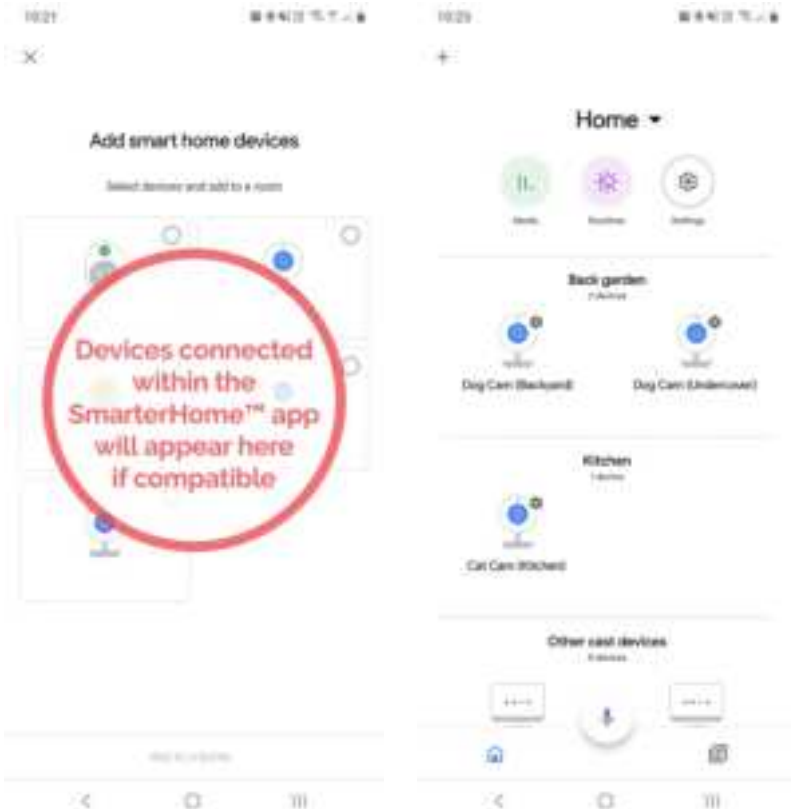

Note:

Please note that Google Home can only control the base/core functions of any compatible SmarterHome™ devices. To make full use of this product's smart functionality, please use the Kogan SmarterHome™ app.

AMAZON ALEXA CONTROL

Note:

 
You will need to have set up an Alexa account prior to linking your Kogan SmarterHome™ device.

Adding “SmarterHome” to the Alexa app


1. From the home page of the Alexa app, select the “☰” icon in the top-right and select Skills & Games from the sidebar.
2. Select the search bar and type ‘Smarter Home’ to locate the Kogan SmarterHome™ skill.



3. Tap 'Enable to Use' to add the Kogan SmarterHome™ skill to Alexa.
4. From here, you will be prompted to sign into your SmarterHome™ account using either your email or mobile phone number, depending on which method you used to register your account.
5. Tap 'Authorise' to grant Alexa permission to access the SmarterHome™ app and your devices.

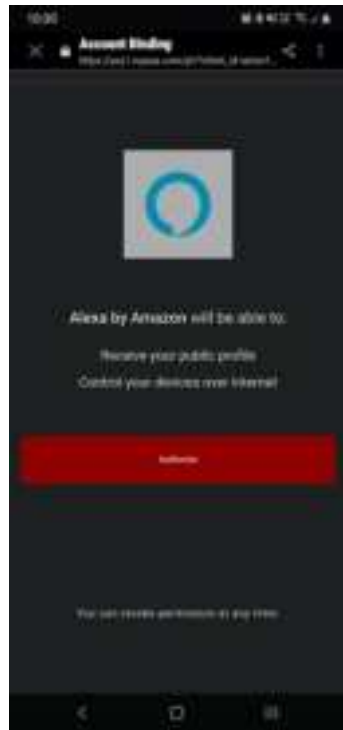

 6. Once connected, the app will perform a search and display the devices linked to your SmarterHome™ account.
7. When your devices have successfully connected to the Alexa app, you will be able to control your Kogan SmarterHome™ devices via Alexa's voice commands.

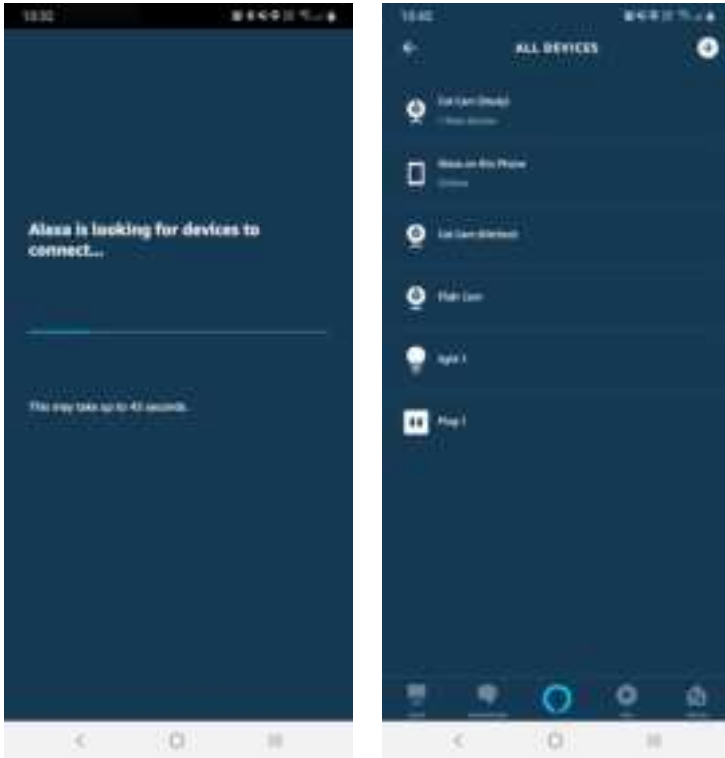

Note:

 
 
Please note that Alexa can only control the base/core functions of any compatible SmarterHome™ devices. To make full use of this product's smart functionality, please use the Kogan SmarterHome™ app.

WALL MOUNTING

You can place your camera on a shelf or other flat surface, or you can mount it to a wall.


To mount your camera to the wall:


- Attach the bracket to the wall or ceiling using the mounting screws.
- If mounting the camera to plaster, ensure to use the supplied plastic plaster anchors.
- Attach the camera to the bracket. Ensure the camera is secure in place to avoid it falling and causing potential injury or damage.

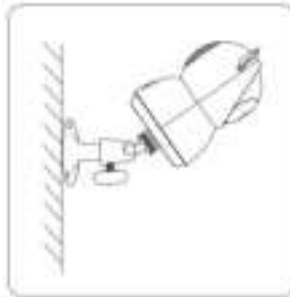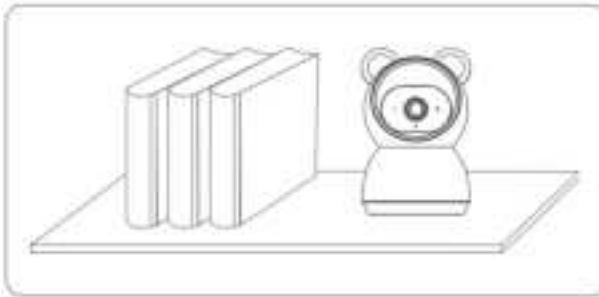

NOTES

  [illegible]





Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com