



Juno™ Portable Handheld
Video Magnifier with
OCR and Touch
Quick Start




All Rights Reserved.

www.APH.ORG

Catalog number 1-00380-00

UDC-02332 Rev. A

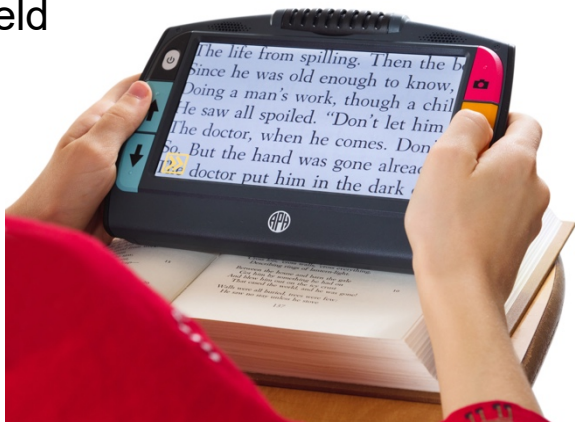


Charging Juno

Begin charging Juno before first use. When the light on the left side of the device is red, the battery needs to be charged. You can use the device for about three hours once the battery is fully charged. The charging LED light will turn green when the battery is charged.

To charge Juno:

1. Insert the USB Type C cable into the USB-C slot on the left side of the device.
2. Attach the power adapter to the USB-C cable, and plug the power adapter into an electrical outlet. You can alternately insert the cable into a computer without using the adapter, but this charging method is slower.

3. Power on Juno by pressing the white Power button . You can work when the LED is solid red, which means that the battery is charging. However, you should leave it plugged in until the light turns green. The image on the following page is a view of the back and left sides of the device.
4. Begin using Juno. Go to the next section, “First Use.”

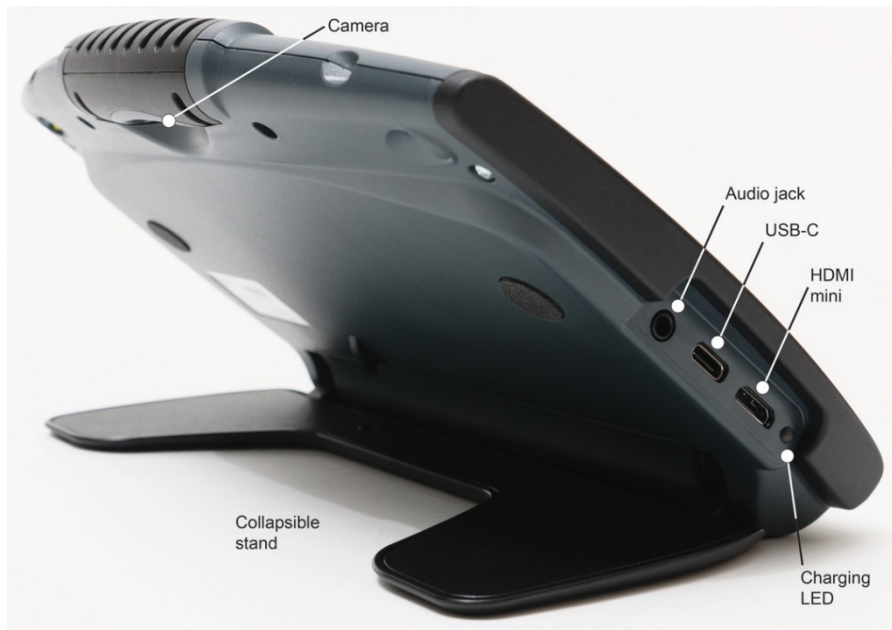

First Use

The first time you use Juno, you must follow these steps. You cannot exit once you start these steps and cannot use the device until you complete them. However, you can change these settings later if needed.

1. Plug in and power on Juno. See the previous section, “Charging Juno.”
2. On the **Select Juno Voice**, tap to select a female or male voice to narrate as you navigate Juno. Only English is available.
3. Tap the **Next** button . The **Select Date** screen is displayed.



4. Swipe up or down in each column and tap to select the month, day, and year. Tap the

Previous button  to return to the previous screen.

5. Tap the **Next** button . The **Select Time** screen is displayed.

6. Swipe up or down in each column and tap to select hours, minutes, and AM or PM.

7. Tap the **Next** button  to complete the setup. The Live view is displayed. Refer to the *Juno User Guide* for step-by-step instructions.





Hardware Buttons

See the *Juno User Guide* for more information about the hardware buttons.

Button	Name	Color	Location	Description
	Power	White	Top left	Press to power on the device. Short press to put on standby. Long press to power off.
	Color Mode	Blue	Middle and lower left	Press to cycle through true color, grayscale, and 22 high contrast color combinations.

Button	Name	Color	Location	Description
	Capture	Red	Top right	Press to capture a snapshot or go to live view. Optionally save a capture, recognize text, and read or listen to the text.
	Zoom in/out	Yellow	Middle and lower right	Press and hold for continuous zoom, press and release to incrementally zoom, or pinch and zoom on touch screen to increase or decrease magnification.

Button Bars on the Screen



Tap the **Restore** button in the lower left corner of the screen to display the button bars on the left and right sides of the screen.



Tap the **Hide** button to no longer display the button bars.



Main Menu



LED Lights
On and Off Toggle



Volume and
Speech Rate



Lines & Masks
Toggle



Restore & Hide
Button Bars



Focus Unlocked &
Locked Toggle

Main Menu Structure



See the *Juno User Guide* for features associated with these menus.





Files Menu



File Information screen



Edit screen



Record Audio Tag screen



Transfer screen



About Menu



Support screen

Support

Acknowledgements screen

Acknowledgements

Juno User Guide

Manual

Brightness Menu



Settings Menu



The **Settings** menu has four sub-menus, as shown on the following pages:

- Reading Settings
- Menu Settings
- User Settings
- System Settings

Reading Settings Menu



Viewing Modes screen



Default viewing mode (top right button)

Image mode



Teleprompter mode



Ticker Tape mode



Viewing Modes screen (continued)



Default highlighting mode (bottom right button)

Boxed



Underlined



Select Reading Language screen



Menu Settings Menu



Talking Menu screen



Voice Selection screen



Color Theme screen



Font Size screen



User Settings Menu



Color Modes screen



Standby Time screen



Juno Storage screen



System Settings Menu



Time & Date screen



Default Save Types screen



Update Juno screen



Reset All Settings screen

