



370-SUB-11 Muffler

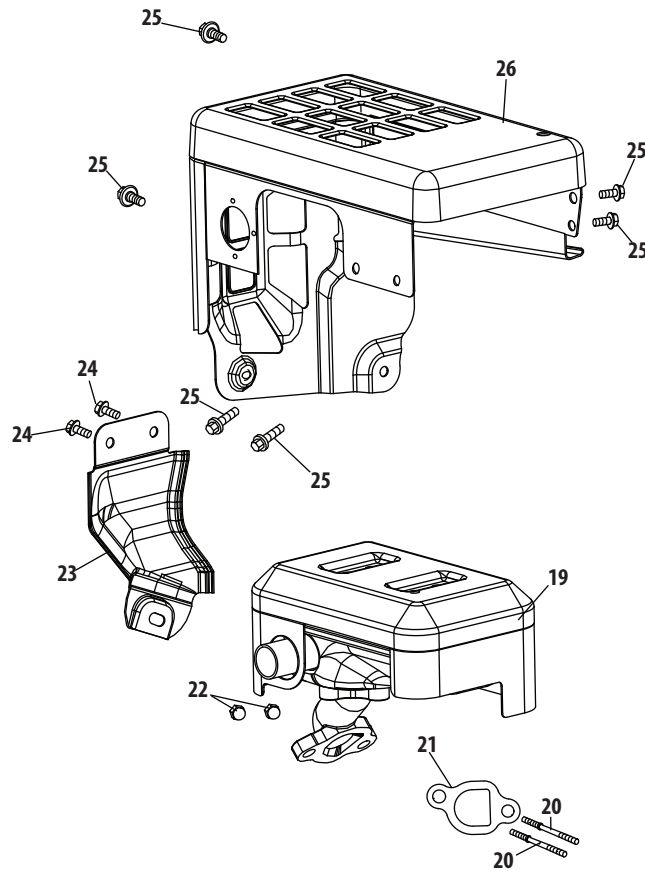


Ref.	Part Number	Description
19	951-11282	Muffler Assembly
20	710-04911	Muffler Stud M8×36
20	951-10657	Muffler Stud Assembly
21	951-11285	Exhaust Pipe Gasket
22	712-04214	Nut,M8
23	951-11111	Exhaust Pipe Shield
24	710-04914	Bolt M6×10
25	710-04915	Bolt M6×12
26	951-10642A	Muffler Shield
	777I22990	Label-Run/Choke
	777I22991	Label-Primer
	777I22992	Label-Electric Start
	777I23026	Label-Electric Start Warning
	777S33610	Label- Oil / Warning

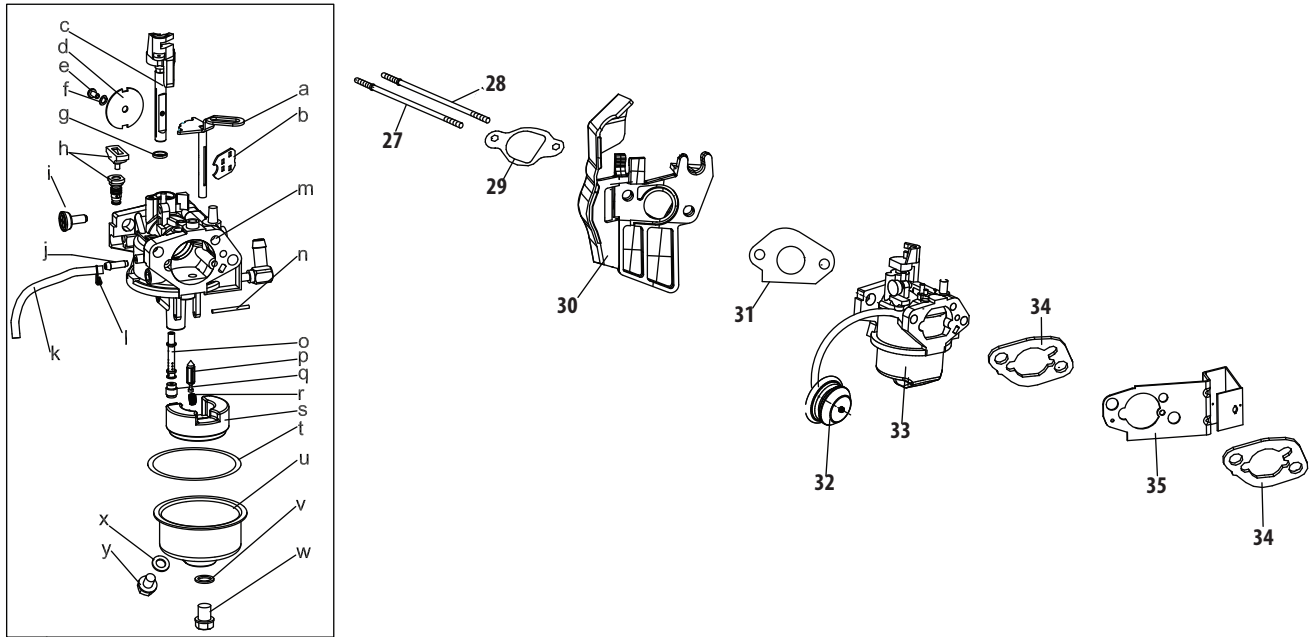

Ref.	Part Number	Description	Ref.	Part Number	Description
27	710-04939	Stud M6×117	j		Mixture Screw
28	710-04910	Stud M6×105	k	951-11699	Primer Hose
29	951-11567	Carburetor Insulator Gasket	l	951-11906	Hose Clamp
30	951-11896	Carburetor Insulator	m		Carburetor Body
31	951-11569A	Carburetor Gasket	n		Float Pin
32	951-10639A	Primer Assembly	o		Emulsion Tube
32	951-11824	Primer Bulb	p		Needle Valve
33	951-10638A	Carburetor Assembly	q		Main Jet
34	951-11897	Carburetor Gasket Plate	r		Needle Valve Spring
35	951-11112	Choke Control	s		Float
a		Choke Shaft	t	951-11589	Fuel Bowl Gasket
b		Choke Plate	u		Fuel Bowl
c		Throttle Shaft	v	951-11348	Fuel Bowl Gasket
d		Throttle Plate	w	710-04945	Fuel Bowl Mounting Bolt
e		Screw M3×5	x	951-11349	Fuel Drain Plug Gasket
f		Lock Washer	y	710-04938	Fuel Drain Plug
g		Gasket, Throttle Plate		951-11021A	Carburetor Kit - Major
h		Idle Jet Assembly			(Incl.g,h,l,n,o,p,q,r,s,t,v,x)
i		Idle Speed Adjusting Screw			

370-SUB-11 Crankcase

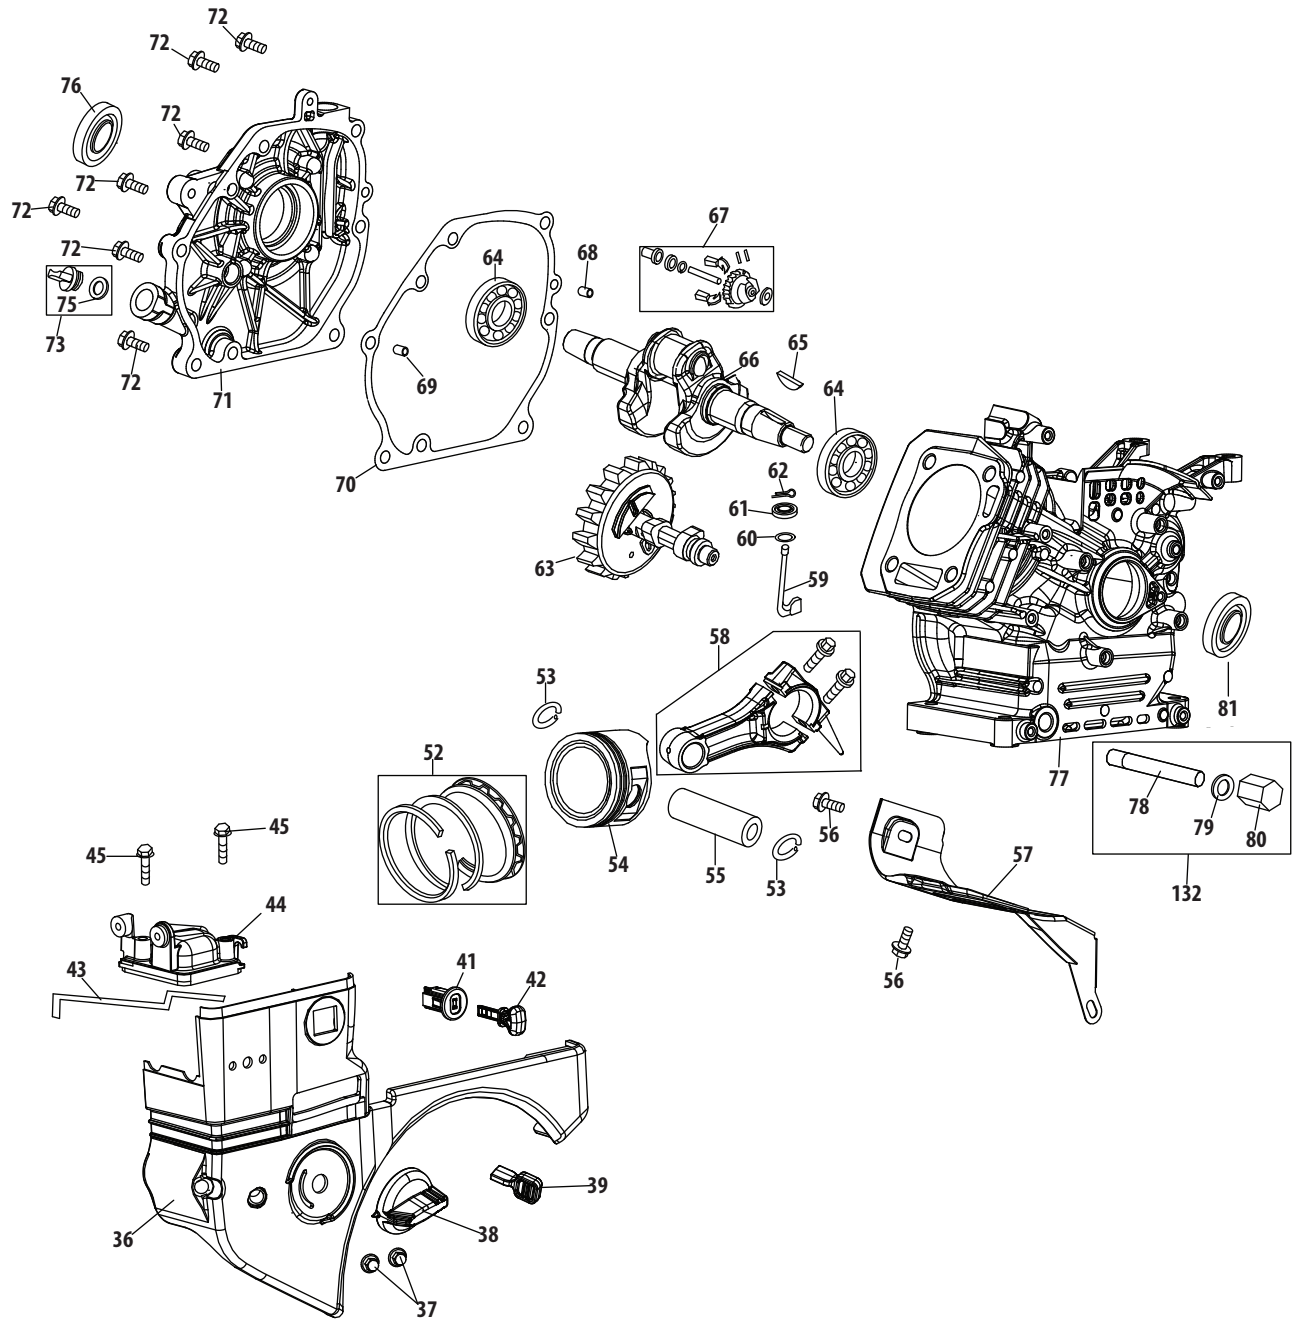


370-SUB-11 Crankcase

Ref.	Part Number	Description
36	951-10634	Air Cleaner Housing
37	712-04213	Nut
38	951-11284	Choke Knob
39	951-10757	Throttle Control Knob
41	951-10637	Key Switch Base
42	731-05632	Key
43	951-10640	Choke Push Rod
44	951-10635	Heater Box
45	710-04919	Bolt M6×25
52	951-12111	Piston Ring Set
53	951-11632	Piston Pin Snap Ring
54	951-12007	Piston
55	951-11633	Piston Pin
56	710-04915	Bolt M6×12
57	951-11113	Air Shield
58	951-11573	Connecting Rod Assembly
59	951-11356	Governor Arm Shaft
60	736-04461	Washer 5.2×1.9
61	951-11902	Governor Seal
62	714-04074	Cotter Pin
63	951-11575	Camshaft Assy.
64	951-11369	Radial Ball Bearing,6205
65	951-10307	Woodruff Key
66	951-11247A	Crankshaft Assembly
67	951-11576	Governor Gear/Shaft Assembly
68	715-04092	Dowel Pin 7×14
69	715-04089	Dowel Pin 9×14
70	951-11371	Crankcase Cover Gasket

Ref.	Part Number	Description
71	951-12125	Cover Comp,Left Crankcase
72	710-04932	Bolt M8×32
73	951-11283	Oil Fill Plug Asm
75	951-11577	O-Ring 15.8×2.5
76	951-11368	Oil Seal,25×41.25×6
77	951-11060A	Short Block (Incl.4,21,29,30,46,48,49, 52-55,58-72,74-81)
78	951-11350	Oil Drain Pipe Assy.
79	736-04440	Washer 10×16×1.5
80	710-04906	Oil Drain Plug
81	951-11370	Oil Seal 25×41.25×6
132	951-10641	Oil Drain Assembly
	952Z370-SUB-11	Complete Engine
	777I22990	Label-Run/Choke
	777I22991	Label-Primer
	777I22992	Label-Electric Start
	777I23026	Label-Electric Start Warning
	777S33610	Label- Oil / Warning
	951-11246	Crankcase Cover Kit (Incl.64,70-73,76)
	951-11247A	Crankshaft Kit (Incl.64-66,76,81)
	951-11249	Crankcase Kit (Incl.61,64,76,77,81)
	951-11059A	Gasket Kit - Complete (Incl.4,21,29-31,34,46, 60,61,70,76,79,81)


370-SUB-11 Starter Assembly & Blower Housing

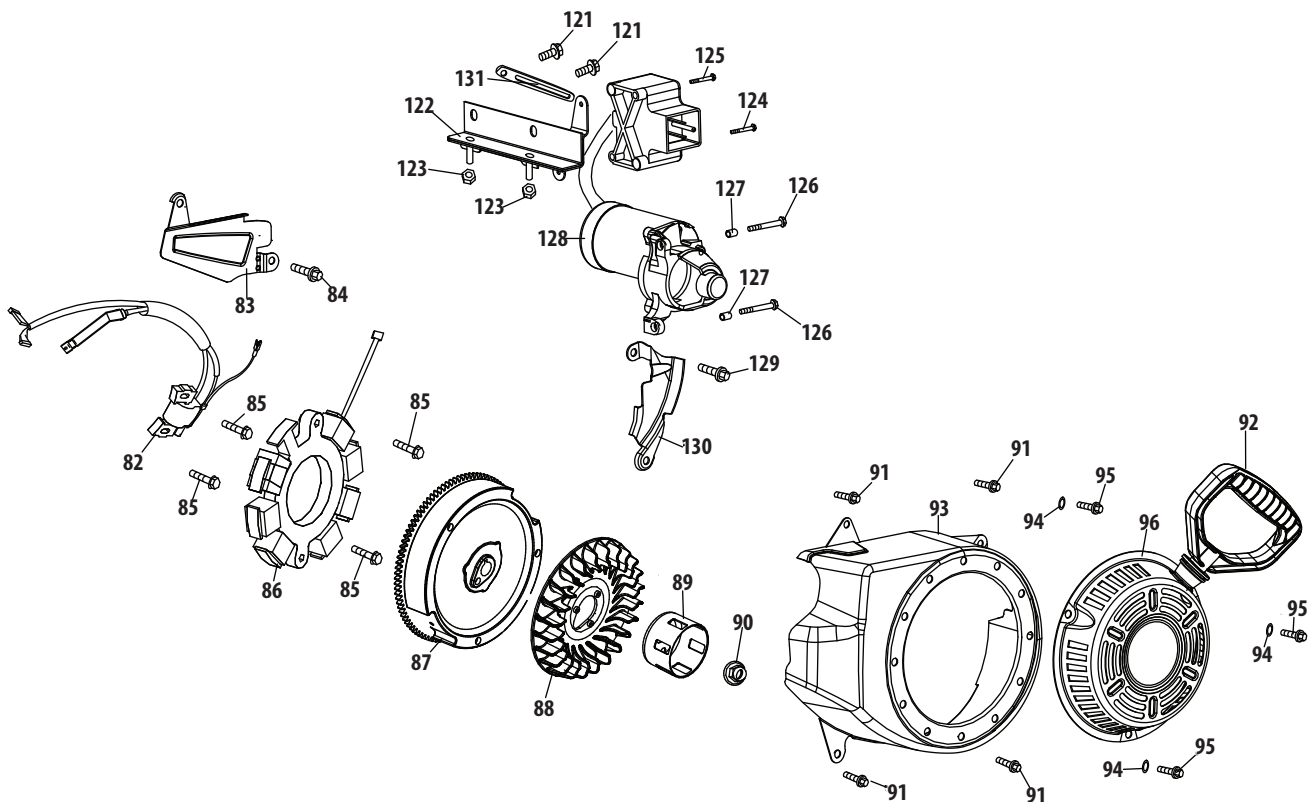

Ref.	Part Number	Description
82	951-10646	Ignition Coil Assembly
83	951-11110	Air Flow Shield
84	710-04940	Bolt M6x10
85	710-04919	Bolt M6x25
86	951-12050	Coil Assy., Charge
87	951-12051	Flywheel
88	951-10909	Fan, Cooling
89	951-10911	Pulley, Starter
90	712-04209	Nut, Special, M14x1.5
91	710-04915	Bolt M6x12
92	731-05696	Recoil Starter Handle
93	951-10663A	Blower Housing
94	736-04455	Gasket 6

Ref.	Part Number	Description
95	710-04974	Bolt M6x10
96	951-10658	Recoil Starter
121	710-04914	Bolt M6x10
122	951-11114	Switch Housing Mounting Bracket
123	712-04212	Nut, M6
124	710-04965	Bolt M4x55
125	710-04935	Bolt M4x60
126	710-05182	Bolt M6x32
127	715-04088	Dowel Pin 8x8
128	951-10645A	Startup Electromotor
129	710-04979	Bolt M6x18
130	951-11109	Blower Housing Shield
131	951-11680	Flexible Clamp


370-SUB-11 Fuel Tank & Mounting

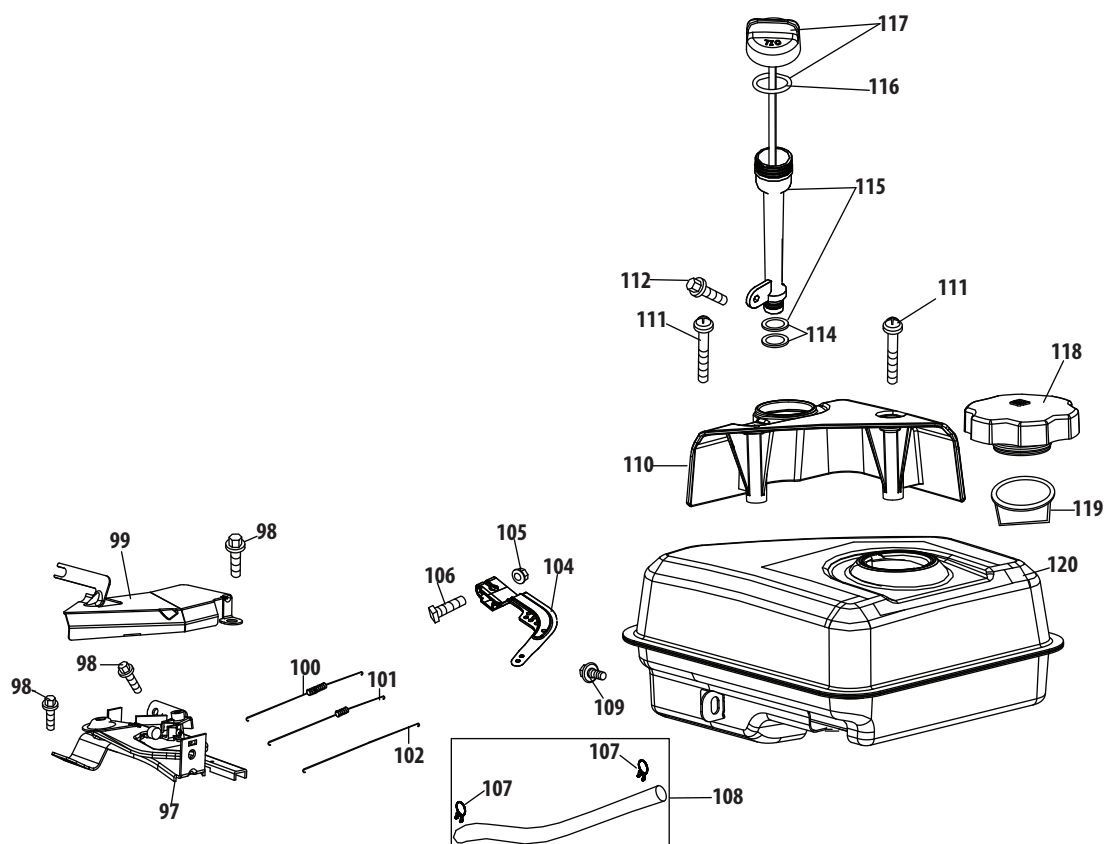

Ref.	Part Number	Description
97	951-10758	Primer Bracket
98	710-04928	Bolt M6×12
99	951-11108	Governor System Shield
100	951-11935	Governor Spring
101	951-10664	Throttle Linkage Spring
102	951-10665	Throttle Linkage
104	951-11106	Governor Arm
105	712-04212	Nut M6
106	710-04908	Governor Arm Bolt
107	951-11700	Fuel Hose Clamp
108	951-10650	Fuel Hose
109	710-04915	Bolt M6×12
110	951-10662	Dipstick Decoration Cover
111	710-04905	Bolt

Ref.	Part Number	Description
112	710-04915	Bolt M6×12
114	951-11381	Oil Fill Tube O-Ring
115	951-11913	Oil Fill Tube
116	951-11904	Oil Fill Tube O-Ring
117	951-12482	Dipstick Assembly
118	951-10649A	Fuel Cap Assembly
119	951-11933	Fuel Level Indicator
120	951-10653B	Fuel Tank Assembly
	777I22990	Label-Run/Choke
	777I22991	Label-Primer
	777I22992	Label-Electric Start
	777I23026	Label-Electric Start Warning
	777S33610	Label- Oil / Warning

370-SUB-11 Cylinder Head

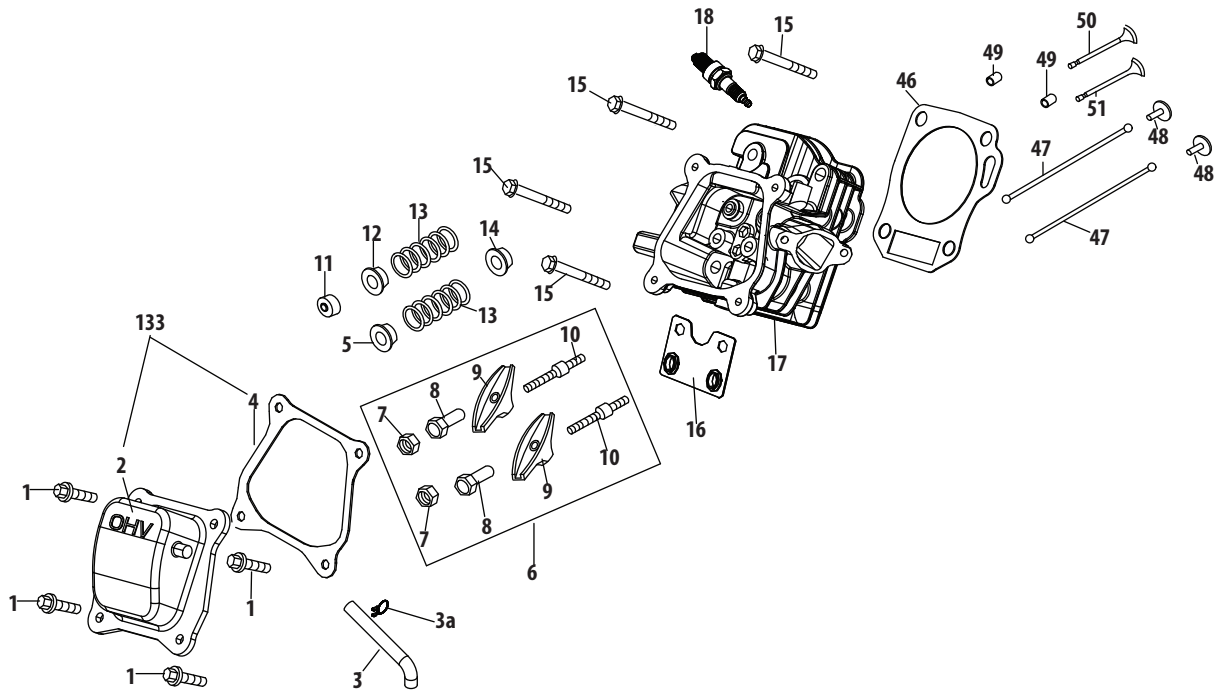

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-11054	Valve Cover
3	731-07059	Breather Hose
3a	726-04101	Breather Hose Clamp
4	951-11565	Valve Cover Gasket
5	951-12000	Retainer,In.Valve Spring
6	951-11892	Rocker Arm Assembly
7	751-11124	Nut,Pivot Locking
8	751-11123	Adjusting Nut ,Valve
9	951-11893	Rocker Arm
10	710-04902	Bolt,Pivot
11	951-12002	Adjuster,Exh Valve
12	951-12003	Retainer,Ex.Valve Spring
13	951-12004	Valve Spring
14	951-11894	Intake Valve Seal
15	710-04933	Bolt M8×55
16	951-11895	Push Rod Guide
17	951-10668A	Cylinder Head Assembly (Incl.4,5,7-14,16,17,21, 29,30,46,50,51)
18	951-10292	Spark Plug/F6Rtc
46	951-11572	Gasket,Cylinder Head
47	951-10648	Push Rod
48	951-11899	Tappet
49	715-04090	Dowel Pin 10×16
50	951-10647A	Exhaust Valve
51	951-10647A	Intake Valve
133	951-11063A	Valve Cover Kit
	952Z370-SUB-11	Complete Engine
	951-10661B	Gasket Kit - External (Incl.4,21,29-31,34,79)
	951-11059A	Gasket Kit - Complete (Incl.4,21,29-31,34,46, 60,61,70,76,79,81)