


PANTONE™


WIRELESS HEADPHONE

PT-WH008U, PT-WH008P, PT-WH008L, PT-WH008N

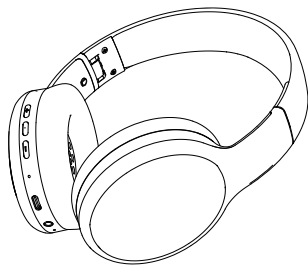

PRODUCT OVERVIEW

- ▶▶ +** : Press to increase volume level.
Double click to play next song
- ▶||** : Press and hold to turn headphone on/off. Press to answer an incoming call or pause song.
- ◀** : Press to decrease volume level. Double click to play previous song
- LED indicator: Flashes white/green when in pairing mode.
LED indicator will turn off when successfully paired.
Lights up green during charging and turns off when fully charged.
- USB charging port: Connect the supplied USB-C cable to the port and the other end to a power source.
- AUX port: connect the supplied 3.5mm audio cable to the port and the other end to your audio device for music playback.
- Microphone

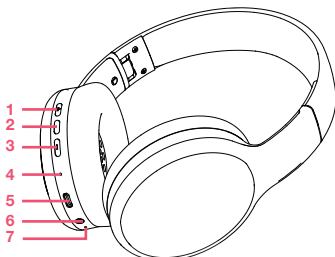

OPERATION

Power on and pair with a Bluetooth Device

Press and hold the **▶||** button on the headphone. The LED status indicator will flash white/green, indicating it is ready to pair with a Bluetooth device. Turn your smart phones Bluetooth on and select “PT-WH008” on the list of available devices. Once successful, you will hear a notification sound and the LED status indicator will turn off. Music from your smart phone will now be played through the headphones.

- Press the **▶▶ +** button to increase volume level.
Double click to play next song
- Press the **— ◀** button to decrease volume level.
Double click to play previous song

Bluetooth Call and Voice Assistant Function

Once successfully connected to your smart phone, you can answer/reject incoming phone calls. Press the **▶||** button to answer an incoming call. Press and hold the **▶||** button to reject the call.

- Press the **— ◀** button to decrease volume level.
- Press the **▶▶ +** button to increase volume level.
- You can also press and hold the play/pause **▶||** button on the headphone for 2 seconds to command Siri or Google assistant of your smart phone.

AUX Mode

Connect the supplied 3.5mm audio cable to the AUX port of the headphones and the other end to your audio device. The headphone will automatically switch to AUX mode and power off.

Power Off and Charging

When the battery is low, a voice prompt will be heard. Connect the supplied USB-C charging cable to the USB-C port and the other end to a USB power source. The LED status indicator will light up green during charging and turn off when fully charged. Press and hold the **▶||** button to power off the headphones. If not paired with a Bluetooth device, it will automatically power off after 5 minutes.

TROUBLESHOOTING

Problem	Solution
Cannot hear audio through headphones	<ul style="list-style-type: none">Ensure the headphones are paired with your smart phone, the LED indicator will flash white/green slowly.Increase the volume.Power off your headphones then power them on and pair with your smart phone again.
Headphone not charging	<ul style="list-style-type: none">Ensure you are connected to a USB power source.
Cannot connect to smart phone	<ul style="list-style-type: none">Ensure headphone is on before pairing.Ensure your smart phone's Bluetooth is turned on.Please power off headphones and start again.

SPECIFICATIONS

Power input	5VDC, 200mA
Playback time	12 hours*
Charging time	2-2.5 hours
Battery	3.7V 250mAh
Frequency band	2.4Ghz band (2.4000GHz-2.4835GHz)
Operating frequency	Bluetooth: 2,400MHz-2,483.5MHz
Dimensions (L) x (D) x (H)	171 x 82 x 197mm
Weight	175g

* 12 hours of playback time is based on volume no higher than 80%

For Technical and Warranty Support
PH : 1-866-235-5029 serviceusa@tempo.org

Tempo International GmbH
3570 NW 53rd Court Fort Lauderdale, FL
33309

Compliance and Responsible Disposal

Tempo International Fulfillment
3570 NW 53rd Court
Fort Lauderdale,
FL 33309

GENERAL SAFETY WARNINGS

This product complies with CSA/UL 62368-1:2019, UL 1642, UL 2054 to ensure the safety of the product.

IMPORTANT WARNINGS AND CAUTIONS

- Do not change or modify the appliance in any way.
- Only use the attachments/accessories specified by the manufacturer.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Risk of hearing damage: Never place the headphones on ears BEFORE turning them on, as the sudden volume may be too high and could cause hearing damage.
Keep the headphones out of ears until you have turned down the volume. Test this by playing the music and holding the headphones near (but not IN) your ear, as you turn the volume down. Once the volume is turned down, you can place the headphones onto ears and gradually increase the volume to the desired level.
Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
To prevent environmental factors (dampness, dust, food, liquid etc.) harming the power bank, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture. Keep the product away from direct sunlight or heat sources.
In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only. Children should be supervised to ensure they do not play with the product.
Do not put any object on top of the product.
Do not place or store appliance where it can fall or be pulled into a bath or sink.
This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
Do not expose the product to microwaves.
Clean using a dry cloth only - do not use water or chemicals.
Keep the product away from oils, chemicals or any other organic liquids.
Use this appliance only for its intended purpose as described in this guide.

Disposal
Responsible disposal of the packaging



Sort the packaging before you dispose of it. Dispose of cardboard and carton as waste paper and wrapping via the recyclable material collection service.

Disposal of the headphones

Old appliances may not be disposed of in the household trash!
- Should the headphones no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in force in your city or state.
- Please ensure your recycling information conforms with the local regulations and EPA recommendations (www.epa.gov).

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.
Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



CAUTION
The battery in this device is non replaceable.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

2024 © DATAplus Supplies, Inc. Registered in Taiwan All brands are used under license. Designed by DATAplus, Assembled in China.

PANTONE and the PANTONE Chip Design are trademarks of Pantone LLC in the United States and/or in other countries. © Pantone LLC, 2024. All rights reserved. This is an authorized PANTONE product manufactured under license by DATAplus Supplies, Inc.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.