

# Quick Start Guide

## **PowerXL™** products that excel **VORTEX PRO AIR FRYER PLUS**

See owner's manual for complete instructions and important safety information before using this product.

**IMPORTANT:** Unpack all parts from the box and remove any clear or blue protective film on the components. Check all packaging material thoroughly for accessories. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).

### STEP 1



#### **Attach Fry Basket Handle**

Remove the paper label. Pull the Fry Basket out of the appliance. Slide the attachment point on the handle downward until it clicks into place.

### STEP 2



#### **Load Basket**

Place the Fry Tray in the Basket. Arrange the food on top of the Fry Tray.

### STEP 3



#### **Return Basket to Appliance**

Push the Basket straight in until it clicks.

### STEP 4



#### **Power Appliance On**

Set the time or temperature or select a preset. Follow instructions specific to your recipe.

### STEP 5



#### **Remove Basket**

Set the Basket on a secure, heat-resistant surface. Use tongs to remove food.



For parts, recipes, accessories, and everything PowerXL, go to [tristarcares.com](https://tristarcares.com) or scan this QR code with your smartphone or tablet: