Panasonic

Operating & Installation Instructions

Washer Dryer (Household Use)

Model No. NA-S106FR1





It is essential to read these instructions.

EN

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

Contents

	Safety Precautions	2
	Checking Your Appliance	7
	Before Washing	8
	Control Panel	10
	Detergent	12
	Washing & Drying	14
	Program List	16
	Details of Programs	18
	Washing & Drying Tips	20
	Changing Program Settings	22
	Changing Appliance Settings	28
	Maintenance	29
	For Better Results	33
	Troubleshooting	34
	Error Display	40
- L	Choosing the Right Location	42
latic	Moving and Installing	43
nstallation	Connecting the Hoses	45
<u>n</u>	Test Run	47
	Specifications	48
	-	



Safety Precautions

N WARNING

May cause serious injury or death

Children must not use it alone.




- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.


Setting the Child Lock. (P. 28)




May cause fire or electric shock

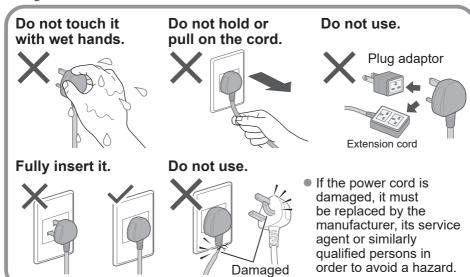

In case of failure or damaged power cord, stop use and ask the electrical technician.

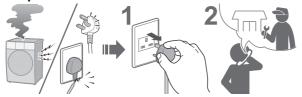

Accumulated dust may cause fire.

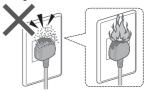

Securely insert the ground prong. Ask the electrical technician for a new socket, periodically.



Wipe the power plug



Use a socket appropriate for this appliance.







 The plug shape, socket shape and rating requirement vary with the region.

Keep away from flammable materials.



May cause failure

Do not disassemble, repair or modify it by yourself.



Safety Precautions (continued)

WARNING

May cause fire (For safety use of the dryer)

Do not dry items soiled with flammable materials.



• Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, wax removers and cosmetic oils must not be dried in the appliance even after having been washed.

Empty all pockets.



 Make sure that no objects are left in any of the pockets. Pay particular attention to cigarette lighters and matches. They may cause fire.

Do not dry items made of rubber, etc.



- Items such as foam rubber (latex foam), shower caps, waterproof textiles, airtight fabrics, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance. Such materials may be destroyed and thereby damage the appliance.
- Do not dry unwashed items in the appliance.

The lint must not be allowed to accumulate around the appliance.




Observe the following.


- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

CAUTION

May cause water leakage

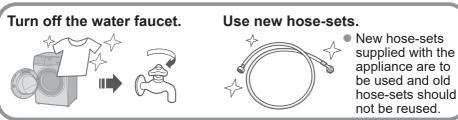

May cause injury

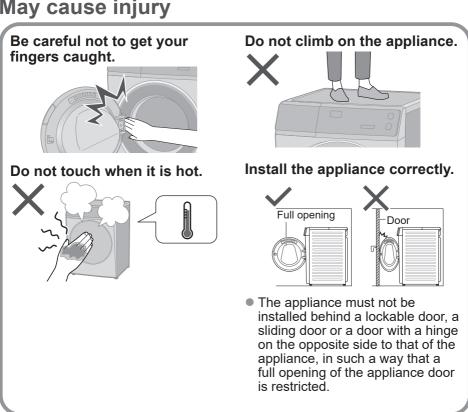

■ For maximum mass of dry cloth and pressure of tap water, see P. 48.

Safety Precautions (continued)

CAUTION

May cause failure

Keep away from heat and direct sunlight.



Do not obstruct.




Do not obstruct the openings of the bottom face with carpet, etc.

Remove shipping bolts before operation.



Do not use hot water.

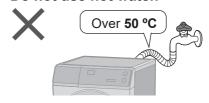

For machine-washable items only.



- This appliance is intended to be used in household.
 - This appliance is not intended to be used in applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses:
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in launderettes

Do not wash excessively oily Follow the instructions. clothes.






 Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Checking Your Appliance

Part names

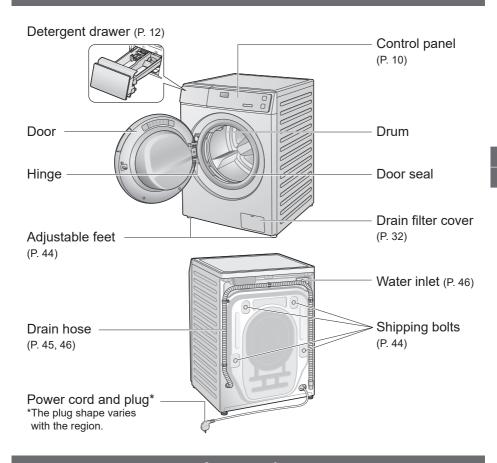

Accessories

☐ Hose hanger (1) (P. 46)



☐ Water supply hose (1) (P. 45, 46)



☐ Cover cap (4) (P. 44)



☐ Bottom cover (1) / Screw (1) (P. 43)



Before Washing


Preparing laundry

Before put clothes in drum


Remove foreign objects.




 Use laundry nets for delicates and small items.

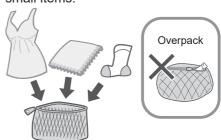


Pre-laundry check

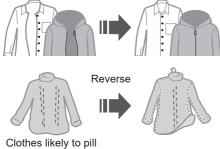

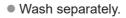



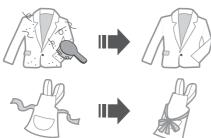

Pretreat for heavy stains.



Observe care labels.



NOTE

• "Stain Master+" programs (P. 16, 17) are recommended for removing stains.

Cannot wash or dry

Cannot wash or dry



Leather / fur



Silk, rayon and cupro (Blended fabric)



Commercially available washing aids



Cap with hard core materials



Cushion, Pillow, etc.



Urethane / rubber backed or thick mats



Paper diapers

Others ...

- Wrinkled and embossed articles
- Crepe fabric
- Deformable clothing (blazers, ties, dresses, etc.)
- Velvet

Cannot dry



Any of the above marks



Woollen clothing



Tights or pantyhose



Mats and other items with hair of pets attached



Quilts



Starched clothing




Clothing with laces or embroidery, new synthetic fibres, etc.


NOTE

 May cause clothing deformation, damage and harm or malfunction to the appliance.

Control Panel

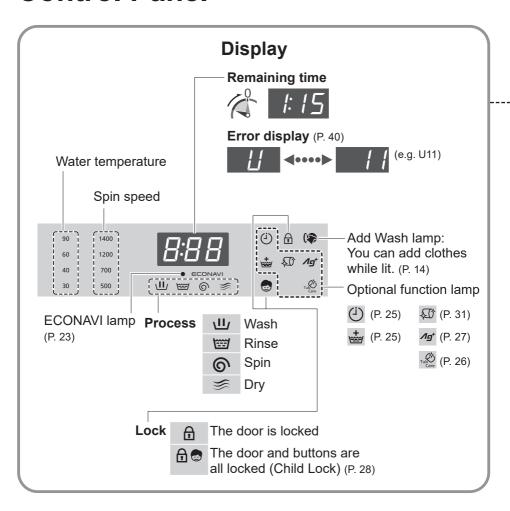

Control buttons

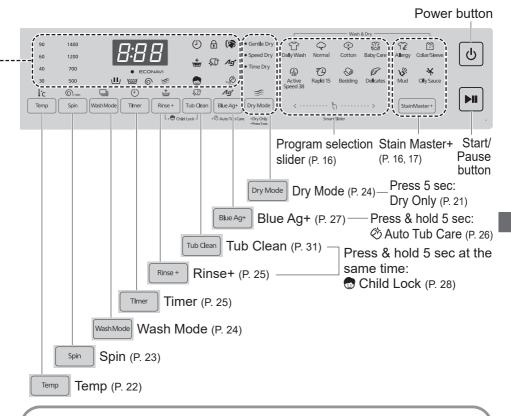

Touch operation

 If water, detergent or softener gets on, turn off and wipe off with a towel etc. immediately. (Cause of malfunction)



NOTE

- Turn off 🕪 back on
 - Turn off 3 sec. On
- No operation ⇒ auto power off
 - (Not pressed 🔰) Auto Power off
- In case of a power failure
 - When the power recovers, operation resumes from where it stopped. (Auto Restart)


Detergent


Follow the instructions on each package.


Detergent

Use a low foam detergent.


 To prevent powder detergent from remaining in the detergent drawer:

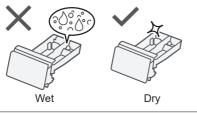

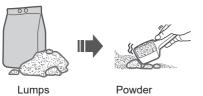

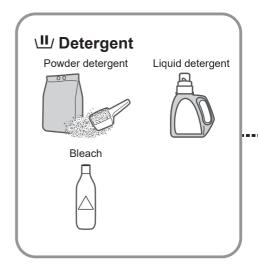

Fabric softener

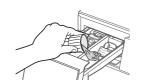







Separated or solidified softeners






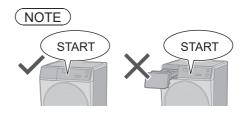

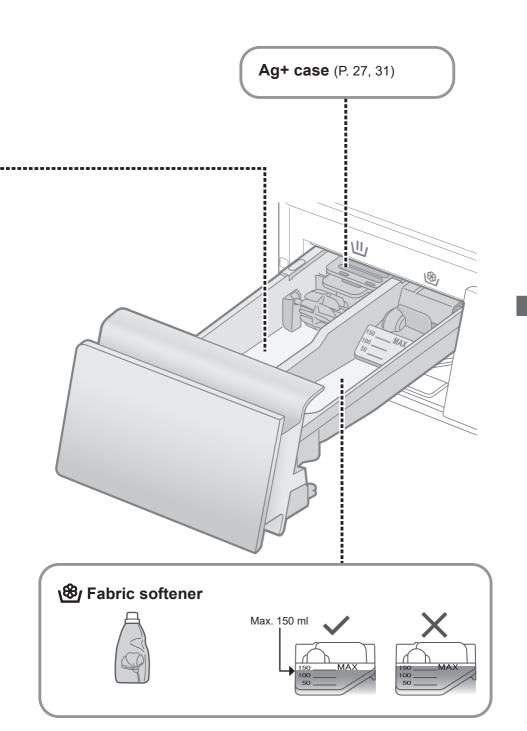

Washing & Drying

Basic Method

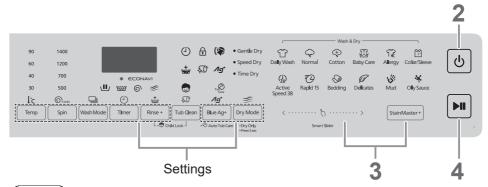

NOTE

■ Do not let laundry get caught in the door.




■ Do not overfill the drum with laundry.



- To open the door during operation
- During washing (You can add clothes when lit.)



During drying

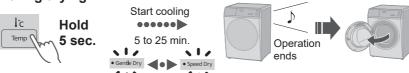



(NOTE)

Door does not open

(P. 35)



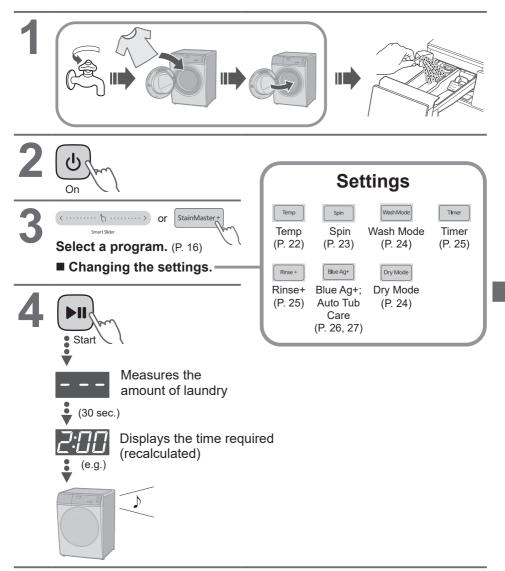

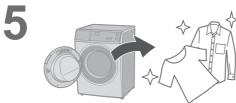

Program List

WASH & DRY / WASH

		Max load (kg)		Total time	
Program	Program Description		Dry	WASH	WASH & DRY
பி Daily Wash	Everyday clothes (Quicker than "Normal" program)	10.0	6.0	1:30	4:53 - 7:25
○ Normal	Everyday clothes	10.0	6.0	2:54	6:10 - 8:50
Cotton	• Gentle wash with extra time	10.0	6.0	3:00	6:18 - 8:18
Clothes for babies & sensitive skin Rinsing thoroughly Baby Care		5.0		2:20	5:45 - 7:35
Cleaning the drum.		None		3:45	4:25
StainMaster+	For the following stains				
1 Allergy	• For mites and pollen	10.0	6.0	3:15	5:53 - 9:13
Collar/ Sleeve		10.0	6.0	3:10	6:35 - 8:30

WASH

Program	Description	Max load (kg)	Total time
Active Speed 38	• Small loads	5.0	0:38
Rapid 15	Small loads of lightly soiled	2.0	0:15
⊘ Bedding	• Large items	3.0	1:30
	Washing gently	2.0	0:50
StainMaster+	For the following stains		
₩ Mud		10.0	3:30
→ Oily Sauce	535	10.0	3:00

DRY

Program	Description	Max load (kg)	Total time
Dry Only	Used to dry clothes.		
Hold 5 sec.	27	6.0	1:54 - 6:00

Total time is approximate (When the standard water supply rate is 15 L / min).
 For each program's default water temperature.

Details of Programs

_					
Settings		Auto setting			
Program		Temp (°C)	Spin (r/min)	Dry	Temp (°C)
	Daily Wash	40	1200	Gentle	Cold, 30, 40, 60
	Normal	40	1200	Gentle	Cold, 30, 40, 60
	Cotton	60	1400	Gentle	Cold, 30, 40, 60
WASH & DRY	Baby Care	40	1400	Gentle	Cold, 30, 40, 60
	Allergy	90	1200	Gentle	60, 90
	Collar/Sleeve	40	1200	Gentle	40
	₹ Tub Clean	40	1200	Speed	40
	Daily Wash	40	1200	_	Cold, 30, 40, 60
	○ Normal	40	1200	_	Cold, 30, 40, 60
	Cotton	60	1400	_	Cold, 30, 40, 60
	Baby Care	40	1400	_	Cold, 30, 40, 60
	Allergy	90	1200	_	60, 90
	Collar/Sleeve	40	1200	_	40
WASH	₹ Tub Clean	40	1200	_	40
	(j) Active Speed 38	40	1200	_	Cold, 30, 40
	Rapid 15	Cold	1200	_	Cold
	Bedding	Cold	700	_	Cold, 30
		30	500	_	Cold, 30, 40
	₩ Mud	40	1200	_	40
	★ Oily Sauce	40	1200	_	40
DRY	Dry Only		✓ *1	Gentle	_

NOTE)

For normally soiled laundry at the rated capacity, we recommend using the "Cotton, 60 °C, 1400 r/min" which is tested in accordance with IEC 60456 for the energy and water efficiency aspects.

Actual water temperature may differ from the declared cycle temperature.

These results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling, utilized detergent, fluctuations in the main electricity supply and chosen additional options.

Setting range			Op	otional	functio	ns _	
Spin (r/min)	Dry Mode	Wash Mode	Dry Mode	Timer	Rinse+	Blue Ag+	Auto Tub Care
1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
1200	Gentle, Speed, Time	_	✓	✓	✓	_	✓
1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
1200	Speed	_	✓	_	_	_	_
Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
Ø, 500, 700, 1200	_	_	_	✓	✓	_	✓
Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
1200	_	_	_	_	_	_	_
Ø, 500, 700, 1200, 1400	_	✓	_	✓	_	✓	✓
Ø, 500, 700, 1200	_	_	_	✓	_	_	_
Ø, 500, 700	_	✓	_	✓	✓	✓	_
Ø, 500	_	√	_	_	✓	✓	_
Ø, 500, 700, 1200, 1400	_	√	_	✓	✓	✓	✓
Ø, 500, 700, 1200, 1400	_	✓	_	√	✓	✓	✓
_	Gentle, Speed, Time	_	✓	_	_	_	_

[•] Setting time for Time Dry: 30, 60, 90, 120, 180, 210 min.


^{*1} In case of "Gentle Dry" or "Speed Dry" mode,
If the weight of clothes is heavy, spin is performed: 1200
If the weight of clothes is light, spin is not performed:

Washing & Drying Tips


Bedding

■ Washable items

- 🗃 🙀 (Wash) 🖼 (Handwash)
- 100 % cotton or 100 % synthetic

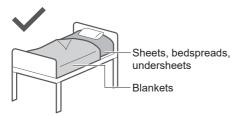



■ Not washable items

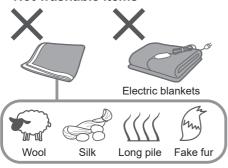



■ Putting blankets into the drum

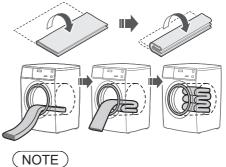

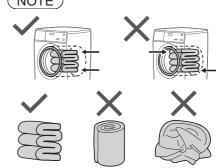

Delicates

■ When washing

 To rinse fully, use the "Rinse+" function. (P. 25)



■ After operation ends



Dry Only

You can change dry modes depending on clothes.





Hold 5 sec. (for Dry Only)

3 Select Dry Mode.



4 Start

Dry Mode	Description
Gentle Dry	For heat-sensitive clothes (Max. 6.0 kg).
Speed Dry	For clothes not easy to be wrinkled (Max. 6.0 kg).
Time Dry 30 60 120 120 120 2 10	For clothes easy to be wrinkled. Thinner plain woven and crepe texture etc. For small amount laundry (Max. 0.5 kg). *Time: 30 min. *After drying: Take out immediately
	• For half-dry clothes. *Time: 30 min. and more



Open the tap even in drying.



 The door is locked during drying.



Changing Program Settings

■ Preparing

- Sort the laundry and put it into the drum. (P. 8)
- Add the detergent. (P. 12)




Select a program. (P. 16)

Smart Stder

or

StainMaster

Change the program's settings.

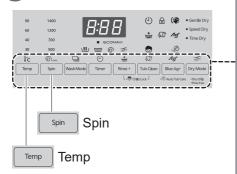

- Available options and setting ranges are different depending on the program. (P. 18)
- An alarm sounds if you select an option that is unavailable.


4 Start



Change the washing temperature.




■ Setting guide

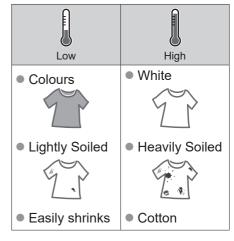




⊚r/min Spin

Change the spin speed.

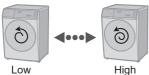

■ Setting guide

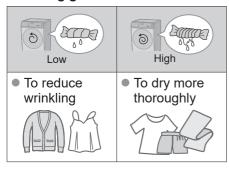

3 Spin (P. 19)


■ To change the setting while washing



1 Pause

2 Spin Spin

3 Start

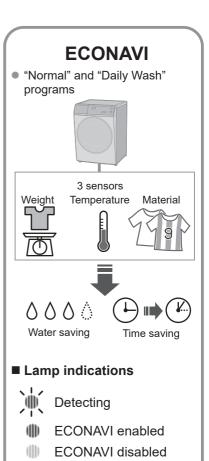

Changing Program Settings (continued)

■ Preparing

- Sort the laundry and put it into the drum. (P. 8)
- Add the detergent. (P. 12)



2 Select a program. (P. 16)



Change the program's settings.



- Available options and setting ranges are different depending on the program. (P. 18)
- An alarm sounds if you select an option that is unavailable.

4 Start

Wash Mode

Select a combination of wash, rinse and spin.





∐ /*1	Wash
*2	Rinse
⑥ *2	Spin
₩	Wash and rinse
业 ⑥	Wash and spin
₩ 6 *2	Rinse and spin

- *1 Water is drained after wash process.
- *2 Drains first if there is water in the drum.


Select a combination of processes.





(i) Timer

Set how many hours later to finish operation. (Up to 24 hours)

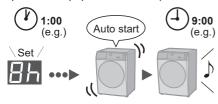




Add an extra rinse.






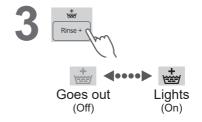


■ To check a preset time



■ To cancel settings

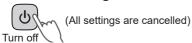


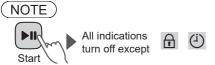

Not available: P. 19

■ To change the setting while washing



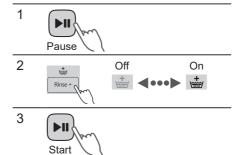

Changing Program Settings (continued)

■ Preparing

- Sort the laundry and put it into the drum. (P. 8)
- Add the detergent. (P. 12)



Select a program. (P. 16)

Smart Sider

or

StainMaster+

Change the program's settings.



- Available options and setting ranges are different depending on the program. (P. 18)
- An alarm sounds if you select an option that is unavailable.

4 Start



Add tub cleaning process.








NOTE

The setting is memorized.

/ Blue Ag+

Bacteria elimination function (Max. 3.0 kg).



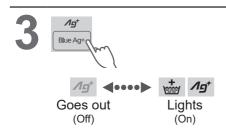

■ Service life for Ag+ case


- "Blue Ag+" works for about 300 to 350 times (for about 7 years if used once a week).
- Replace the case when the contents are decreased.





- Replace
- (P. 31)

Wash without "Ag+"

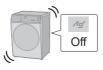

NOTE

 Do not use the water for other purposes.



- The kind of clothes, detergent, softener, and water hardness may affect the result.
- Stop use if itchy, etc.









Changing Appliance Settings

Setting the Child Lock

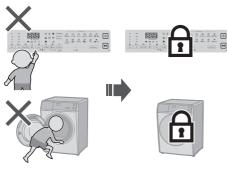



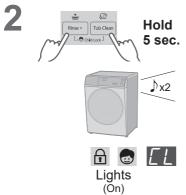


■ To cancel:





Cancelling the buzzer

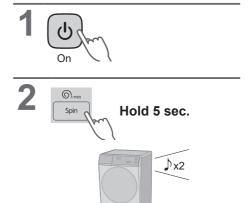

■ To reset:




Maintenance

Water supply filter

If water does not flow smoothly






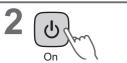









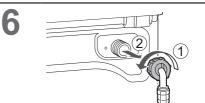

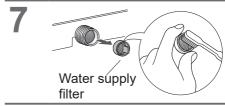




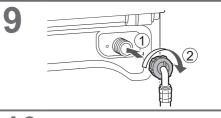




Maintenance (continued)

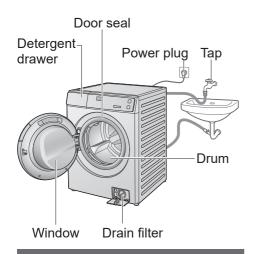


Appliance

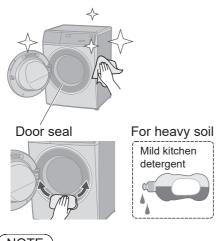





 Do not use gritty cleaners or thinners, or products containing alcohol or paraffin oil.


Detergent drawer

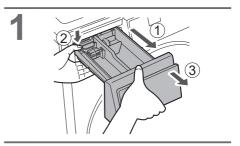

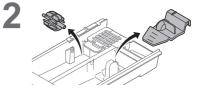




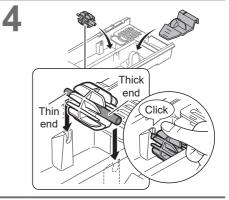


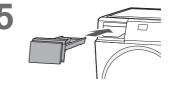

If the contents are decreased

■ Change Ag+ case

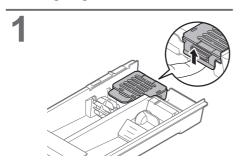

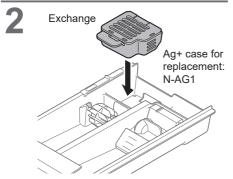

NOTE

You cannot open Ag+ case.

Drum

Once a month or if flashes <Tub Clean>

1





• for Wash

Tub Clean

for Wash & Dry







NOTE


 If the "Tub Clean" program is not run, the indicator goes off when other program is run 3 times.

Maintenance (continued)


Drain filter


Once a month


Be sure to drain water in the drum before this procedure.

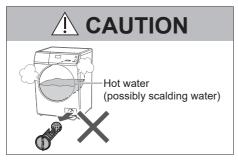




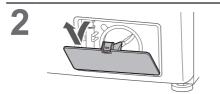


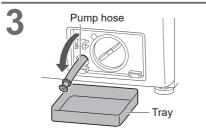


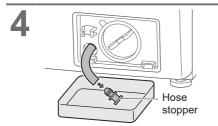



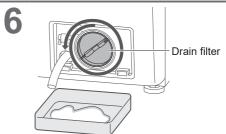

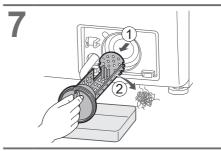


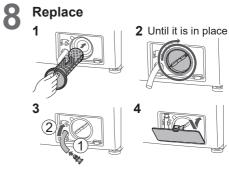


For Better Results


Symptoms	Tips for nice finish
Shrunken clothes	If cotton products have shrunk by drying Moisten and stretch.
19 · · · 19	Worden and stretch.
	Reduce clothing amount.
Hand feeling changes by wrinkles	• Select dry mode. (P. 21)
WITINIES	
5	Depending on clothes
ASS	• After drying
	Take out immediately
	Reduce clothing amount.
 Drying is insufficient Drying is uneven 	
	• Turn on.
Feel rough	When towels feel rough after washing
	Fabric softener If still feel rough
Lint is attached	• "Rinse+" or "Tub Clean"
	Rinse + Or Tub Clean (P. 25) (P. 31)


Troubleshooting

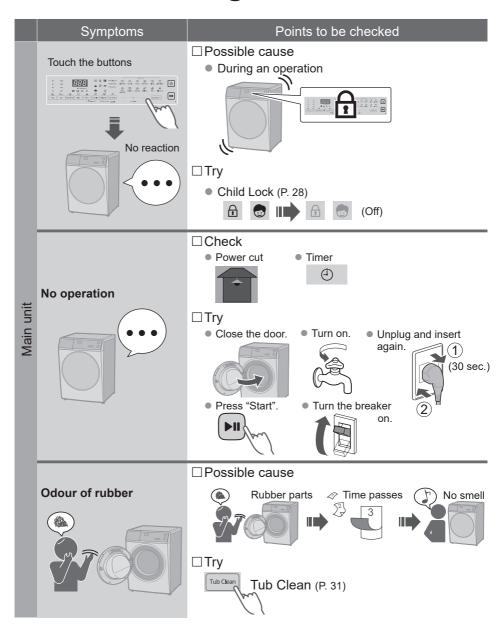

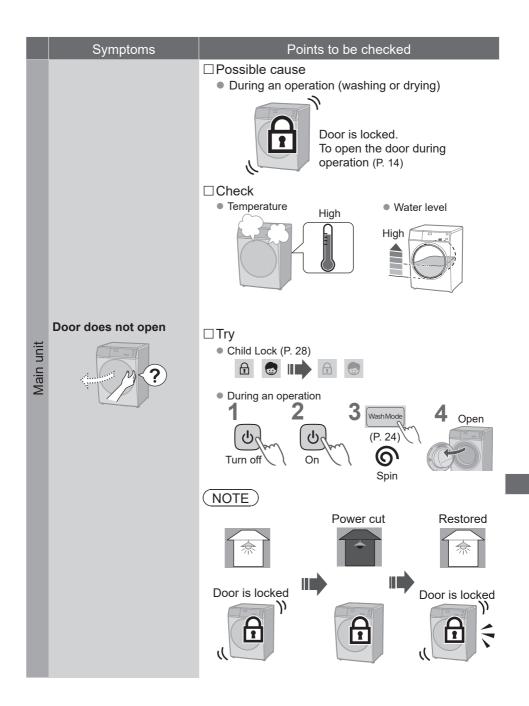



Troubleshooting (continued)

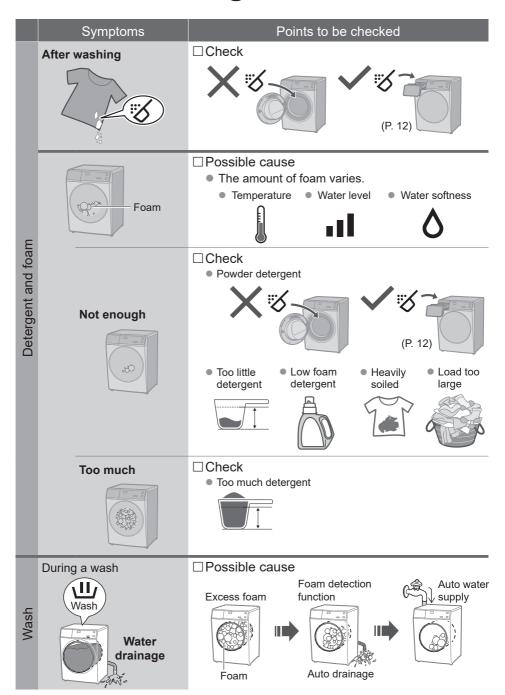

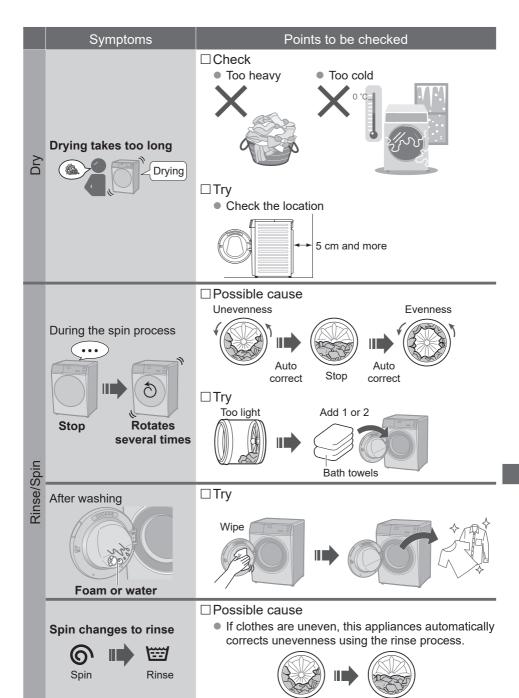



Troubleshooting (continued)

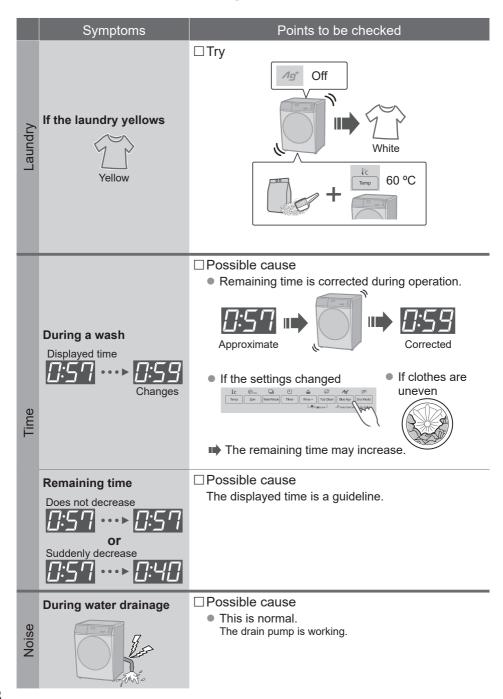

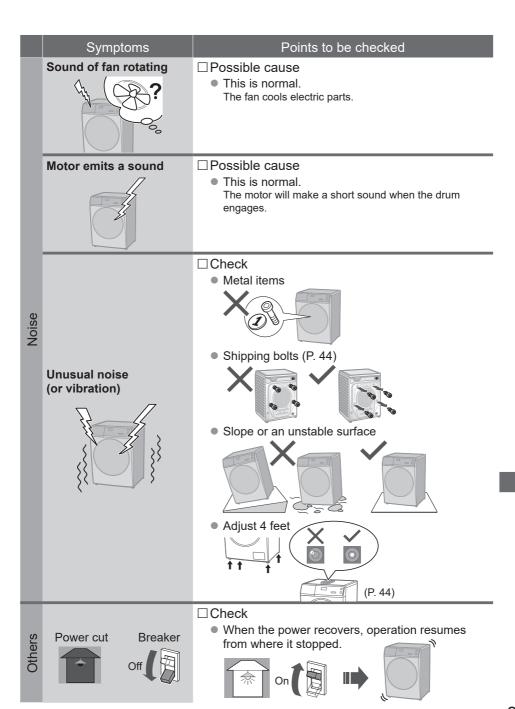


Error Display

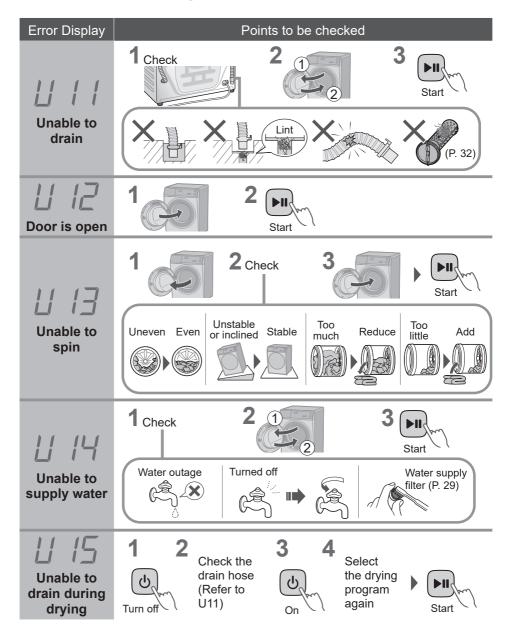

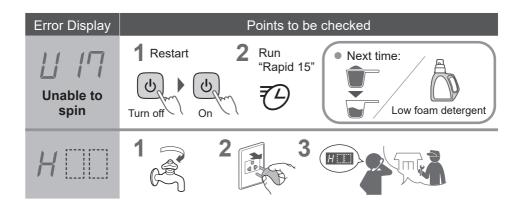

■ Information

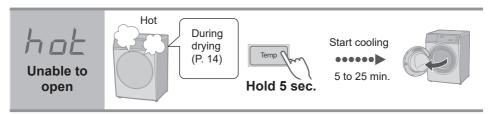


Installation Choosing the Right Location




Make sure to ask a service person for installation.

- Do not install the appliance by yourself.
- Follow this installation method. If you do not, Panasonic will not be liable for any accidents or damages.


Appliance dimensions

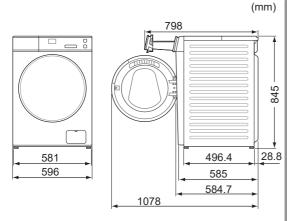

■ Set-in installation

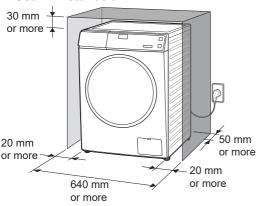


 Do not let the metallic portions of the appliance come into contact with metal sinks or other appliances.

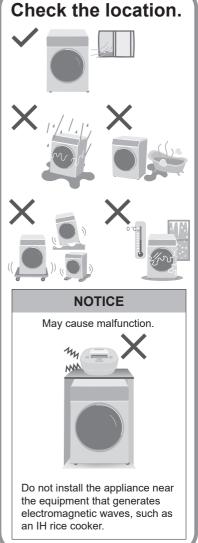


Installation Moving and Installing

Carrying the appliance

Do not do it alone.

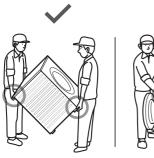




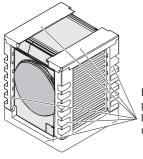

Remove all packing cusions before starting to use the appliance.

Installation of bottom cover




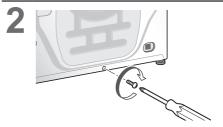



Installation Moving and Installing (continued)

Removing the shipping bolts

Shipping bolts (4)

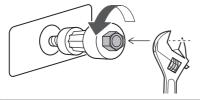

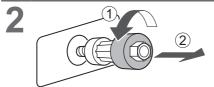

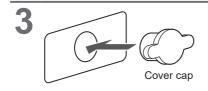





■ Moving the appliance again





Levelling the appliance



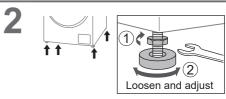

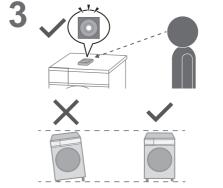

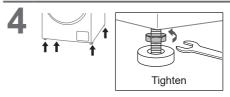

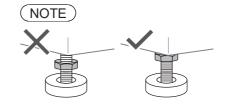


Installation Connecting the Hoses

Connect the hoses properly to prevent water leaks.

Maximum connection distances for hoses and the power cord

Right side connection (cm) Power cord 90 Water supply hose (0 - 100) Drain hose (0 - 100) Left side connection (cm)

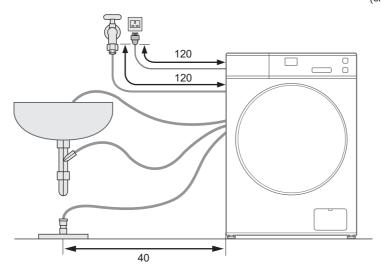


Installation Connecting the Hoses (continued)


Water supply hose


■ Connecting the water supply hose

CAUTION

- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.

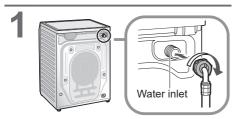


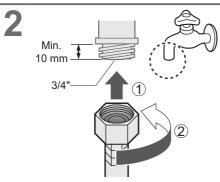

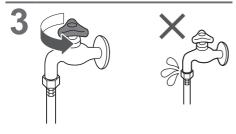


Drain hose

■ Draining to a sink or wash basin

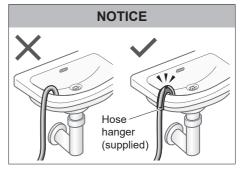


■ Draining to a stand pipe

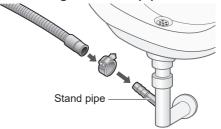


■ Draining to a drain hole




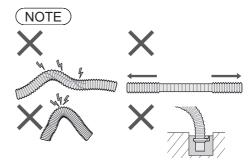

Installation Test Run

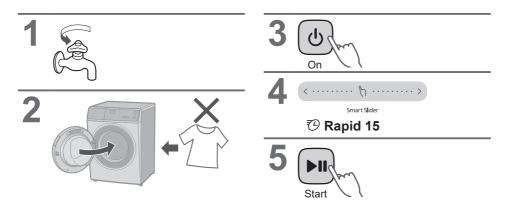

Checking after test run

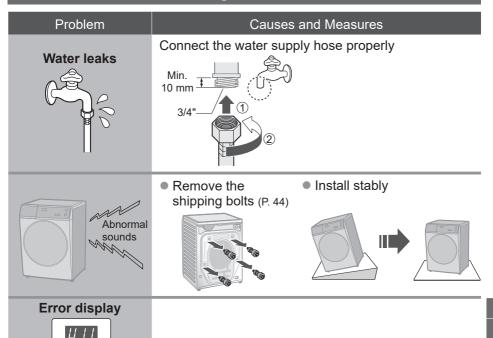

See P. 40.

Specifications

		NA-S106FR1
Rated voltage (V)		220 - 240
Rated frequency (Hz)		50
Maximum energy rated power input (W)		1600 - 1900
Heating energy rates power	For washing	1445 - 1710
input (W)	For drying	905 - 1090
Maximum spin speed (r/min)		1400
Product dimensions (W x D x H) (mm)		596 × 585 × 845
Product weight (kg)		70
Maximum mass of dry cloth (Wash) (kg)		10.0
Maximum mass of dry cloth (Dry) (kg)		6.0
Pressure of tap water (MPa)		0.01 - 1.0