
• This product is only suitable for well insulated spaces or occasional use. • 本產品僅適用於絕緣良好的空間或偶爾使用。

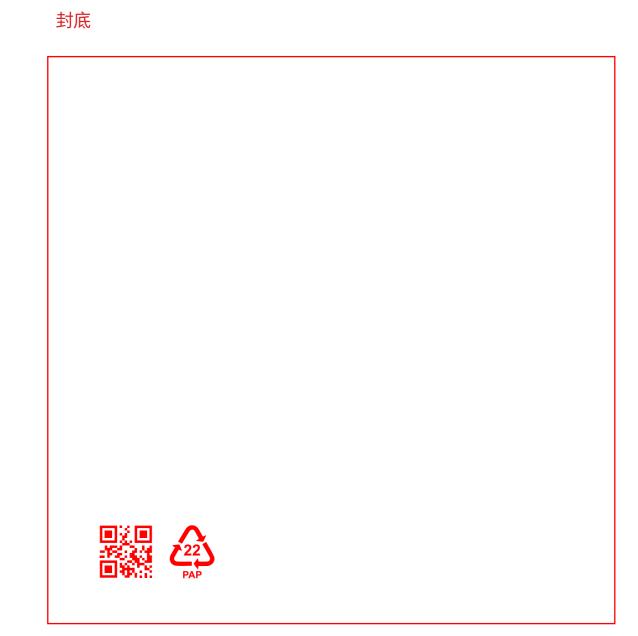


Read this user manual carefully before use, and retain it for future reference.

### Safety Instructions

### • Before use, check whether the voltage to be used meets the heater's requirements on the nameplate. • Do not use if there are visible signs of damage to the heater.

- Do not use this heater if it has been dropped. • Do not bend or pull the power cord to prevent poor contact.
- If the power cord gets damaged, it must be replaced by professionals from the manufacturer, after-sales service team, or departments of similar functions to avoid safety hazards. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- Do not place the heater directly below an electrical outlet. • Keep the heater at least 10 cm away from the electrical outlet during use.
- Before unplugging the heater, make sure to turn it off. Pull the plug rather than the cord to unplug the heater. • Do not plug or unplug the heater with wet hands to avoid the risk of electric shocks. • Ensure the heater is disconnected from power in case of a power cut or when moving it.
- When leaving the heater unattended or not planning to use it for a long period, make sure to disconnect it from power and unplug the power cord.
- WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- Do not use the heater in greenhouses or on construction sites.
- Do not use the heater in places with high temperatures, high humidity, high dust levels, or volatile substances. • Do not use the heater near bathtubs, sprinklers, or swimming pools.
- Children of less than 3 years should be kept away unless continuously supervised. • Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed
- or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance. • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning
- use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. • CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where
- children and vulnerable people are present. • WARNING: In order to avoid overheating, do not cover the heater.
- WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided. • The operating altitude of the heater ranges from 0 to 2000 meters.
- The storage temperature of the heater is -10°C to 50°C and the storage humidity is less than 90% RH. • The service life of the heater is 3 years.

## **Product Overview**

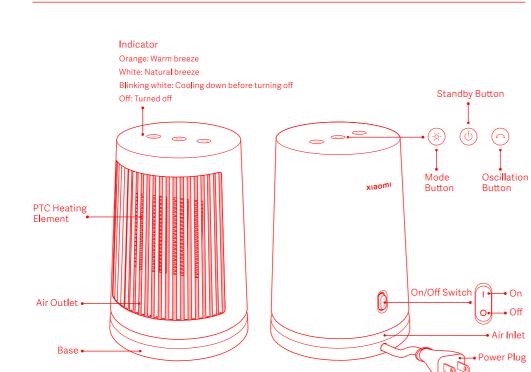

Note: Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

### How to Use

• Placing: Before use, make sure the heater, especially the power cord, is not damaged. Then place it on a desktop, and keep it at least 10 cm away from obstructions such as walls. • Connecting to power: Make sure the on/off switch is in the off position, then insert the power plug into a safe and qualified electrical outlet that can take a current over 10 A. • Turning on: Turn the on/off switch to "On", then press the standby button. The heater is defaulted to the warm breeze mode when it is turned on for the first time. • Turning off: Press the standby button. If the heater will not be used for a long time, turn the on/off switch to "Off".

Note: When being turned off in the warm breeze mode, the heater will automatically switch to the natural breeze mode and cool down for one minute before turning off. • Switching modes: Press the mode button to switch between the warm breeze mode and the natural breeze mode. The heater will default to the last used mode when it is turned on next time. Note: When the mode is switched from the warm breeze to the natural breeze, the PTC heating element needs to cool down, which takes around 15 seconds. • Oscillation: Press the oscillation button to enable or disable the oscillation function.

Warning: When the heater is on, do not cover the heater, obstruct the air inlet or the air outlet, or touch the air outlet Caution: If the heater is covered or blocked during operation, the internal temperature may increase to the extent that the heater will automatically cut off power and stop working. You can restart the heater after it has cooled down. The heating performance may be affected when the heater is used in a larger room.

If the heater topples during use, stand it upright and press the standby button to resume operation.

## Care & Maintenance

Warning: Always disconnect the heater from power before cleaning and maintenance. • If there are oil stains on the heater, clean the heater immediately to prevent discoloration or damage. • Use a clean, soft cloth with neutral detergent to wipe the shell of the heater. Remove debris from the air inlet and the air outlet with cotton swabs. • Do not rinse the heater with water or clean it with acidic or alkaline detergent to prevent damage.

• When planning not to use the heater for a long time, clean the heater and store it in its original packaging in a dry place.

### Troubleshooting

Troubleshooting				
Issues	Possible Causes	Solutions		
The heater does not turn on.	The heater is not connected to power or the power plug is not inserted properly.	Plug in the heater correctly and make sur the power source is working properly.		
	The on/off switch is not turned on.	Turn the on/off switch to "On".		
The heater does not turn off.	The heater is cooling down.	When being turned off in the warm breeze mode, the heater will cool down for one minute before turning off. Please wait with patience.		
The heater makes unusual sounds during operation.	There are foreign objects inside the heater.	Contact the after-sales service team.		

The indicator does of light up. The indicator is damaged. Contact the after-sales service team.

## Specifications

Name	Indoor Heating Appliance (Heater)
Model	ZMNFJ01YMTW
Rated Voltage	110 V~
Rated Frequency	60 Hz
Rated Power	600 W
Appliance Type	Class II Appliance
Net Weight	0.9 kg
Item Dimensions	132 × 132 × 188 mm

### Regulatory Compliance Information

EU Declaration of Conformity

WEEE Information

of such collection points.

oasiconocuing			
ues	Possible Causes	Solutions	
e heater does not n on.	The heater is not connected to power or the power plug is not inserted properly.	Plug in the heater correctly and make sure the power source is working properly.	
	The on/off switch is not turned on.	Turn the on/off switch to "On".	
e heater does not n off.	The heater is cooling down.	When being turned off in the warm breez mode, the heater will cool down for one minute before turning off. Please wait wi patience.	
e heater makes	There are foreign objects inside the	Contact the after-sales service team.	

Note: If the issues cannot be resolved by following the solutions above, or other issues arise, contact the after-sales service team. Do not attempt to disassemble the heater by yourself.

## WARRANTY NOTICE

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY HAVE OTHER RIGHTS CONVEYED BY LAWS OF YOUR COUNTRY, PROVINCE OR STATE. INDEED, IN SOME COUNTRIES, PROVINCES OR STATES, CONSUMER LAW MAY IMPOSE A MINIMUM WARRANTY PERIOD. OTHER THAN AS PERMITTED BY LAW, XIAOMI DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS WE INVITE YOU TO CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

1. LIMITED PRODUCT WARRANTY XIAOMI warrants that the Products are free from defects in materials and workmanship under normal use and use in accordance with the respective Product user manual, during the Warranty Period.

We, Xiaomi Communications Co., Ltd., hereby declare that this equipment is in compliance with the applicable

the following internet address: http://www.mi.com/global/service/support/declaration.html

Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU)

which should not be mixed with unsorted household waste. Instead, you should protect human health and the

environment by handing over your waste equipment to a designated collection point for the recycling of waste

contact the installer or local authorities for more information about the location as well as terms and conditions

electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and

recycling will help prevent potential negative consequences to the environment and human health. Please

#### The duration and conditions related to the legal warranties are provided by respective local laws. For more information about the consumer warranty benefits, please refer to Xiaomi's official website https://www.mi.com/global/support/warranty.

Xiaomi warrants to the original purchaser that its Xiaomi Product will be free from defects in materials and workmanship under normal use in the period mentioned above. Xiaomi does not guarantee that the operation of the Product will be uninterrupted or error free. Kiaomi is not liable for damages arising from non-compliance with the instructions related to the use of the Product.

If a hardware defect is found and a valid claim is received by Xiaomi within the Warranty Period, Xiaomi will either (1) epair the product at no charge, (2) replace the product, or (3) refund the Product, excluding potential shippir

3. HOW TO OBTAIN WARRANTY SERVICE To obtain warranty service, you must deliver the Product, in its original packaging or similar packaging providing an

equal degree of Product protection, to the address specified by Xiaomi. Except to the extent prohibited by applicable law, Xiaomi may require you to present proofs or proof of purchase and / or comply with registration requirements before receiving warranty service.

4. EXCLUSIONS AND LIMITATIONS Unless otherwise stipulated by Xiaomi, this Limited Warranty applies only to the Product manufactured by or for Xiaomi and identifiable by the trademarks, trade name or "Xiaomi" or "Mi" logo. The Limited Warranty does not apply to any (a) Damage due to acts of nature or God, for example, lightning strikes, tornadoes, flood, fire, earthquake or other external causes; (b) Negligence; (c) Commercial use; (d) Alterations or modifications to any part of the Product; (e) Damage caused by use with non-Xiaomi products; (f) Damage caused by

accident, abuse or misuse; (g) Damage caused by operating the Product outside the permitted or intended uses described by Xiaomi or with improper voltage or power supply; or (h) Damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Xiaomi. It is your responsibility to backup any data, software, or other materials you may have stored or preserved on the product. It is likely that the data, software or other materials in the equipment will be lost or reformatted during the service process, Xiaomi is not responsible for such damage or loss. No Xiaomi reseller, agent, or employee is authorized to make any modification, extension, or addition to this Limited Warranty. If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall

Except as prohibited by laws or otherwise promised by Xiaomi, the after-sales services shall be limited to the country or region of the original purchase. Products which were not duly imported and/or were not duly manufactured by Xiaomi and/or were not duly acquired from Xiaomi or a Xiaomi' s official seller are not covered by the present warranties. As per applicable law you may benefit from warranties from the non-official retailer who sold the product. Therefore, Xiaomi invites you to contact The present warranties do not apply in Hong Kong and Taiwan.

5. IMPLIED WARRANTIES Except to the extent prohibited by applicable law, all implied warranties (including warranties of merchantability and fitness for a particular purpose) will have a limited duration up to a maximum duration of this limited warranty. Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation will not be applied

6. DAMAGE LIMITATION Except to the extent prohibited by applicable law, Xiaomi shall not be liable for any damages caused by accidents, indirect, special or consequential damages, including but not limited to loss of profits, revenue or data, damages resulting from any breach of express or implied warranty or condition, or under any other legal theory, even if Xiaomi

has been informed of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of special, indirect, or consequential damages, so the above limitation or exclusion may not apply to you. 7. XIAOMI CONTACTS

For customers, please visit the website: https://www.mi.com/global/support/warranty/ The contact person for the after-sale service may be any person in Xiaomi's authorized service network, Xiaomi's authorized distributors or the final vendor who sold the products to you. If in doubt please contact the relevant person

Manufactured by: Xiaomi Communications Co., Ltd. Address: #019, 9th Floor, Building 6, 33 Xi'erqi Middle Road, Haidian District, Beijing, 100085, China For further information, please go to www.mi.com For details of the importer, please refer to the box. Production Date: See box

Made in China User Manual Version: V1.0


使用產品前請仔細閱讀本使用說明書,並妥善保管。

# 安全須知

- ·此設備僅限家庭和室內使用。 ·使用前,請檢查使用的電壓是否與產品銘牌要求相符。 ·使用前,請先檢查電源線以及插頭是否有破損。
- ·如果加熱器掉落,請勿使用。 ·如果加熱器有明顯的損壞跡象,請勿使用。
- ·請勿彎折、拉扯電源線,以免接觸不良。 ·如果電源線損壞,為了避免危險,必須由製造商、其維修部或類似部門的專業人員更換。
- ·在水平和穩定的表面上使用本加熱器,或根據情況將其固定在牆上。 ·加熱器不能位於插座的正下方。
- · 使用暖風機時,請遠離電源插座,至少保留 10 cm 以上距離。
- ·先關機,再從插頭處拔出電源線。 ·請勿用濕手插拔電源插頭,否則有觸電危險。
- ·停電或移動時,必須確保已切斷電源。 · 離開或長時間不用時,請務必切斷電源,拔掉電源插頭。
- ·請勿在窗簾等易被吸進的物品附近使用,應該避免在周圍有障礙物及不穩定物品的場所使用。 ·禁止在溫室或建築現場使用。 ·請勿在高溫、潮濕、灰塵多或有揮發性物品的地方使用。
- · 勿在浴池、淋浴間或游泳池之環境下使用此加熱器。 · 警告:為減少火災風險,請將紡織品、窗簾或任何其他易燃材料與出風口保持至少 1 米的距離。 ·孩童應受監護,以確保孩童不嬉玩電器。
- ・本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用,除非在對其負有安全責任的人員之監護或 指導下安全使用。 · 3 歲以下的兒童應遠離,除非有持續的監護。 ・3 歲至 8 歲以下的兒童,只有在器具已放置或安裝在其預期的正常操作位置,並在安全使用器具方面得到監督或指導,並瞭解所
- 涉及的危險的情況下,才能打開/關閉器具。3歲至8歲以下的兒童不得插入、調節和清潔電器或進行用戶維護。 8 歲或以上的兒童,以及身心或認知能力有缺陷或缺乏經驗和知識的人士,只要在監督或指導下以安全的方式使用本器具,並瞭 解其危害,均可使用本器具。兒童不得玩此器具。兒童不得在沒有監督的情況下進行清潔和用戶維護。
- ·注意:本產品的某些部分可能會變得非常熱,並導致燒傷。在有兒童和弱勢群體的地方,必須給予特別注意。 ·警告:為了避免過熱,不可覆蓋加熱器。 ·警告:加熱器未具備控制房間溫度的裝置。除非持續監督,加熱器不可在小房間內由無法自行離開房間的人使用。
- ·產品正常工作適用的海拔範圍為 0—2000 米。 ·產品存儲適用的環境溫度為 -10℃~ 50℃、環境濕度為 < 90%RH。

·產品使用壽命為3年。

產品介紹

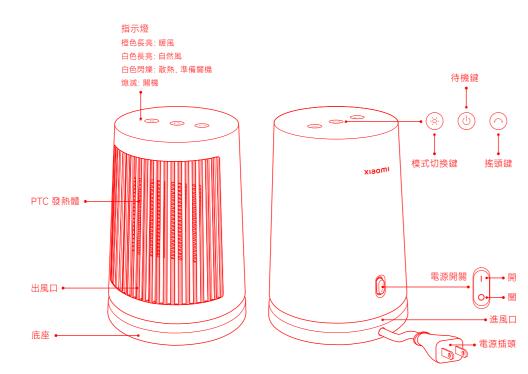

提示:說明書中的產品、配件、使用者介面等插圖均為示意圖,僅供參考。由於產品的更新與升級,產品實物與示意圖可能 略有差異,請以實物為準。

- ·正確放置:使用前,先確認暖風機(尤其是電源線)完好無損,然後將其平穩放置於桌面,與牆面等遮擋物保持 10 cm · 連接電源:確認電源開關處於關閉狀態,然後將電源插頭插入能承載 10 A 以上電流的安全合規的電源插座。 · **開機**:打開電源開關,然後輕觸待機鍵。首次開機,預設為暖風。
- · 關機: 輕觸待機鍵。如果長時間不使用,請關閉電源開關。 提示: 暖風模式下關機, 暖風機會先自動切換到自然風模式散熱 1 分鐘再關機。 ·**切換模式**:輕觸模式切換鍵,循環切換暖風模式和自然風模式。下次開機,預設為上次關機時使用的模式。 提示:由暖風模式切換到自然風模式,發熱裝置逐漸冷卻,有 15 秒左右的延遲。 · 開啟 / 關閉搖頭:輕觸搖頭鍵。
- · 開機狀態下,禁止覆蓋暖風機,禁止遮擋進 / 出風口,禁止觸摸出風口格柵。 ・暖風機工作中,如果被覆蓋或堵塞導致內部高溫,會自動切斷電源,停止工作。暖風機冷卻後,重新開機即可。

·暖風機在使用時若發生傾倒,請扶正暖風機後點按待機鍵,即可恢復工作。

·使用環境空間較大時,暖風機加熱效果可能不理想。

## 維護與保養

警告:在拆卸護網前確認電扇已切斷電源。 ·機體有油污時,必須及時清理乾淨,以免造成變色或破損。 · 使用乾淨軟布,配合中性清潔劑,擦拭暖風機外殼;使用棉簽清理進 / 出風口附著的雜物。 ·禁止用水直接沖洗,禁止使用酸鹼性清潔劑,以免損壞產品。 ·若長期不使用,請在清潔後,將暖風機裝入包裝盒,放置於乾燥處妥善保管。

### 疑難排解

額定頻率: 60 Hz

額定功率: 600 W

<b>双</b> 障現象	可能原因	解決方法
<b>E</b> 法開機	沒有連接電源或電源插頭接觸不良	插好電源插頭,確認電源正常
	未開啟電源開關	開啟電源開闢
法關機	暖風機處於散熱狀態	暖風模式下關機,暖風機散熱1分鐘,然後 關機,請耐心等待
作中有異響	有異物掉入機器內部	聯絡售後客服
示燈不亮	指示燈損壞	聯絡售後客服

## 提示: 經上述檢查後仍然無法解決的故障或其他故障, 請電話諮詢客服, 請勿自行拆機。

#### 基本規格 產品名稱:室內加熱器(暖風機) 產品型號: ZMNFJ01YMTW 額定電壓: 110 V~ 器具類型: || 類電器

11

產品淨重: 0.9 kg

產品尺寸: 132 × 132 × 188 mm

## 限用物質含有情況標示聲明書


	設備名稱:室內加熱器(暖風機),型號(型式):ZMNFJ01YMTW Equipment name Type designation (Type)							
	限用物質及其化學符號 Restricted substances and its chemical symbols							
ਜ਼ U nit	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr+6)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)		
膠組件	0	0	0	0	0	0		
B組件	-	0	0	0	0	0		
扇	_	0	0	0	0	0		

備考1. "超出0.1 wt %"及"超出0.01 wt %"係指限用物質之百分比含量超出百分比含量基準值。 Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the

restricted substance exceeds the reference percentage value of presence condition. 備考2."○"係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: "O" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考3."-"係指該項限用物質為排除項目。 Note 3: The " - " indicates that the restricted substance corresponds to the exemption.

製造商: 小米通訊技術有限公司 製造商地址: 北京市海淀區西二旗中路33號院6號樓9層019號, 郵遞區號100085 進口商: 台灣小米通訊有限公司 進口商地址:臺北市中正區新生南路1段50號2樓之2

 本產品售後服務請查詢官網: www.mi.com/tw/service



服務電話: 02-77255376



說明書版本號: V1.0