


|       |            |
|-------|------------|
| 时间：   | 2023.11.08 |
| 产品型号： | T8 Max     |
| 尺寸：   | 95*140mm   |
| 材质：   | 128g铜版纸    |
| 颜色：   | 彩色印刷       |
| 工艺：   | 骑马钉        |

# AVAPOW 6000A Multi-fuction Portable Car Jump Starter User Manual

Model: T8 Max

EN

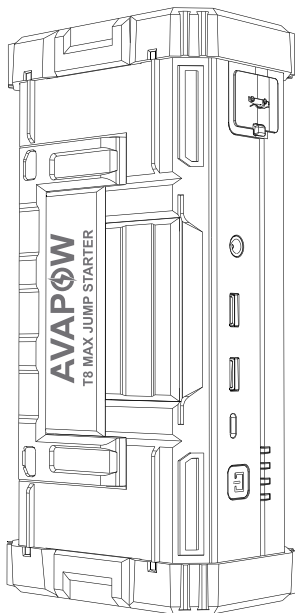





**Friendly Tips:**

Please carefully read the instruction manual and use product correctly based on the instruction manual so that you can be familiar with the product more conveniently and quickly!

Perhaps there is small difference between the photo and the actual product, so please turn to the actual product for detail information.






## What's in the Box

- AVAPOW T8 Max jump starter x1
- Intelligent battery clamps with starter cable x1
- High quality Type-C cable x1
- Cigarette lighter converter x1
- User-friendly manual x1
- Delicate carrying case x1

## Product Diagrams

- ① Power Button
- ② USB 1: 5V / 2.4A
- ③ USB 2: 5V /3A 9V /2A 12V /1.5A
- ④ EC5 output / dust cover
- ⑤ Type C input: 5V /3A 9V /2A 12V /1.5A
- ⑥ DC output: 12V/10A
- ⑦ LED Light

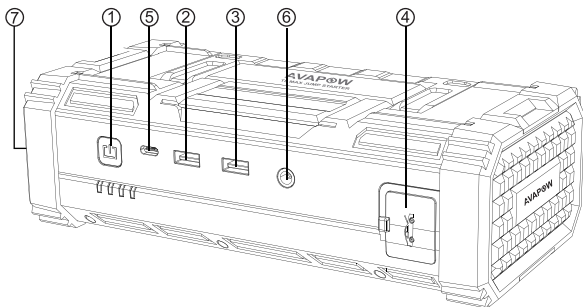


## Specifications

|                     |                                                                    |
|---------------------|--------------------------------------------------------------------|
| Cycle life          | >1000 times                                                        |
| Capacity            | 88.8wh                                                             |
| EC5 output          | 12V / 6000A maximum starting power (max.)                          |
| USB1 output         | 5V/2.4A                                                            |
| USB2 output         | 5V/3A 9V/2A 12V/1.5A                                               |
| Type-C input        | 5V/3A 9V/2A 12V/1.5A                                               |
| DC output           | 12V/10A                                                            |
| Charging time       | Type-C at 5V / 3A: 6H                                              |
| LED Light           | White: 1W                                                          |
| Working temperature | -10°C~ +60°C                                                       |
| Storage temperature | -10°C~ +60°C                                                       |
| Unit size(LxWxH)    | 9.14x4.45x2.84inch                                                 |
| Product accessories | Type-C line, start clamp, cigarette lighter converter, user manual |

# Charge the Jump Starter Battery


## Charging with an AC Adapter (**AC adapter is not included**).

1. Connect the battery input with Type-C cable.
2. Connect the USB cable to AC adapter.
3. Plug the AC adapter into a power source.

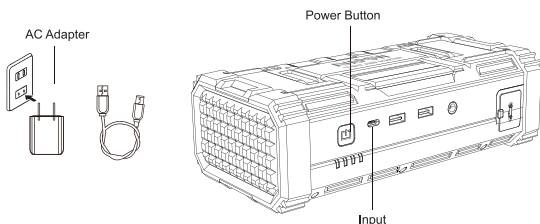

## Charge with a Car Charger (**Note: The car cigarette lighter is not included in the package**).

1. Connect the battery input with car cigarette lighter
2. Plug the charger into the car cigarette lighter hole

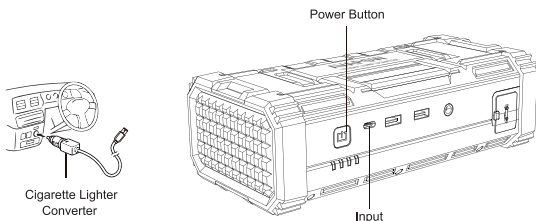

# How to Jump Start your Vehicle



 
 
 
 
This unit is designed for jump starting 12V car batteries only with a CC rating of 10000CC or less. Do not attempt to jump start vehicles with a higher battery rating, or different voltage.

If the vehicle isn't started immediately, please wait for 1 minute to allow device to cool down. Do not try to restart the vehicle after three consecutive attempts as this may damage the unit. Check your vehicle for other possible reasons why it can't be restarted.

## Operating Instructions:

Ensure this jump starter batteries has at least 50% or more capacity.

## How to Jump Start a Car?



### First step:

Connect the jumper cable to the jump starter. If the indicator light of jumper cable is blue, the clamp cable is in standby status.

### Second step:

Connect the clamp to the car battery. Connect the red clamp cable to the positive and the black clamp cable to the negative. Please avoid reverse connection.

### Third step:

When the indicator light of jumper cable is green, you can try to start your vehicle.

### Fourth step:

After jump-starting the engine, remove the battery clamp from the car battery, then remove the clamp plug from the jump starter.

## Abnormal Indication of Jumper Clamp

| LETTER    | STAND FOR          | SOLUTION                                                        |
|-----------|--------------------|-----------------------------------------------------------------|
| <b>LC</b> | Low Capacity       | Please charge jump starter                                      |
| <b>RC</b> | Reverse Connection | Please exchange positive and negative poles of the jumper clamp |
| <b>HT</b> | High Temperature   | Please wait 5 mins before starting the car                      |



Forbid to use this clamp in an environment full of flammable gas.

## Jumper Clamp Indicator Instruction

| STATUS                                                                                                                                                       | TECHNICAL<br>PARAMETER   | DESCRIPTION                                                                                          | SOLUTION                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Standby indication</p>                                                    | Blue light               | Jump cables connect to jump starter, then <b>blue light</b> on                                       | /                                                                                                                                                             |
| <p>Automatic conduction status indicator (ready to jump start your car)</p>  | Green light              | Jump cables connect to the car battery after connecting the jump starter, then <b>green light</b> on | /                                                                                                                                                             |
| <p><b>Force start function</b></p>                                         | Start the car within 30s | If the above operations cannot start your car, please use the forced start function                  | Ensure the correct connection of clamps before using force start function, long press <b>the force start button</b> for 3 seconds until <b>green light</b> on |

| PROTECTION                    | TECHNICAL<br>PARAMETER | DESCRIPTION                                                                                                                                                         | SOLUTION                                                                                                                                                |
|-------------------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reverse connection protection | RC                     | Wrong connection between jump cable and car's positive and negative poles. The <b>RC red light</b> stays on                                                         | Keep the correct connection, the positive pole (red) and the positive pole are connected, the negative pole (black) and the negative pole are connected |
| High temperature protection   | YES                    | The <b>HT red light</b> stays on and beep long alarm sound;<br>Cut off voltage output                                                                               | Automatically recover when the temperature drops                                                                                                        |
| Start timeout protection      | 40S±5S                 | Automatically enter the standby state after more than 40 seconds and The <b>LED blue light</b> stays on                                                             | You can use it again after disconnecting for a minute                                                                                                   |
| Input low capacity protection | 13.5V±0.5V             | When it is detected that the power of the EC5 port is lower than 13.5V, there is no output at this time, the <b>LC red light</b> stays on and beep long alarm sound | Please charge jump starter                                                                                                                              |
| Short circuit protection      | YES                    | No response                                                                                                                                                         | Please use the positive and negative poles of jump cables to connect the positive and negative poles of the car's engine to try to start your car       |

 
 
 


## How to Charge a Mobile Phone or Digital Products?



With T8 Max powerful jump starter and two USB Output Ports (one is 5V/9V/12V USB Quick Charge) , it can full charge your smartphones and tablets up to 75% faster than a standard charger. And you can charge two devices at the same time using the powerbank.

## DC & USB Power Supply



### First step:

Plug the USB port of the charging cable into the product USB

### Second step:

Insert the other side into the input port of the mobile phone

### Third step:

 
When connected, press the power button, then you can use it to charge now

# LED Flashlight





1. Long press the Power button for 3 seconds to turn on the flashlight. The BATTERY CAPACITY indicator lights on. And long press again for 3 seconds to switch the device off completely. If no device is connected to the device, it will automatically switch off.

2. In light mode, e.g. when the LED flashlight is on, short press the Power button to scroll through the lighting, SOS, Strobe. The flashlight offers more than 35 hours of continuous use when fully charged.



LED Flashlight

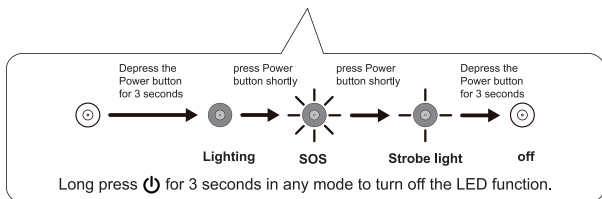 



## **Dangerous Warning and Caution in Handling the Battery**

1. Never short circuit the jump starter by connecting the Red and Black clamps.
2. Do not disassemble the jump starter.
3. When children use this product, please operate under the guidance of parents.
4. Store in a dry place, do not expose to damp conditions or near corrosive materials.
5. If the jump starter expands, leakage or peculiar smell was found, stop use immediately.
6. Please use this jump starter at normal temperature and be far away from too wet, too hot and fire.
7. Do not start the vehicle continuously, between starting twice you should allow an interval of at least 30 seconds to 1 minute.
8. When the battery power is less than 10%, do not use the jump starter as it will damage the unit.
9. Before first use, please charge it for 3 hours or more.



