



SOLT

# Top Load Washing Machine 7.0kg Capacity Quick Start Guide

**Tips for Using & Operating Your Washing Machine**  
Model: GGSTLW70RC



# Top Load Washing Machine

## 7.0kg Capacity

## Getting Started...

---

### Using Your Washing Machine

---

After loading the laundry and measuring the appropriate detergent, close the machine lid and press the **Power** button. Choose your desired washing cycle by press the **Program** button, select any additional options and press the **Start** button to begin your cycle.

At the end of the cycle, the washing machine will make an audible tone and automatically turn off. It is recommended when you are done with the machine to turn it off from the power outlet and also close off the water supply for safety reasons.

---

### Washing Programs

---

**NORMAL:** Standard fabric washing program, suitable to wash cotton fabric.

**HEAVY DUTY:** The wash time is longer and the stream is stronger for better washing results.

**BULKY:** Suitable for washing bulky clothing.

**ACTIVEWEAR:** Suitable for washing activewear.

**COLD WASH:** This cycle uses cold water to get better protection of the clothes.

**QUICK WASH:** Suitable to wash lightly dirty clothes.

**DELICATES:** Protecting your clothes with a gentle wash program.

**RINSE & SPIN:** Only the rinse and spin cycle is performed.

**DRAIN & SPIN:** Only the drain and spin cycle is performed.

**TUB CLEAN:** We recommend to run the Tub Clean program monthly to improve your washing results, water quality and drain flow.

---

### Useful Functions

---

#### PULSE+

Pulse+ can save between 20-40% of your cycle time by strengthening the washing beats. Press the Pulse+ button to activate and deactivate the function.

#### CHILD LOCK

Simultaneously press the **Wash Temperature** and **Water Level** buttons for 3 seconds to activate the child lock. Repeat this process to deactivate the child lock. The **Child Lock** function will lock all buttons except **Power**.

#### MUTE

Simultaneously press the **Soil Level** and **Rinse+** buttons to silence button beeps and program sounds. Repeat this process to unmute the washing machine.

For more Operation Instructions regarding your washing machine, please refer to pages 12-15 of your User Manual.