

PRUNUS J-110 radio/Bluetooth speaker/mp3 player User Manual


Thank you for purchasing the PRUNUS J-110 radio/Bluetooth speaker/mp3 player. In order to get the best from the radio please read this manual carefully before using it and take special notice of the section on maintenance.

Maintenance

- ◆ Don't let the radio get wet and don't use it in a moist environment - keep it out of the rain and use carefully in bathrooms and kitchens;
- ◆ Do not place potentially damaging objects such as liquid-filled containers or lighted candle on top of the radio. Keep the radio, and the battery pack, away from sources of heat such as radiators, hot water pipes or fires. Do not leave it in full sunlight;
- ◆ Make sure that solvents, such as white spirit, paraffin or petrol and not spilt onto the radio;
- ◆ Keep it away from magnets and magnetic fields;
- ◆ Position the radio so that air can circulate around it – leave a space of 5 to 10 cm in front of and behind the radio;
- ◆ Do not cover the radio with cloth or paper and avoid placing it on a bed where it might be covered by a blanket or duvet;
- ◆ The radio is a sophisticated electronic device - do not attempt to disassemble it or repair it and take care not to drop it.

Functional component

1. Mode switch among USB/TF/ AUX/Bluetooth
2. Forward
3. Previous
4. Play/Pause Button
5. Flash Drive Slot
6. TF Card Slot
7. AUX in Jack
8. Charging Indication
9. DC5V Power Slot
10. Volume / Power Knob
11. Speaker
12. Band Switch among MP3/ FM/AM/SW
13. Tuning Knob
14. AC in Jack
15. Battery Bin
16. Telescopic Aerial
17. IR (Infrared)

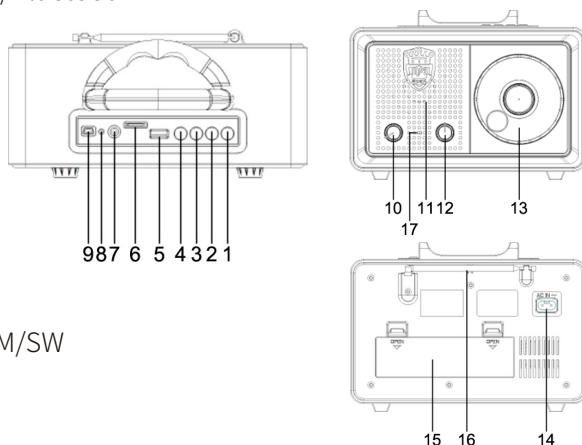

Power Supply

1.AC power supply:

When to use it? At home, office, workshop or anytime you can reach mains power.
Power in method: Step1: Take the included AC power cord out from battery bin; Step 2: plug the end with two holes into <14. AC in Jack> and plug the other end into the socket (Voltage: 110-220V).

2.Type D (UM-1) Battery * 2:

When to use it? In outing, picnic, long trip or any outdoor time you need the radio play for a long time.

Batteries Installation: 1) Open the Battery Compartment Cover; 2) Follow the electrode marks inside battery compartment to install two Type D batteries. 3) Replace the battery compartment cover.

Note:

A. Don't use a new battery and old battery together; B. Don't use batteries of different type or brand together; C. Don't use batteries with different power (mAh) ; D. Don't use alkaline battery and rechargeable battery together.

3. Built-in rechargeable battery:

When to use it? In your private garden, nearby park, home or any time you need the radio play for a short movable time.

Charging method: plug the big end into the USB jack of your computer or USB power adapter, and plug the small end into the <9.DC5V Power Slot> of the unit.

Charging indicator:Charging time is 3-5 hours, while the radio is being charged, <8.Charging Indication> will light up. (Notes: the light will turn off when it is fully charged.)

Please Note:

(1) Please use standard DC5V/500-1000mAh charger (or other devices can supply this type of power) to charge it, or it may damage the radio.

(2) In order to make sure the battery has longer using life, you'd better reduce the long continuous charging, such as 24 hours charging or more.

Radio reception

1. Turn the <12. Band Switch among MP3/ FM/AM/SW> to the “FM”, “AM” or “SW” position
 2. Turn the <10. volume/power knob> to the power-on position.
 3. Rotate the <13. tuning knob> to select the station you want to listen to.
 4. Turn the <10. volume/power knob> again to adjust the volume.
- ◆ When tuning to the FM/SW stations, extend the <14. telescopic aerial> and adjust the position of the aerial for the best reception;When listening to AM stations, rotate the radio to get the best reception.
- ◆ In order to get better reception, when using the radio indoors, please approach it to the window and do your best to keep it away from the electronic devices (such as computers, TVs, refrigerators, mobile phones, etc).

Music Playing

1. Play by Bluetooth

(1) Rotate the <12. Band Switch among MP3/ FM/AM/SW> to "MP3" mode, the radio will give a "Bluetooth Mount" sound, which implies the Bluetooth connection is available and ready pair;

(2) Switch on the Bluetooth on your services, such as: mobile phone, iPod, computer, etc., search for the device named “BT-888”, and then connect it, the radio should have a “Dingdong” sound, which means the device has been connected successfully.

(3) Open your music player app/software and choose your desired music;

- (4) Short press <2. Forward /3. previous> to select the song you want to play;
- (5) Short press <4. Play/Pause/Mode button > to pause the current play, press this button again to resume playback.

2. Play by Flash Drive/ TF card


- (1) Rotate the <12. Band Switch among MP3/ FM/AM/SW> to "MP3" mode;
- (2) Insert the Flash Drive/TF card loaded with MP3 format into the <5. Flash drive slot / 6. TF card slot >. Once mp3 files are detected, it will play automatically;
- (3) Short press the <2. forward/3. previous> button to select the song you want to play; Long press to fast forward/rewind down;
- (4) When playing mp3 tracks pressing the <4. Play/Pause/ button> will pause playing the current track; pressing this button again will resume playing this track.

3. Play by AUX

- (1) Rotate the <12. Band Switch among MP3/FM/AM/SW> to "MP3" mode, long press <1. Mode Switch among USB/TF/AUX/Bluetooth> to switch the radio mode to AUX mode, then the radio will give a "AUX mode" sound;
- (2) Insert one end of the AUX cable into the "AUX" jack of the radio, and insert the other end into the earphone jack of the mobile phone or computer, and then open the music software/app to play music;
- (3) Short press <4. Play/Pause button> to mute the radio (!), press it again to resume the sound.
- (4) Short press <1. Mode Switch among USB/TF/AUX/Bluetooth> will change to other mode.

Remote Control

1. Battery Insulation Gasket
2. Remote Control Lamp
3. Power Button
4. Repeat
5. Mode Switch among USB/TF/AUX/Bluetooth
6. BT (Bluetooth)
7. EQ (Equaliser)
8. Previous Button
9. Forward Button
10. Play/Pause Button
11. Volume Down Button
12. Volume Up Button
13. 0-9 Number Buttons

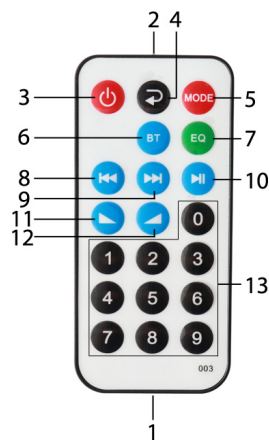

1. Maintenance

- (1) Please pull <1. Battery insulation gasket> out from the battery compartment, so that you can start using the remote control.
- (2) The remote control can be active only when the radio is in USB/TF/AUX/Bluetooth mode.
- (3) In order to get the best from the remote control, please do your best to point the remote control lamp at <17. IR (Infrared)>, when you are using it.
- (4) Every button only works in the mode where they were mentioned in the mode intro-

duction, if they weren't mentioned in any mode introduction, that means the button is invalid in this mode.

2. Uses of the Remote Control

(1) Bluetooth Mode

- 1) Press <3. Power Button> to disconnect or connect the Bluetooth;
- 2) Press <5. Mode Switch among USB/TF/AUX/Bluetooth> will change to other mode;
- 3) Press <7. EQ (Equaliser)> to adjust the timbres;
- 4) Press <8. Previous Button/9. Forward Button> to select the song you want to play;
- 5) Press <10. Play/Pause Button> to pause playing the current track; press this button again will resume playing this track;
- 6) Press <11. Volume Down Button/12. Volume Up Button> to decrease/increase the volume. When it turns to the minimum/maximum volume, it will give a "Di" sound.

(2) Flash Drive/ TF Card Playing Mode

- 1) Press <3. Power Button> to turn off or turn on the Flash Drive/ TF Card playing;
- 2) Press <5. Mode Switch among USB/TF/AUX/Bluetooth> will change to other mode;
- 3) Press <6. BT (Bluetooth)> will change to "Bluetooth mode";
- 4) Press <7. EQ (Equaliser)> to adjust the timbres;
- 5) Press <8. Previous Button/9. Forward Button> to select the song you want to play. Long press to rewind or fast-forward;
- 6) Press <10. Play/Pause Button> to pause playing the current track; press this button again will resume playing this track ;
- 7) Press <11. Volume Down Button/12. Volume Up Button> to decrease/increase the volume. When it turns to the minimum/maximum volume, it will give a "Di" sound;
- 8) Press <13. 0-9 Number Buttons> to select one specific mp3 (For example, continuously press buttons 1+6+8 to select the 168th mp3, but if the total numbers of the mp3 files are not more than 168, it will play the current mp3.

(3) AUX Mode

- 1) Press <3. Power Button> to disconnect or connect AUX;
- 2) Press <5. Mode Switch among USB/TF/AUX/Bluetooth> will change to other mode;
- 3) Press <6. BT (Bluetooth)> will change to "Bluetooth mode";
- 4) Press <7. EQ (Equaliser)> to adjust the timbres;
- 5) Press <10. Play/Pause Button> to mute the radio (!), press it again to resume the sound;
- 6) Press <11. Volume Down Button/12. Volume Up Button> to decrease/increase the volume. When it turns to the minimum/maximum volume, it will give a "Di" sound.

After Sale Service

◆If the radio fails, please scan this QR code, and click "Ask a question" and log into Amazon to contact us, we will provide you the best service:

◆You can also send your messages to our customer service e-mail:

wanwanus@outlook.com

