

Fault Inspection

Not misting	1- Check whether the device is powered on or not. 2- Check if the power outlet where the diffuser is plugged in is supplying electricity. 3- Note: At the bottom of the device, you will find an extra atomizer. Use it in case of severe clogging or damage that cannot be resolved through cleaning with 70% alcohol. Important: Perform regular cleanings every 500 hours of operation for at least 15 minutes.
Oil leakage	1- Oil leakage inside the machine: Check whether the diffuser bottle is tightened or not. 2- Check whether the nozzle is clogged or not. 3- Check if the sealing ring is intact and not damaged.
Unusual noise	1- Check whether the nozzle is clogged or not. 2- Ensure the bottle is tightly secured.

Customer service

If you have any questions, need assistance, or wish to report a technical issue, our support team is here to help.

Email: support@aromaplan.com
Phone: +1 407 233-4143

Warranty

1. This product comes with a limited warranty of 6 (six) months from the date of purchase. To validate the warranty, the original proof of purchase is required.
2. The warranty covers manufacturing defects only.
- The warranty does not cover:
- Damage caused by drops or physical impact;
 - Leaks or spills resulting from improper use of the device;
 - Misuse or negligent handling of the equipment;
 - Unauthorized repair attempts;
 - Any use not in accordance with the guidelines in the user manual.

Cautions

(PLEASE READ ALL INSTRUCTIONS BEFORE USING THE DIFFUSER)

WARNING

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, property damage and injury to person.

INSTALLING

- To avoid fire or shock hazards, plug the appliance directly into a safe electrical outlet. DO NOT plug in the cord with wet hands.
- Keep the cord out of heavy traffic areas.
- DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it has been dropped or damaged in any manner.
- DO NOT use the diffuser in a high temperature or wet environment.
- DO NOT allow the mist to face the wall directly. Install the diffuser in a ventilated and adequate space.
- NEVER place the diffuser in an area where it is accessible to children.
- DO NOT operate the diffuser without first turning off the unit. Failure to heed this warning may cause personal injury. NEVER tilt, move, or attempt to empty the unit while operating.
- DO NOT block the air outlet while the unit is running.
- Always place the diffuser on a firm, flat, level surface. NEVER place it on a rug or carpet, or on a finished floor that may be damaged by exposure to water or moisture.
- DO NOT use inflammable, explosive, corrosive, and other hazardous solvents with the diffuser. DO NOT spill water or corrosive liquid on the diffuser surface.
- Suggested average daily usage time should not exceed 14 hours.
- Shut down the unit in an extreme weather environment.

ATTENTION

This diffuser should only be used with fragrance oil without adding water. For a better performance of your device, we exclusively recommend using AromaPlan fragrance oils.



DOWNLOAD THE
INSTALLATION MANUAL
FOR YOUR DIFFUSER BY
SCANNING THE QR CODE

AROMAPLAN UNITED STATES
DISTRIBUTED BY FULLYSENSE LLC

CONTACT US AT:
E-mail: support@aromaplan.com
Phone: +1 (407) 233-4143

@aromaplglobal | www.aromaplan.com





Introduction

Scent Diffuser DAP PRO WHITE / BLACK


AromaPlan's diffuser powerfully and evenly scents any environment in just minutes. The nebulizer provides an impressive coverage of up to 2,000 sq. ft., ensuring that every area of your home, office, spa, or commercial space smells like a 5-star hotel.

The **DAP PRO Diffuser** is compatible with devices that support Bluetooth wireless technology and controlled via AromaPlan's exclusive app, allowing you to adjust intensity levels and schedule usage easily from your smartphone.

Specifications

SIZE	W171.2"D77"H204.6(MM)
CAPACITY	300ML
N.W.	1.0KG
COVERAGE	2,000 SQ FT
VOLTAGE	12V
POWER	4W
NOISE	≤35DB

- Coverage: up to 2,000 sq./ft.
- Controlled via the AromaPlan app
- Heatless & waterless atomizer technology
- Easily adjust scent intensity and schedules

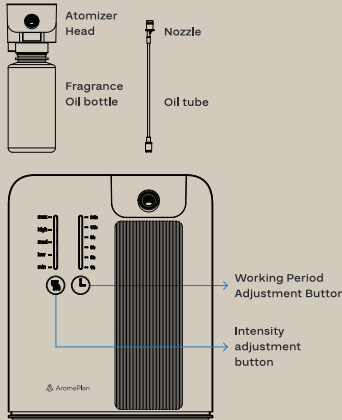

How to use the device

01 Choose your favorite AromaPlan fragrance

02 With the equipment turned off, remove the atomizer head from the diffuser

03 Unscrew the atomizer head counterclockwise

04 Add your favorite fragrance oil

05 Attach the atomizer to the bottle, and insert it into the device.

06 **Optional:** Use the flexible hose to connect your diffuser to the HVAC system

07 Plug the power cord into the equipment and turn on the diffuser

08 Set working hours/intensity using the buttons on the device.

09 Setup the device through the App or buttons

Connection Instructions

- Important Notes:**
- 1- This device is compatible with devices that support Bluetooth wireless technology. Make sure function on your phone is **turned ON**.
 - 2- Ensure the location services on your mobile phone are enabled.

Operation Introduction

Button Operation Instructions:

Button Control: Use the buttons to control the machine. The machine will operate according to the button settings.

Turn On/Off: Long press the "⏻" button until you hear a beep.

Turn On/Off the Fan: Long press the "🌀" button until you hear a beep.

Intensity and Working Period Adjustment:

Working Frequency Adjustment: Short press the "🌀" button to cycle through the working frequency levels from Min to Max.

Min: Work 30s, pause 120s
Low: Work 60s, pause 120s
Med: Work 60s, pause 60s
High: Work 120s, pause 30s
Max: Work 300s, pause 30s

Working Period Adjustment: Short press the "⌚" button to adjust the working period in cycles between 1H to 24H.

1H: Work for 1 hour
3H: Work for 3 hours
6H: Work for 6 hours
8H: Work for 8 hours
12H: Work for 12 hours
24H: Work for 24 hours

Factory Reset:

Long press the "🌀" and "⌚" buttons simultaneously until you hear five beeps. The equipment will then reset to the factory settings.

FCC warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC warning

- English:**
- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
- (1) This device may not cause interference, and
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- French:**
- L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

Where to download the AromaPlan app:
Scan the QR Code to download the app on your phone. Available on the App Store and Play Store.
Attention: Your Scent Diffuser DAP PRO can only be configured using the app.

