B1



QUICK GUIDE

EN Smart Wi-Fi Video Doorbell



 
Compatible with Amazon Alexa

 
Thank you for purchasing Laxihub smart home product. Get started using your new devices by downloading Laxihub, one convenient app that manages everything straight from your phone or tablet. Easily connect to your home WiFi and control multiple devices from the touch of your fingertips.

1. Contents




2. Description





Battery box

 

3. Download the App

Download the Arenti from App Store or Google Play.

















Scan and download Arenti App for free

4. Register an account

In order to receive notification in time, please click "Allow".



Open the Arenti App. If you are a new user, tap create new account and follow the prompts to complete registration.

Note: Please agree with the Privacy Agreement.

5. Pair your device





Click • to add a new device, and select "Doorbell".

Pair your device





Power on your doorbell, you will hear a welcome sound. If the status light is **red** and **blinking** (once per second). The doorbell is successfully powered on and ready for pairing.

Pair your device





Enter the Wi-Fi password and tap Next to proceed. If needed, you can tap Change WiFi to switch to another suitable WiFi network for your doorbell.

Press "Next" to scan QR code using your doorbell. Keep 5~8inches away from your mobile screen.

Pair your device





Press "Next" after hearing a sound from your doorbell.

The Arenti App will start to connect to the doorbell automatically as indicated by the status light blinking rapidly and then staying **solid blue**.

Pair your device



Pair your device

Once the pairing process is complete, a page showing "Device Found!" will appear.

You may choose to edit the device name or assign the device to a dedicated room before tapping Done to finish the pairing process.

Once your camera is paired, your camera can be viewed at anytime from your smartphone as long as there is Internet access

If no device is found and the pairing process failed, please check below instructions:

- 1) WiFi network is 2.4GHz.
- WiFi password entered is correct and the same WiFi network is used for the mobile device.
- 3) Arenti device is in pairing mode.
- 4) Check your WiFi for network activity.

9 10

6. Live viewing



- Return
- 2 Setting menu
- 8 Battery status
- 4 Volume on/off
- 6 HD/SD switch

- 6 Full screen display
- Stream bit rate
- WiFi signal strength
- On the state of the state of
- Cloud storage service

7. History



- Tap to capture a photo/video during live view or playback
 Note: the photo and video
 are saved to the internal
 memory of your smartphone
 - Tap to enable talking
 - Tap to enable motion detection
 - Select a data to review your playback from SD card
 - Tap to search video clips by date

 
11

8. Installation

Before choosing your preferred location, check the WiFi strength/coverage to ensure the doorbell is fully functional.

Battery powered mode

Step 1 Remove the bracket from



Step 2 Fix the bracket on the wall with screws and insert the doorbell into the bracket.



Step 3 Insert the battery box into the doorbell.

 


 


Installation

AC powered mode

Step 1 Remove the bracket from B1.





Step 2 Connect AC power with your wires.



 




Installation

Double sided tape mode

Step 1 Attach the double sided tape to both sides of the bracket



Step 2 Stick the doorbell to a clean flat tightly.



9. Trouble shooting

Status Light	y Blink: Currently connecting
	Solid on: Camera running correctly
	▼ Blink : Awaiting WiFi connection and
	Currently connecting (faster
	blinking)
	Solid on: The camera or network is
	abnormal

What can I do if I fail to pair my
Laxihub device?

- 1. Check your mobile device is connected to
- a 2.4GHz WiFi network.
- 2. Check WiFi password entered is correct and the same WiFi network is used both for mobile and pairing.
- 3. Check Laxihub device is in pairing mode,the status light blinks **red slowly.** (1 time/s)

Does our current Laxihub device support 5GHz wireless?

No - Laxihub device currently does not support 5GHz wireless connection

15

Trouble shooting

How to change the camera network to another router?	First reset the device or remove it on the Arenti App, then configure the device again by the App.
Why doesn't the device identify the SD card?	It's recommended to plug SD card after power cut. Confirm whether the SD card is normally available and the format is FAT32. And the SD card can't be identified when the Internet environment is not good.

Please visit our official website for further assistance.

