




UltraBoard 950 Wireless V2

Instruction Manual

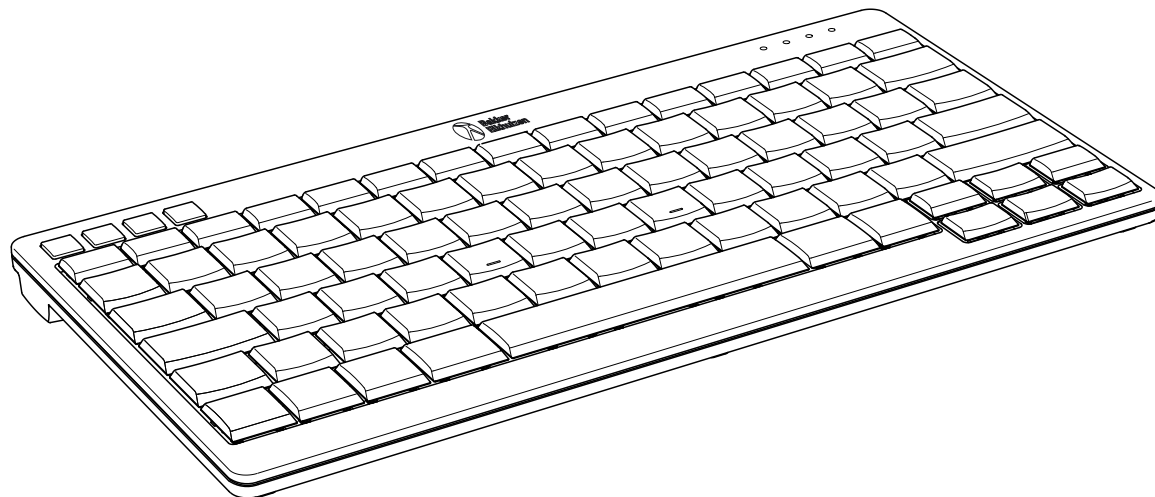





1x



USB-C to USB-A
adapter

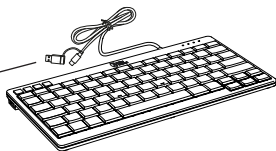

1x

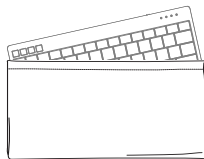


1x

To extend the life of the keyboard, we recommend that you use the supplied sleeve when transport or store.

Um die Lebensdauer der Tastatur zu verlängern, empfehlen wir, während des Transports oder der Lagerung die mitgelieferte Schutzhülle zu verwenden.

Pour prolonger la durée de vie du Clavier, nous vous recommandons de bien utiliser la housse fournie lors du transport ou le stockage.

Om de levensduur van het toetsenbord te verlengen, raden we u aan de meegeleverde hoes te gebruiken tijdens transport of opslag.

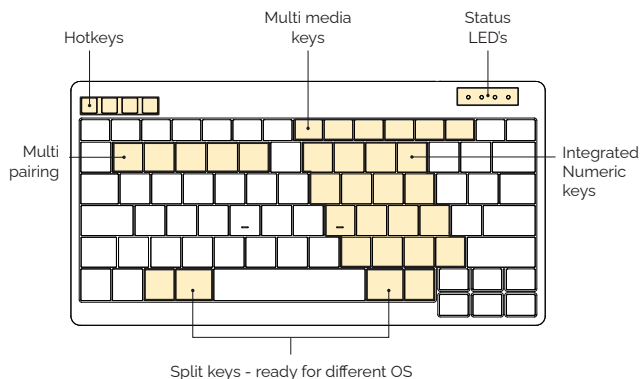

● **LED (Blue)**

⌘ Power on: Flashes 3 times or more
Connected: Solid
Swap Host: Flashes 3 times or more

● **LED (Green) NumLock**


1 Solid when NumLock is active

● **LED (Green) CapsLock**

A Solid when CapsLock is active

● **LED (Green)**

Battery low: Flashes slowly
Charging: Solid
Charged: Off

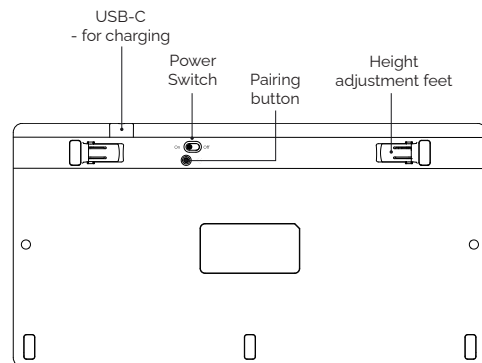

Recommendation: To preserve the battery, fully charging the UltraBoard Keyboard before initial use and turning the device off during transport or storage is highly recommended.




Ensure that your PC supports Bluetooth and has Windows 7 or higher installed. Not all Bluetooth dongles fully support the UltraBoard 950.



Ensure that that your PC supports Bluetooth and has macOS X 10.5 or higher installed. While the UltraBoard may work with older macOS versions, it is not officially supported.

1

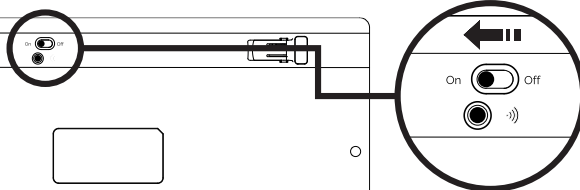

2



On ☐

Bluetooth settings



Select host number

Host 1 is automatically selected. Use host 1 for your most used device.



Push



UltraBoard Keyboard
Connect

Connect new device

In macOS X 10.11 and higher, the keyboard will automatically establish a connection.

★ ★ ★ ★ ★ ★

6-digit identification code



Ready to use!

3

Select/change your operating system:



Fn + W



Fn + A



Fn + W



Fn + Z



Fn + O



Fn + Z

For AZERTY (BNEU950WFR and BNEU950WBE):


Use of function keys in different OS

	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
	 Help	 Rename	 Search	-	 Refresh	-	-	-	-	 Menu	 Fulls- creen	-
 Hold 	-	-	-	-	-	-	 Previous track	 Play/ pause	 Next track	 Mute	 Volume down	 Volume up
	 Reduce bright- ness	 Increase bright- ness	 Menu	-	-	-	 Previous track	 Play/ pause	 Next track	 Mute	 Volume down	 Volume up
	 Reduce bright- ness	 Increase bright- ness	-	-	-	-	 Previous track	 Play/ pause	 Next track	 Mute	 Volume down	 Volume up
 iOS	-	-	-	-	-	-	 Previous track	 Play/ pause	 Next track	 Mute	 Volume down	 Volume up

Use of short keys in different OS

	Ctrl + X	Ctrl + C	Ctrl + V	Home	Mail	PrtScr	Alt/Alt Opt + Tab	Fn + ←	Fn + ↑	Fn + →	Fn + ↓	Alt + Enter
	 Cut	 Copy	 Paste	 Open Browser Hold: Google	 Open Mail	 Print Screen	 Next Appli- cation	 Home	 Page Up	 End	 Page Down	-
	 Cut	 Copy	 Paste	 Home	 Open Mail	 Print Screen	 Next Application	-	-	-	-	-
	Cmd + X	Cmd + C	Cmd + V	Home	Mail	PrtScr	Cmd + Tab	Fn + ←	Fn + ↑	Fn + →	Fn + ↓	Alt + Enter
	 Cut	 Copy	 Paste	-	-	-	 Next Appli- cation	-	-	-	-	-
	 Cut	 Copy	 Paste	 Home Hold: Siri	-	-	-	-	-	-	-	 Send

How to use the numpad?

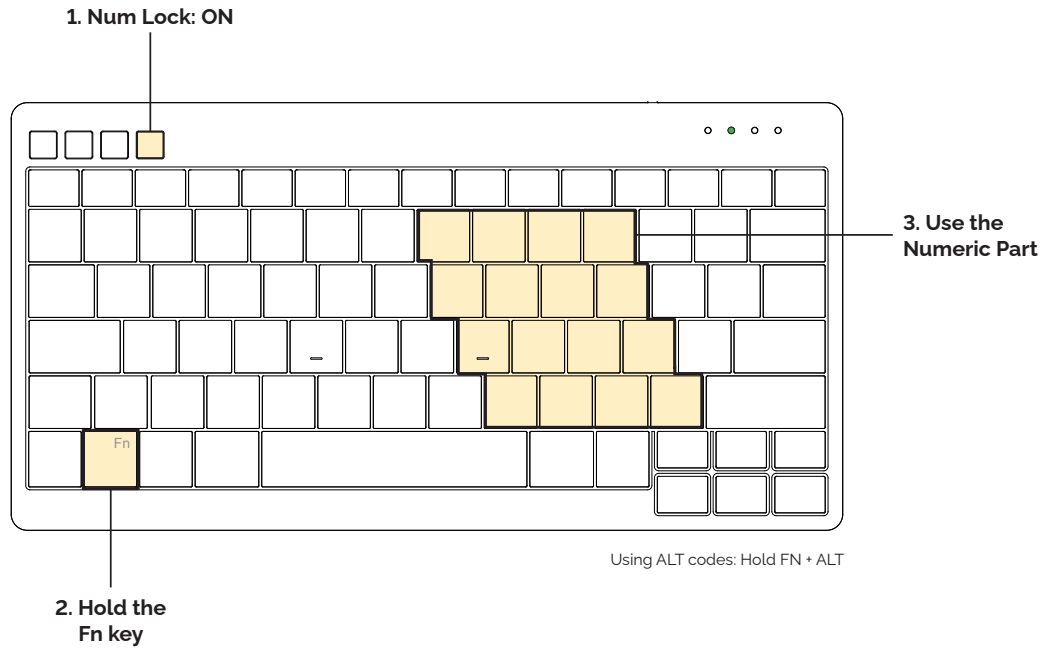

EN

At end of life, the resources used in this device can be recycled if it is disposed with electronic waste.

FR

En fin de vie, les matières premières de cet appareil peuvent être recyclées dans les déchets électriques.

DE

Am Ende der Lebensdauer können die in diesem Gerät verwendeten Ressourcen recycelt werden, wenn diese in dem Elektronikmüll entsorgt werden.

NL

Aan het einde van de levensduur kunnen de grondstoffen in dit apparaat worden gerecycled bij het elektrisch afval.

