



Installation Environment


Kyocera Recommends selecting the Location for the printer as follows:

- 1 Room Temperature range: 50 to 90.5°F
- 2 Humidity Level: 10 to 80%
- 3 Power: A dedicated 120VAC 60Hz 15A outlet

Avoid the following locations when selecting a site for the machine.
Adverse environmental conditions may affect the image quality.


- + Avoid locations near a window or with exposure to direct sunlight.
- + Avoid locations with vibrations.
- + Avoid locations with rapid temperature fluctuations.
- + Avoid locations with direct exposure to hot or cold air.
- + Avoid poorly ventilated locations.

Recommended Installation Space

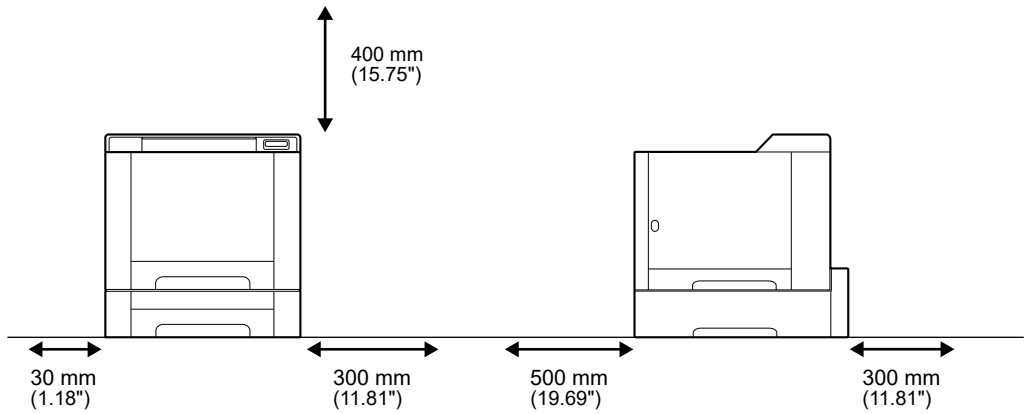


Step 1 Setting up the Machine

- 1 Open the Box. Remove the machine carefully from the box grasping both sides.
- 2 Lift the main unit from the handles by cardboard handles, using two people.

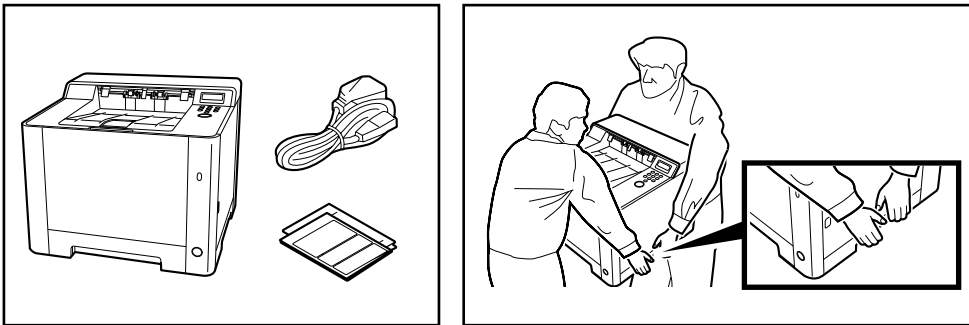


- 3 Remove the fixing tapes.
 - The front of main unit: 3
 - The right side of main unit: 2
 - The rear of main unit: 2
 - The top of main unit: 1

- 4 Open the right cover. After Removing the packing material, shake and install the toner container. Close the right cover.

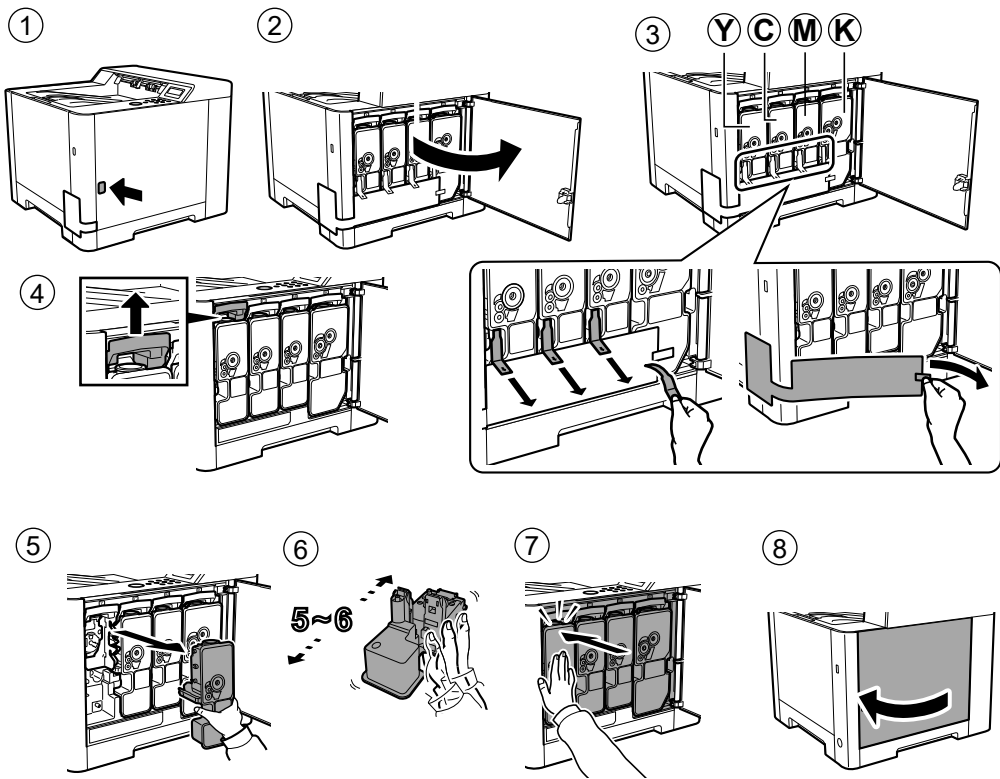


Step 2 Loading Paper


- 1 Pull the Cassette 1 completely out of the machine.
- 3 Fan the paper, then tap it on a level surface.

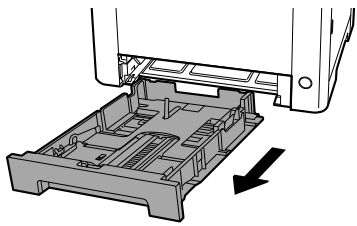


- 2 Adjust the paper length and width guide to the paper size required.

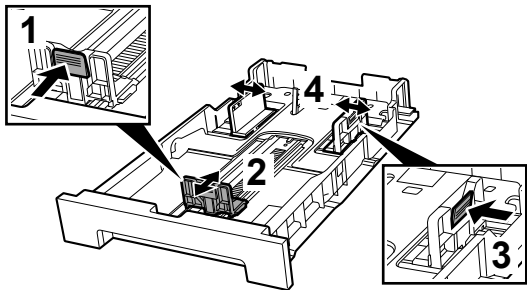

- 4 Load paper.

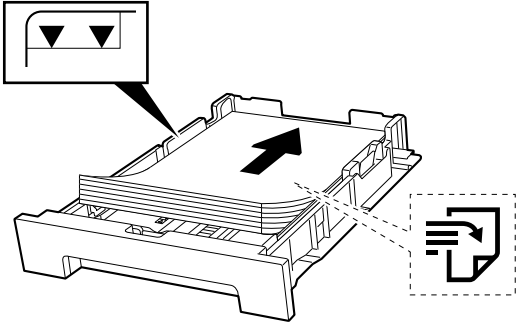


- 5 Gently push the Cassette 1 back in.

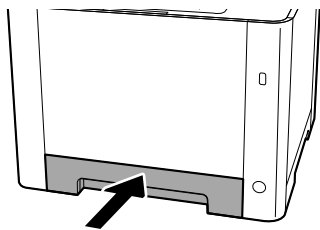


- + Set print side face-up.
- + No bent or folder edges in the paper. Such paper may cause paper jams.
- + Set the quantity of the paper less than the maximum paper indication on the side or the cassette.
- + If the paper is loaded without adjusting the paper length guide and the paper width guides, skewed paper feeding, and a paper jam will occur.

Step 3 Powering on the Printer

- 1 Connect the power cord to the rear of the machine and the other end to the power outlet.

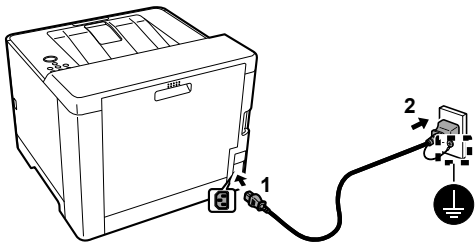

- 2 Turn the power switch ON at the front of the machine.

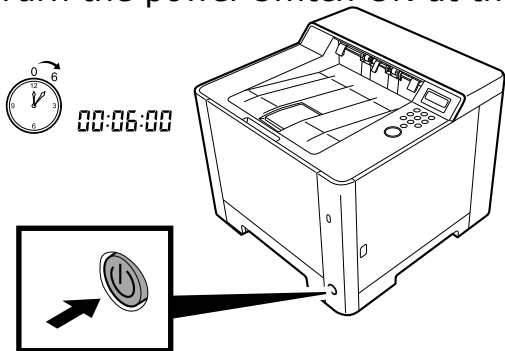

Step 4 Default Settings of the Machine

- 1 Press [▲] [▼] key to select default language > [OK] key.

>Message Language
? English

The Managed by Admin screen appears.
- 2 Select [No (home)] > [OK] key when you use the machine without login as the administrator at home.

Managed by Admin
? Yes (office)

[▲] [▼] key


Managed by Admin
? No (home)

[OK] key

Managed by Admin
No (home)

Step 5 Printing a Status Page

- 1 [Menu] key > [▲] [▼] key > [Report Print] > [▶] key

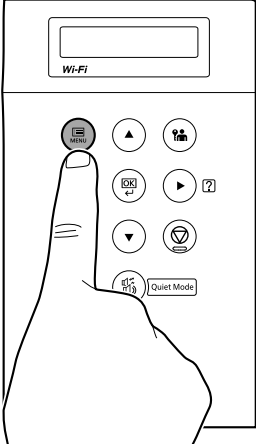


Report Print

1 2
- 2 [▲] [▼] key > [Status Page] > [OK] key > [OK] key

> Print Status Page

> Print Status Page?

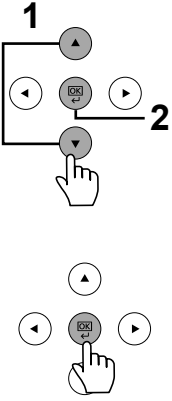

Step 6 Installing Software

Access the following URL and select your model and OS.
Download Center: <https://kyocera.info/>

For Windows
Download and run the Web Installer and follow the on-screen instructions to install the driver and software.

Download

Recommended Driver Utility Manual

File name	Version	Release date	File size
Web Installer	1.6.10.0	2021/04/16	16.4MB

Easy Installation

Web installer (Windows only)

For Macintosh
Download and run the driver and follow the on-screen instructions to install.

Download

Recommended Driver Utility Manual

File name	Version	Release date	File size
Mac Driver	2020402	2021/04/16	836.7KB

Videos on machine setup, software installation, etc. are also available on this site.
<https://kyocera.inst-guide.com/tb11f/>

