



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	< Prev.		1<< / Preset-
	0		0
	Next >		>>1 / Preset+
	EPG		Guide / EPG / -/--
	Up		Up
	FAV		Fav / Marker / PC
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Media		Display / Media
	Back		Back / Return
	Vol +		Vol+
	Mute		Mute / Dimmer
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	<<		<< / Tune-				
	Play / Pause		Play / Slow				
	Play / Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Timer		Shift + Sleep / Timer				
	Web		Smart / List				
	Plugin		Picture / Format				
	Audio		Audio / Lang I/II				
	PIP		Zoom / Size				
	Subtitle		Subtitle / EQ				
	Sleep		Sleep / Timer				
	Text		Text / Goto				
	TV		Shift + 1				
	Radio		TV/Radio /				
	Help		AV / Input / RDS				

