



VESTA

FC101
Electric
CHOPPER


300
WATT



USER MANUAL

PARTS IDENTIFICATION

01

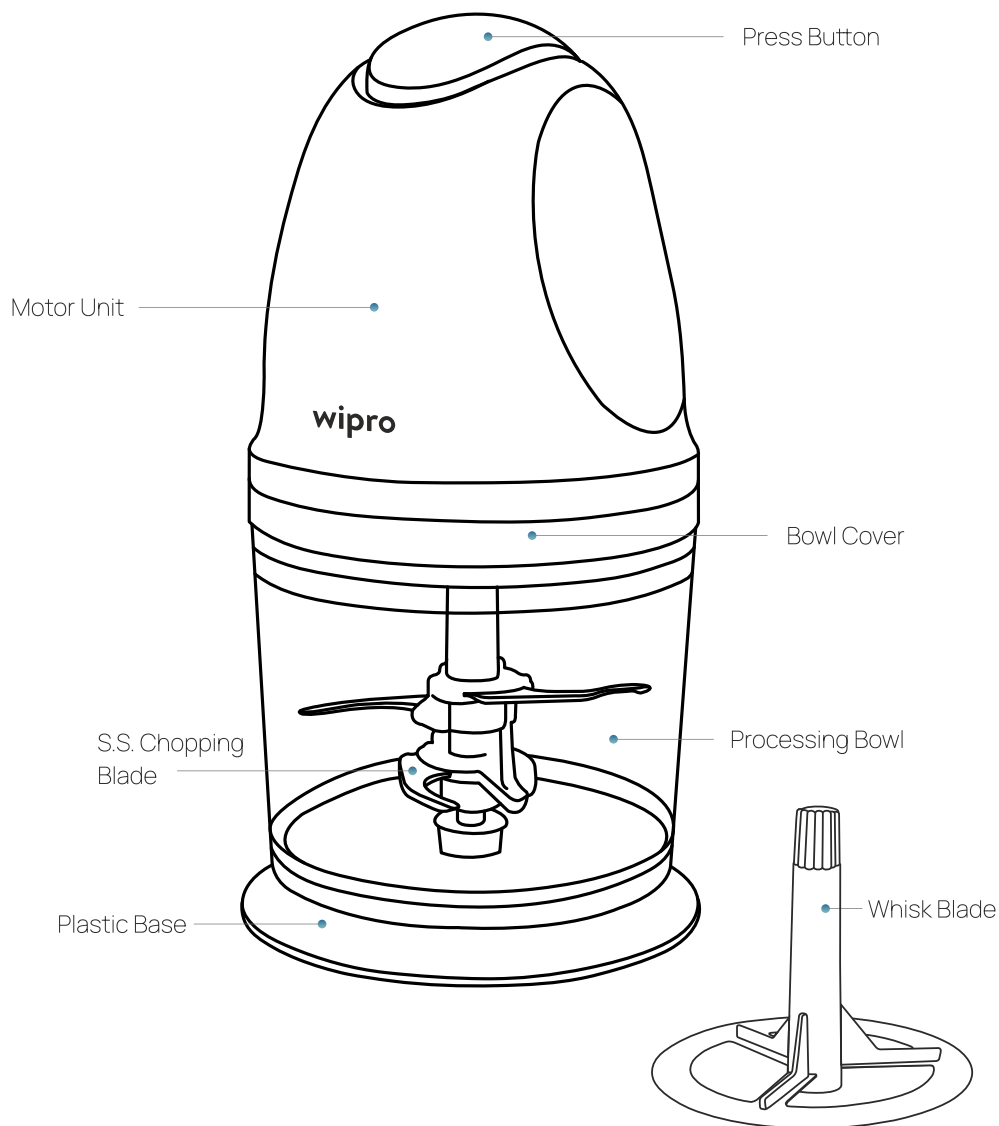

WARNING

02

When using this electric appliance, these basic safety precautions must be followed.

1. Do not open the appliance until the blade stops spinning.
.....
2. The attached motor should not be used for other than the intended use.
.....
3. Unplug the unit from the outlet before you clean or when its not in use.
Allow the kettle to cool before you clean the chopper or before assembling
or separating its parts.
.....
4. Do not let the cord hang over the edge of a table or counter or touch a hot
surface.
.....
5. Do not place the chopper on or near a hot gas, electric burner or in a
heated oven.
.....
6. Keep hands and utensils away from the cutting blade while chopping food
to reduce the risk of severe injury to persons or damage to the food
chopper. A scraper may be used but only when the food chopper is not
running.
.....
7. To protect against a fire, electric shock or personal injury, do not immerse
cord, electric plugs, or motor unit in water or other liquids.
.....
8. This appliance is not intended to be used by persons (including children)
with reduced physical, sensory or mental capabilities, or lack of experience
and knowledge unless they have been given supervision or instruction
concerning the use of the appliance by a person responsible for their
safety.

WARNING

03

9. Avoid contacting moving parts.

10. Do not operate any appliance with a damaged cord/plug, malfunctioned, dropped or damaged in any manner. For repair, please contact Wipro Vesta Customer Care at 1800-425-1969.

11. Make sure the motor unit is closed properly before operating the appliance.

12. Household use only.

TECHNICAL SPECIFICATION

04

Model No	FC101
Power Consumption	300W 230V~ 50Hz

The specifications and design are subject to change without notice*

BEFORE THE FIRST USE

Before using this appliance for the first time, wash the bowl and blade assembly in sudsy water and dry thoroughly. All these parts are safe in the dishwasher; wipe the motor unit with a damp cloth.

HOW TO CHOP/MINCE FOOD

1. Place the bowl on a counter or other flat surface, then slide the chopping blade down over the shaft in the bowl. Be careful not to touch the blade as it is extremely sharp.
2. Place food in the processing bowl, the desired food refers to the chopping guide.
3. Place the bowl cover onto the processing bowl then position the motor unit onto the bowl, the embossment on the bowl cover is linked up to the hole on the motor unit.
4. Depress and hold the pulse button to process.

Note: This product has a pulse button. Avoid running the motor continuously in this mode for period over 1 min. The longer the continuous pulse, the finer the texture. For coarsely chopped foods, use short pulse.

Be sure the blade stops rotating completely before removing the bowl cover. Unplug the unit. Remove the motor unit and grasp the plastic blade hub. Carefully pull the blade assembly out. Remove the bowl and empty the processed food. Do not use bowl for storing food.

HOW TO WHIP/WHISK FOOD

1. Place the bowl on a counter or other flat surface, then slide the whipping blade down over the shaft in the bowl.

2. Place food in the processing bowl, the desired food refers to the shopping guide.

3. Place the bowl cover onto the processing bowl then position the motor unit onto the bowl, the embossment on the bowl cover is linked up to the hole on the motor unit.

4. Depress and hold the pulse button to process.

Note: This product has a pulse button. Avoid running the motor continuously in this mode for a period of over 1 min. The longer the continuous pulse, the finer the texture.

Be sure the blade stops rotating completely before removing the bowl cover. Unplug the unit. Remove the motor unit and grasp the plastic blade hub. Carefully pull the blade assembly out. Remove the bowl and empty the processed food. Do not use the bowl for storing food.

PREPARATION GUIDE

06

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

Wash the bowl, blade assembly immediately after use either with warm/sudsy water or in the dishwasher. Wipe off the motor unit with a damp cloth. Do not immerse the motor unit in water.

NOTE: Do not use chemical, steel, wooden or abrasive cleaners to clean the unit to prevent the gloss loss.

CHOPPING GUIDE

Food Type	Preparation Hints
Bread fresh, Toasted, or stale	Use 1 slice at a time, torn into several pieces.
Fruits and vegetables Canned or Cooked	Fill up to 120g and turn it on for 30 seconds. Use the cooking liquid as needed and pulse/chop for 20 more seconds or until the desired chop is reached.
Fresh Parsley and other leafy herbs	Take up to 120g of leafy herbs. Wash and dry thoroughly, then pulse or chop for 20 seconds or until the desired chop is achieved.
Nuts	Pulse or chop up to 120g for 30 seconds or once the desired chop is reached.
Cookies, crackers	Pulse or chop up to 12 cookies/crackers for 20 seconds or until the desired chop is achieved.

PREPARATION GUIDE

07

WHIPPING/WHISKING GUIDE

Food Type	Preparation Hints
Lassi, Milkshakes	Add 250ml milk/curd based on what you are preparing. Add sugar as per your taste or fruits of your choice and whip for 30 seconds. Check the bowl and pulse again till the desired result is obtained.
Tomato Puree	Fill up the bowl with medium-sized chopped tomatoes and whip it for 30 seconds. Check the bowl and pulse again till the desired result is obtained.
Extracting Butter	Add 250g of cream and whip it for 40 seconds. Check the bowl and pulse again till the desired result is obtained.
Whipped Cream	Add 250g of cream and whip it for 30 seconds. Check the bowl and pulse again till the desired result is obtained.
Cooked vegetables and meats pureeing	Cut up the desired vegetables into small blocks and boil them till its soft. Fill 150g of vegetables and whip it for 20 seconds. Check the bowl and pulse again till the desired result is obtained.

ENVIRONMENT

Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment.

For more information please visit

Wipro Smart light: www.wiproconsumerlighting.com