 


Quick Start Guide

 
1 Turn on Your Speaker

When the AC adaptor is connected to the speaker and the AC outlet, it will turn on automatically and the I/⏻ (ON/Standby) indicator will light up in green.

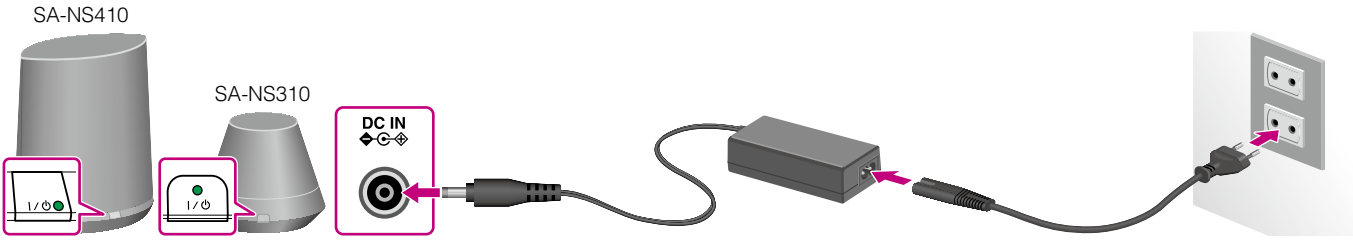

* The shapes of AC outlets and plugs differ by region.

Set the NETWORK STANDBY/STANDBY switch to NETWORK STANDBY if you want to use the speaker via a home network.

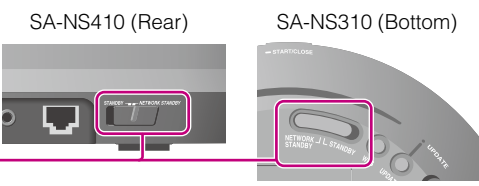

SA-NS410 (Rear) SA-NS310 (Bottom)

Tips

- It may take a while until the speaker is turned ON. During starting-up, the I/⏻ (ON/Standby) indicator flashes.
- If the I/⏻ (ON/Standby) indicator is lit in red, press the I/⏻ (ON/Standby) button.

Keep the SSID (Wireless Network Name) and Security Key (WEP, WPA key or password) for your wireless network handy.

2 Set up Your Speaker (Wireless network connection)

Which device would you like to use to set up the speaker?

iPhone/iPod touch/iPad

- 1 Download the “NS Setup” application and launch it.

Download the free application here:

For iPhone/iPod touch/iPad

Available on the App Store

For Android devices

ANDROID APP ON Google play

When setting up with an iPhone/iPod touch/iPad
Go to [Settings] - [Wi-Fi Networks] and select [Sony_Wireless_Audio_Setup].
If “Sony_Wireless_Audio_Setup” does not appear, wait until the speaker finishes turning on.
If it still does not appear, reset the speaker (see the reverse side).

- 2 Follow the on-screen instructions.

When setup is completed, press the “Play test sound” button to confirm operation of the speaker by playing the test sound.

Android device

- 1 Load the supplied CD-ROM into the CD-ROM drive of your PC.

If the program does not start automatically, double-click on “NS_Setup.exe” on the CD-ROM.

- 2 Follow the on-screen instructions.

When setup is completed, press the “Play test sound” button to confirm operation of the speaker by playing the test sound.

Windows PC

Note Wireless LAN is required when setting up the speaker.

- 1 Load the supplied CD-ROM into the CD-ROM drive of your PC.

If the program does not start automatically, double-click on “NS_Setup.exe” on the CD-ROM.

- 2 Follow the on-screen instructions.

When setup is completed, press the “Play test sound” button to confirm operation of the speaker by playing the test sound.

Mac

- 1 See “Option 3: Manual setting method using an Access Point Scan (for PC/Mac)” in the supplied Operating Instructions.

Setup completed!

Setup is required only once for each speaker.
No matter which device you use to set up the speaker, you can enjoy all features of Network Speaker and control playback from other devices in the same network.

3 Play Music!

What would you like to listen to?

Music on an iPhone/iPod touch/iPad

- 1 Launch “Music” application.
- 2 Tap  and select [SA-NS410] or [SA-NS310].

iPhone, iPod touch or iPad



Internet music streaming using an Android device/ iPhone/iPod touch/iPad

- 1 Download the “Network Audio Remote” application and launch it.

Download the free application here:

For iPhone/iPod touch/iPad

Available on the App Store

For Android devices

ANDROID APP ON Google play

- 2 Select the desired Internet music streaming.

e.g.  Music Unlimited

[Music Services] - [Music Unlimited]
- [Genre]

Music on a Windows PC (including iTunes music)
Wireless LAN is required when setting up the speaker.

 
When using Windows Media Player

 
See “Listening to Audio Content Over Your Home Network” in the supplied Operating Instructions.

iTunes music on a Mac

When using iTunes

- 1 Launch “iTunes” application.
- 2 Click  and select [SA-NS410] or [SA-NS310].

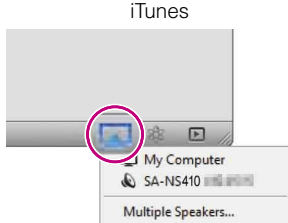

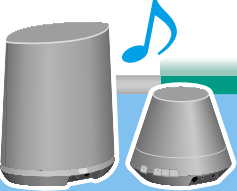 That's it!

To make full use of the speaker, see the reverse side.
For more details, see the following website: <http://www.sony.net/sans>

Tip When setting up by Access point with WPS button, see the supplied Operating Instructions.

What can be done with your device and this Network Speaker

You can set up the Network Speaker using any of the following devices:

iPhone/iPod touch/iPad or Mac

- Using AirPlay to send music
- Using iTunes to play music
- Accessing the Internet music streaming such as Music Unlimited
- Using your iPhone/iPod touch/iPad instead of the remote control

Android phone or tablet

- Accessing the Internet music streaming such as Music Unlimited
- Controlling music playback with your Android device
- Using your Android device instead of the remote control

Windows PC

- Playing your music stored on a PC with your Network Speaker

If the OS of your PC is Windows 7

- Using your PC as both server and controller (and the [Play To] function arrows you to listen to music easily)

 
For more information and instructions, visit <http://www.sony.net/sans>

Indicator information

SA-NS410

Front

Side

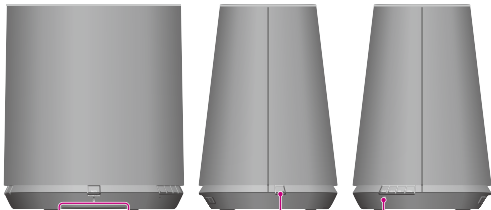


IlluminationI/Link

SA-NS310

Front

 Side

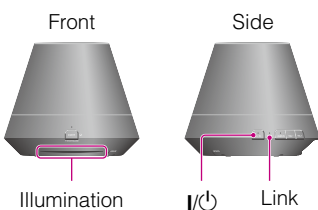


IlluminationI/Link

Indicator	White	Blue	None	
Illumination	 Lit: – In Playback mode – In selecting audio input  Flashing: - During VOL buttons operation  Cycle of flashing at 1 sec: - In preparation for playback  Cycle of flashing twice in 1 sec: - In pause mode  Cycle of flashing 4 times in 1 sec: - An error has occurred  /  Flashing: During starting-up	 Lit: - In stopped Playback mode  Flashing: - During VOL buttons operation  Cycle of flashing at 1 sec: - During muting  Cycle of flashing twice in 1 sec: - During transition to Standby mode	 Lit: – In Standby mode – During updating	
I/ (ON/Standby)	 Lit: - In operation  Flashing: - During starting-up	 Lit: In network standby mode	 Lit: - In standby mode  Flashing: - In protection mode ➡ Disconnect the AC cord of the unit then reconnect it after a few seconds. Then turn the unit on. If the symptom recurs, consult your nearest Sony dealer.	 Lit: AC adaptor is not connected
LINK	 Lit: - During wireless connection  Cycle of flashing for 2 sec and dark for 1 sec: - Begins wireless connection	 Lit: - During wired connection  Cycle of being lit for 2 sec and dark for 1 sec: - Begins wired connection	 Lit: - An error has occurred (with the wireless LAN setting/ not connected)  Cycle of flashing 4 times in 1 sec: - A wireless LAN WPS error has occurred  Lit: - A wireless network setting process is not finished	

To update the software

 When a new update is available, the UPDATE indicator is lit in green while the unit is connected to the Internet. Press and hold the UPDATE button until the illumination is turned off.

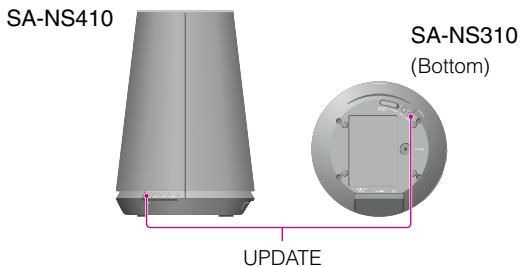

To reset the speaker

The previously registered settings or information can be reset. Press the ALL RESET button on the bottom of the unit with a pointed object (such as a small pin) until all indicators light.

