

CDL-811P/811R

USER MANUAL

Durable Door lock without worry about A/S

Durable body of metal

Auto lock/rewind/double lock function

Use of 3D touch and imaginary function to secure password

Password/Smart key/Fingerprint can be registered multiple

Multi-level volume control / Selectable silence function

Light button that is visible even in dark places

Emergency power function (9V square battery)

High-voltage protection/Fire protection/Anti-hack system

Intuitive registration UI

COMMAX Co., Ltd.

Thank you for purchasing COMMAX products.

Before you use, please read this manual and use

correctly. COMMAX is not responsible for any safety

accident due to abnormal operation of the products.



⚠ Due to non-key door lock, it may cause destruction of digital door lock when it is in trouble.

Warning for Safety

 

⚠ These warnings are to secure user's safety and prevent the possible loss of property. Please read carefully below to use the product in a correct manner.

- * Do not disassemble, repair or modify the device by any unauthorized person.
- * This product is for indoor, we do not guarantee any operation at other environment.
- * Please use the product after reading User's Manual.
- * Do not press the buttons with any tools(Ex. Awl, Pins..)
- * Change your access code from time to time for your safety.
- * Do not impact on the device.
- * Be careful that leakage or rupture may occur when inserting a battery in wrong direction.
- * Be careful that water should not seep into the device.
- * When replacing a battery, change all the batteries with new alkaline batteries.
- * Please wipe the product with soft, dry towels.
- * Please keep product warranty card for A/S.
- * Do not use this product with other purposes except digital door lock function.

Products specifications and components

Sort		Specifications
Opening method	Password	4~12 digits (Up to 4 can be registered)
	RF key	It can register within 30
	Fingerprint	It can register within 100
	Wallpad interlock	Optional (CDL-447)
Rated voltage	DC 6V	LR6 1.5V AA sized alkaline batteries 8
Emergency power	DC 9V	Alkaline batteries 8 (Separate purchase)
Type of product	CDL-811P(Fire-proof, temperature-sensitive form, key primary keylock / F-T-K-M)	
High temperature sensing	Temperature sensor type	60+-10 dgrees
material	Out body	AL,ZN,ABS,PC
	In body	AL,ZN,ABS,PC


Sort	Using frequency	Number of channels	Modulation format	Antenna power
RFID	13.56Mhz	1	ASK	93.5dBu/under m@ 10m
Wireless devices for safety systems (optional)	447.275Mhz	1	FSK	10mW/under

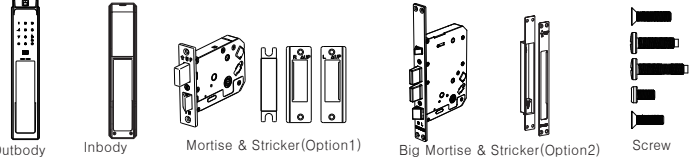

*The components of the product may change depending on the installation environment.


Outdoor Names and Functions

No	Name	Specifications
1	Name board	Enter the number when registering or changing password.
2	Battery warning light	Turns on with an audible alarm at low voltage.
3	Smart key input unit	It is the place where smart keys are recognized to open the door. You can open the door by registering the smart key or touching the registered smart key.
4	Emergency hole	Key formula only
5	Outdoor handle	It is Used to open or close doors from outdoors.
6	Emergency power terminal	In case the battery is completely discharged, you can use 9V battery then, the power will be on.
7	Fingerprint input unit	You can register your fingerprint, open the door by using the fingerprint registered.

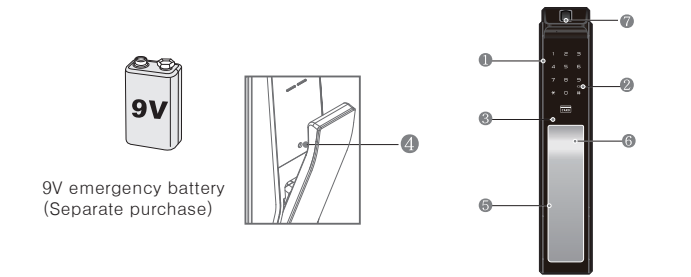

Indoor Names and Functions

No	Name	Specifications
1	Battery cover	This cover protects the batteries and the registration button.
2	Interlocking pack	Receive (CDL-447, optional)
3	Registration button	It is used to register or change password or smart key
4	Mortise	It is attached to the side of the door and closes or locks the door.
5	Dead bolt (Square locking type)	It locks the door by locking it on the door frame.
6	Latch bolt	It serves to keep the door shaken
7	Alkaline AA battery	It is a power source that operates the door lock.
8	Double lock button	It can be used to lock the door so that it can not be opened outside, such as during nighttime hours that require attention.
9	Indoor handle	It is used to open or close the door indoors.

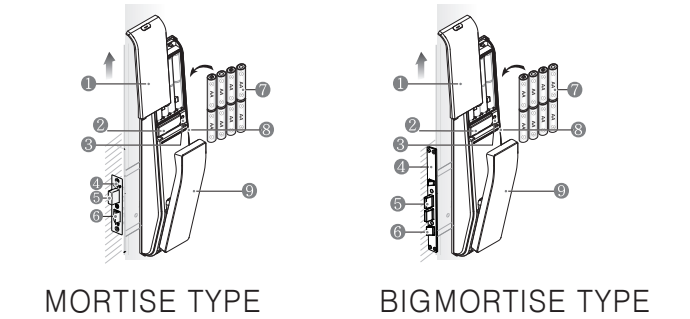


How to register fingerprint

1. Press [registration] button
2. After pressing the existing password, press the [*] button
3. Press [4]button in the number plate of outdoor side



 4. Contact fingerprint to be registered to fingerprint input unit



Reference

1. Up to 100 fingerprints can be registered.
2. If registration is not in progress for 20 seconds, registration will be canceled.

How to register and change password

1. Press [registration] button
 2. After pressing the existing password, press the [*] button
 3. Press [1]button in the number plate of outdoor side
 4. Enter new password
- After entering the new password(4~12 digits), press * button and the confirmation tone sounds and registration is completed. Press the * button once more to end registration.

Reference

1. When adding the password, repeat the above item 3 before the number plate lamp turns off.
2. Up to 4 password can be registered

Cautions

1. If you register a new password, the existing password will be automatically deleted.
2. Do not use consecutive numbers when registering your password.

How to register Smart key

⚠ When registering or re-registering a smart key, you must register all the smart keys you have at once. Also registered smart keys are door lock only. It may not work when used with other products.

1. Press [registration] button
2. After pressing the existing password, press the [*] button
3. Press [2]button in the number plate of outdoor side
4. Contact smart key to smart key input unit

If you touch the smart key to be registered one by one, you will hear a confirmation sound every time you touch it. Registration is completed by clicking the [Registration] button on the indoor side body.

Reference

1. When adding the password, please repeat the above item 3 before the [License plate lamp] turns off.
2. Up to 30 smart keys can be registered.

Cautions

1. When registering a new smart key, the existing smart key is automatically deleted.

How to register the linker (optional)

1. Press [registration] button
 2. After pressing the existing password, press the [*] button
 3. Press [3]button in the number plate of outdoor side
 4. Press the [Register] or [OP / CL] button on the linker
- After pressing the front door button of the wall pad (video phone), press the [Registration] or [OP / CL] button of the interlocker when the standby mode is canceled.

Reference

1. You can register up to 5 interlocks.
2. Repeat step 3 when registering the linker.

How to delete fingerprint, smart key, linker

1. Press [registration] button
 2. After pressing the existing password, press the [*] button
 3. Press number in the number plate
 4. Press #button
- Press and hold the [#] button for 5 seconds to delete the registered fingerprint, smart key or interlock.

How to set auto lock, manual lock

⚠ Make sure to turn off the Mortise Square Lock on the indoor body.

1. Enter password
 2. Press [#]button
 3. Press [4] or [7]button and press registration button
- Auto lock setting: Press the [4] button and press the register button to set the auto lock function after a confirmation tone sounds.
Manual lock setting: After pressing the [7] button and pressing the register button, the manual lock function is set after a tone is heard.

How to set and dismiss 3D touch

1. Enter password
 2. Press the [#] button twice in succession, then press the 0 button.
 3. Press [Registration]button
- When you press the [Registration] button on the outdoor side body, the 3D touch function is turned on or off.
- Set tone: Piriricic
 - Off sound: Piric

Reference

1. It is a function to strengthen the security of password and it is a function to set a virtual number instead of the original number when the password is registered and authenticated for more than 1 second.
Ex) When 1 is long pressed: It is recognized as a virtual number other than 1.
2. Combined with the imaginary function of this product, password security is further strengthened.
3. You can set each number and you can check that the lamp blinks when you press for more than 1 second.
4. 3D touch mode is turned off at the factory.

Cautions

1. When the 3D touch mode is released, the password is reset to "1234".
2. In case of master registration / deletion, fire / accident, etc., it is recognized as normal number mode.


Open the door in outdoor

Method 1 Open the door by password

1. Enter password
 2. Press [*]button
- When you press the [*] button, you will hear a confirmation tone and then open when you open the door.

Method 2 Open door with smart key


1. Contact smart key to smart key input unit

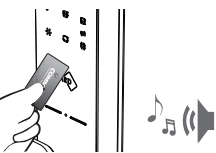

When the registered [Smart Key] is touched to the smart key input part, a confirmation tone is heard and it opens when you open the door.

Method 3 Open door by interlocking(Optional)

1. Press the [OP/CL] button on the interlock

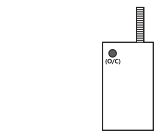

Press the [OP / CL] button on the interlock to open the door.

Door locking in indoor and outdoor

Set lock	Indoor	Outdoor
Auto lock	Automatically locked after 2 seconds after	Locked automatically after 2 seconds after door closes
Manual lock	Press the [double lock] button on the indoor side body	Touch the number plate during 2 secods

Reference


- When you press [double lock] button in manual lock mode, you will hear a "beep" buzzer sound when the door is locked and inform you that the door is lockedv.

Internal double lock setting

It is a function that can not open a door with a password or a smart key outside the door.

Setting

- While the door is locked, press and hold the [double lock] button for 3 seconds

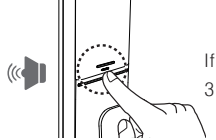


If you press and hold the [DUAL LOCK] button for 3 seconds, the setting is completed with "OK" sound.


How to release internal

- Push or pull the knob from inside to open the door

 - Press the [double lock] button inside and dismiss



CDL-811P

 

CDL-811R

Sound Pause Mode

Temporary silence function (1 time) regardless latest volume setting

How to


- Touch number plate and press [#]
- Press [*] after password or, contact Card / Fingerprint to open the door.

Reference

Sound is back to the original volume if pause mode is operated once

High Temperture Alarm

Once extremely high temperature is detected (60℃± 10℃), locker is automatically released to open the door with huge sound to secure user' s safety.

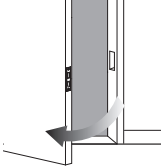

Emergency Power


When door can not be opened due to fully discharged battery.

1. Contact the terminals of 9V battery to emergency power outlet

Press [Password] and [*] to open the door while contacting terminals of 9V battery to emergency power outlet.




9V emergency battery (sold separately)

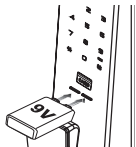

Emergency Key

When door is not opened due to malfunction.

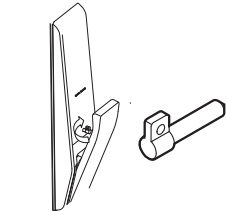


Open the bottom cover of outdoor body to use mechanical key box. Key-in to open the door for emergency release.

Caution

- Your mechanical key is recommended to be stored outside of the door for emergency use.

Deactivation from outdoor unit

1. Input Password

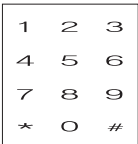

When LED lights on, input password


2. Press [#], [9] button



Press [#] then press [9], indoor dual lock is off with beep sound


Dual authentication / Registration authentication setting

1. Input password

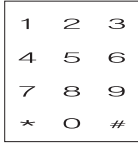

Touch number plate. When LED lights on, input registered password

2. Press [#] button twice, press [1] or [8] button.

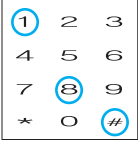

[1] : Dual authentication
[2] : Registration authentication

3. Press [Regist.] button.



Beep

Open the battery cover and press [registration]button

Once press [Regist.] button on outdoor body, Dual authentication or registration authentication mode is on or off.

Active: Sound – Bee ri ri rik


Deactive: Sound – Bee rik

Reference

- If dual authentication mode is activated, Password + Card should be confirmed to open to door.
- If registration authentication mode is activated, first authentication by existing password should be done for the next step.
 - No dual authentication is activated if factory setting.
 - Registration authentication is activated if factory setting.
 - To deactivate dual authentication / registration authentication, repeat the same procedure for activation

BURGLAR ALERT


If door to be opened by abnormal operation such as door gap break through, burglar alert rings with more than 80db noisy sound.

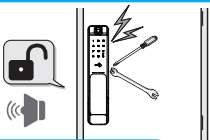

How to deactivate burglar or temperature alert

Remove batteries or [password + *], [smartkey touch]

* if temperature is too high, no deactivation.

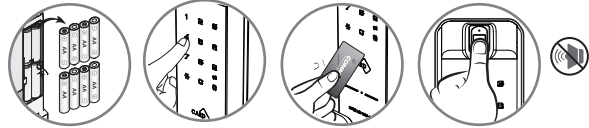

Factory Reset Mode


1. Press [Regist.] button.



BEEP

Open the battery cover and press [Regist.] button for 5 secs

2. Input “123578951” when number plate lights on

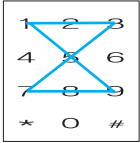

3. Press [#] button for 2 secs.



Factory default mode is completed with beep sound.

Caution

- All settings back to the default after factory reset

Anti-mischief alert and 1 minute pause

If unregistered [password], [smartkey], [fingerprint] keeps used more than 5 times continuously, freeze operation for 1 minute with alert sound.




Reference

- To deactivate alert sound, open the door from indoor body handle
- If mechanical key is available, deactivate alert sound by key

Deadbolt Jam alert

When deadbolt is jammed during door open/close, alert sound of bee bee bee bee” rings 3 times.

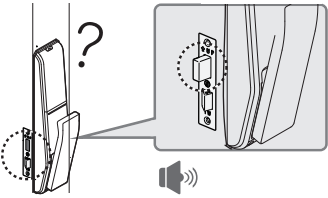

Caution


- If no sound deactivation or door lock malfunction, product installed position has to be adjusted. Please contact your local installer or service provider.

Volume Adjustment

Deadbolt of indoor unit must be come out from mortise before setting

How to

1. Input Password

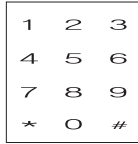


When LED lights on after touching number plate, input registered password

2. Press [#] button



3. Press [3] or [6] to adjust volume

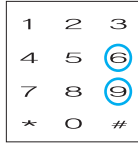

[3] for volume up
[6] for volume down

Reference

- Available total 8 levels of volume sound
- If sound pause mode, numbers are only flicking without sound

BATTERY REPLACEMENT ALERT

If battery alert light is on on number plate or beep sounds ring, battery has to be replaced. All batteries must be replaced with new one at once.



Caution

- Lifetime of battery can be varied according to manufacturers, date of production, working condition. (Expected lifetime : 10 months assuming no wireless operation, AA type alkaline 8ea, 10 times per one day use)
- If battery liquid leaks out, product can be damaged. Regular checking is recommended - every 6 months.
- Battery lifetime might be shortened if wireless module is activated.

Door Open Alert during automatic lock setting

To inform door open status during automatics lock setting, alert sound rings 2 times with each 15 minutes interval if door opened.



Self-Diagnosis Table by each LED number flicking

To see the status of product by means of checking flicking number

ACTION	SELF-DIAGNOSIS
Flicking ALL LEDs	–Anti-mischief alert and 1 minute pause
Flicking LED number 2	–Error on password, card, fingerprint set
Flicking LED number 3	– Full of registered fingerprint. – Full of registered password, card, BLE device
Flicking LED number 4	– Deadbolt Jam
Flicking LED number 5	– Burglar Alert
Flicking LED number 6	– Unregistered password, card, fingerprint
Flicking LED number 7	– Already registered address
Flicking LED number 8	– Fire Alarm
Flicking LED number 9	– Dual lock from Indoor unit
Flicking LED number 0	– Malfunction of fingerprint module

Summary of how to use

Function	Default	
Fingerprint registration		[Registration] button ⇒ password ⇒ * ⇒ [1] button ⇒ Fingerprint registration
Delete all fingerprints		[Registration] button ⇒ password ⇒ * ⇒ [9] button ⇒ [#] button More th 5 seconds
Password registration/change	1234	[Registration] button ⇒ password ⇒ * ⇒ [2] button ⇒ Password to regist ⇒ [*] button
Card registration	None	[Registration] button ⇒ password ⇒ * ⇒ [3] button ⇒ Card (tag) recogni
Delete all card		[Registration] button ⇒ password ⇒ * ⇒ [7] button ⇒ [#] button More than 5 seco
Interlocking registration	None	[Register] button ⇒ password ⇒ * ⇒ [4] button ⇒ Remote control [OP / ⇒ [Registration] button
Delete the all interlocking		[Registration] button ⇒ password ⇒ * ⇒ [8] button ⇒ [#] button More th 5 seconds
Open the door indoors		Door lock handle: Push the manual opening / closing device towards the door.
Close the door indoors		Auto lock: Auto lock when the door is closed
Open the door outdoors		Manual Locking: Press the [Internal Dual Locking] button
Close the door outdoors		Password: LED of window number LED ON ⇒ Enter password ⇒ Press [*] button
Auto lock setting	Automatic	Card: Card contact with card recognition
Manual lock setting	Automatic	Emergency key: Rotate after inserting emergency key into Emergency key insertion part
Set dual authentication mode	Release	Auto lock: Auto lock when the door is closed
Set registration authentication mode	Release	Manual locking: Touch the license plate of the window
3D touch authentication mode	Release	Enter the password ⇒ Press the [#] [#] button ⇒ Press the [4] button ⇒ Press the [Register] button
Internal dual lock LED setting	Release	Enter the password ⇒ Press the [#] [#] button ⇒ Press the [1] button (individual authentication / Dual authentication) ⇒ Click the [Register] button
Internal force lock setting	Release	Enter the password ⇒ Press the [#] [#] button ⇒ Press the [8] button (General registration / double registration) ⇒ Click the [Register] button
Release internal force lock	Release	Enter the password ⇒ Press the [#] [#] button ⇒ Press the [0] button ⇒ Press the [Register] button
Etiquette mode function	Normal m	Get sound (beep sound). release sound (beep sound)
Buzzer volume setting	Normal m	Enter the password ⇒ Press the [#] [#] button ⇒ Press the [3] button
Release alarm sound	Normal m	Treble: Enter password ⇒ Press [#] button ⇒ Press [3] button Bass: Input password ⇒ Press [#] button ⇒ Press [6] button Indoor: When battery is removed Outdoors: Password, card authentication