

Elechomes

Model: MMF-9202

# Milk Frother



## User Manual

Thank you for choosing Elechomes! Please read this manual carefully to ensure safe use and keep it on hand for future reference.

## THANK YOU FOR PURCHASING THE MMF-9202 MILK FROTHER BY ELECHOMES

Should you have any questions or concerns about your new product, feel free to contact us via [support@elechomes.com](mailto:support@elechomes.com).

We hope you enjoy your new product!

## GET LATEST INFO & INSPIRATION

Find @Elechomes on social media for healthy diet tips, chef's choice recipes, share your life with us.

[@Elechomes](#)

[#Elechomeslifestyle](#) • [#Elechomeslifelover](#)

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- This device must be grounded while using.
- Do not immerse the device in water or other liquids to avoid the danger of short-circuiting!
- Never operate damaged appliances (incl. mains cables).
- Do not place the device on a polished wood surface for it could damage the wood.
- Never touch the live parts.
- Only operate the device through a professionally installed socket supplying the correct voltage.
- Do not use extension cables.
- Never let the main cable hang loose, or remove the plug with wet hands, or lay or hang on hot surfaces, or let it contact with oils.
- Unplug the appliance after each use or when the appliance is not in use or before changing accessories or cleaning the appliance.
- Do not touch the metal parts or its housing while using, otherwise, it may cause burns or scalding.
- Do not operate the device with a damaged cord or plug. If the supply cord is damaged, it must be replaced by manufacturer, or service agent or qualified persons in order to avoid a hazard.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be closely supervised to ensure they do not play with the milk frother.

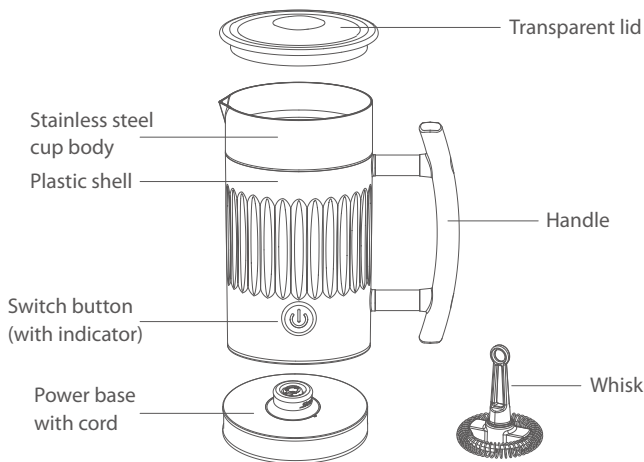
- Do not operate the device outdoors.
- Do not operate the device without milk in the jug.
- This is an attended appliance.
- Turn the appliance and main power off when not in use.
- Never touch the rotating parts. Risk of injury!
- By exceeding the filling capacity the jug may overflow.
- Appliance to be used only in conjunction with the basic unit provided.
- Never place and operate the device on uneven surfaces.
- Use only fire blankets to extinguish fires if the device is on fire.
- The device is not designed for commercial or industrial use--- for household use only.
- Do not insert any objects and/or fingers into the apertures of the device.
- Before disposal, disable appliances, cut off mains cable and take them to an official refuse site.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments.
  - farmhouses.
  - in hotels, motels and other residential type environments.
  - bed and breakfast type environments.
- Avoid spillage on the connector.
- Avoid potential injury from misuse.
- There is residual heat on the heating element surface after use.







## SAVE THESE INSTRUCTIONS

## BEFORE THE FIRST USE

- Unpack the box with caution. Please keep all the packaging materials until you are satisfied with everything and make sure the device is in working order.
- Remove all the packaging and foils and store them for later use. Check if the device has been delivered completely and that it is in perfect order.
- Before using the appliance for the first time please clean the jug and the accessories, as described under the chapter "Cleaning and Care" to remove dust or production residues.

## KNOW YOUR MILK FROTHER



Whisk	Function	Light	Max capacity	Time	Temperature
	Hot Frothing (Airy foam)		150mL	120-150S	60-70°C
	Hot Frothing (Dense foam)		150mL	120-150S	60-70°C
	Hot Milk		300mL	190-230S	60-70°C
	Cold Milk Frothing		150mL	65S	60-70°C
	Hot Frothing with chocolate milk		Full milk 300mL + Chocolate powder or chocolate bean 50g max	190-230S	60-70°C

**Note:**

Working Time Description: the heating time of the split foam machine is related to the initial temperature of the environment / milk / machine. Under different conditions, the working time is also different. The working time of the table above is based on the initial temperature of the milk is 5-10 °C at 25 °C room temperature.

## HOW TO USE

### Hot Frothing (Airy foam)

Put the whisk into the jug, pour milk (less than the MAX marker (150ml)), and put on the transparent cover. Touch and hold the button for 1 second, then the button with red backlight will be always on, the whisk starts to work, and heating begins. The hot-mixed with airy foam is done until the button with red backlight flashes. Now, you can enjoy the hot milk foam.

### Hot Frothing (Dense foam)

Put the whisk into the jug, pour milk (less than the MAX marker (150ml)) and put on the transparent cover. Touch and hold the button for 1 second, and then touch again. The button with green backlight will be always on, the whisk starts to work. The hot-mixed with dense foam is done until the button with green backlight flashes. Now, you can enjoy the hot milk foam.

### Hot Milk

Put the whisk into the jug, pour milk (less than the MAX marker (300ml)), and put on the transparent cover. Touch and hold the button for 1 second, and then touch it twice continuously, then the button with purple backlight will be always on, the whisk starts to work, and heating begins. The hot-mixed is done until the button with purple backlight flashes. Now, you can enjoy the hot milk.

### Cold Milk Frothing

Put the whisk into the jug, pour milk (less than the MAX marker (150ml)), and put on the transparent cover. Touch and hold the button for 1 second, and then touch it three times continuously, then the button with blue backlight will be always on, the whisk starts to work, but heating does not work. The cold-mixed with foam is done until the button with blue backlight flashes. Now, you can enjoy the cold milk foam.

## Hot frothing with chocolate milk

Put the whisk into the jug, and pour in 300ml milk. Touch and hold the button for 1 second, and then touch it twice continuously, then button with purple backlight will be always on, the whisk starts to work, and heating begins. While mixing, pour in 50g chocolate powder or chocolate chips. The hot-mixed chocolate milk is done until the button with purple backlight flashes. Now, you can enjoy the hot chocolate milk.

## HINTS AND TIPS

Here are some handy hints to help you get the best out of your frother.

- Always use your frother first to froth or heat your milk. While it is operating, you can prepare your coffee or hot chocolate and then enjoy your drink immediately.
- For the best results, please use whole milk (fat content >3.0%).
- Cold milk can be frothed with this frother. But it doesn't mean you can cool down the milk with it for the frother works at normal temperature.
- Milk can be heated to approximately  $65\pm 5^{\circ}\text{C}$ . This is the ideal temperature to ensure the flavor of your coffee is not destroyed for you don't have to wait too long until you can start sipping on your drink.
- Keep the whisks in a safe place. They are small and can easily be lost.
- After frothing or heating rest the device for 3 minutes between each use. To shorten the rest period, you can rinse the device with cold water and wipe it dry after each use.
- The frother is designed to heat and froth milk. If you add flavorings, coffee granules or hot chocolate powder into the frother, make sure to clean the device thoroughly and immediately after use.
- Rinse the device with cold water and wipe it dry after each use.



## CLEANING AND MAINTENANCE

Remove the jug from the power base before cleaning. Separate the lid and the silicone ring from the jug. Never immerse the jug or the base into water or other liquid.

1. THE JUG: Clean immediately after each use. Rinse and clean the walls using warm soapy water and a non-abrasive cloth. Then dry it with a soft cloth.
2. THE LID: Separate the lid and the silicone ring from the jug when cleaning. Washing the lid with water directly.
3. THE BODY: Clean with a soft cloth. Never use corrosive cleaning agents, hard nylon brush or metal brush to clean the device to avoid scratches on the stainless steel surface! Never clean with metal objects or abrasive objects.
4. THE WHISKS: Remove the whisk from the jug. Wash it with warm water. Dry and store it in a safe place. Do not wash it in the dishwasher.

## ENVIRONMENT-FRIENDLY DISPOSAL



You can help protect the environment!  
Please remember to respect the local regulations:  
hand in the non-working electrical equipments to  
an appropriate waste disposal center.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## WARRANTY INFORMATION

Product Name	Milk Frother
Model Name	MMF-9202
Default Warranty Period	18 Months
For your own reference, we strongly recommend that you record your order number and date of purchase.	
Date of Purchase	
Order Number	

### TERMS & POLICY

The Elechomes products are premium in material, craftsmanship and service. They are effective from the date of purchase.

Elechomes will replace defective products based on eligibility. Refunds are available to the original purchasers of our products within the first 30 days of purchase. This warranty extends only to personal use instead of commercial, rental, or any other uses in which the product is not intended for. Each product has no other warranties other than the already provided warranties.

This warranty is non-transferable. Elechomes is not responsible for any damages, losses or inconveniences caused by equipment's failure, user's negligence, user's abuse, or improper operation that does not follow the included user manual.

#### **This warranty does not apply to the following situations:**

1. Damage due to abuse, accident, alteration or vandalism.
2. Improper or inadequate maintenance.
3. Damage in return transit.
4. Unsupervised use by children under 18 years old.

Elechomes and its subsidiaries are only responsible for damages caused by the intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the above disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

**All expressed and implied warranties, including the warranty of merchantability, are limited to the period of the limited warranty.**

### Additional 6-month Warranty:

You can enjoy additional 6-month warranty. Just log onto **[www.elechomes.com/support/warranty](http://www.elechomes.com/support/warranty)** and enter your order number (i.e. Amazon ) within the first 14 days of purchase to register your new product for the extended warranty.

If you are unable to provide the order number for your product, please type a short note in the order number field along with the date you received your product.

### Defective Products & Returns:

Should your product prove defective within the specified warranty period, please contact the Customer Support via **[support@elechomes.com](mailto:support@elechomes.com)** with your invoice and order number. Once our Customer Support team has approved your request, please return the product with a copy of your invoice and order number.

### Customer Support

Your satisfaction is our goal! Should you encounter any issues or have any questions about your new product, feel free to contact our Customer Support Team via **[support@elechomes.com](mailto:support@elechomes.com)**.

\*Please have your order invoice and order number ready before contacting Customer Support.



Connect us with @Elechomes



US Importer: Thousandshores Inc., 37707 Cherry St, Newark, CA 94560, USA

EU Importer: Thousandshores Deutschland GmbH, Bredowstraße 17, Hamburg 22113, DE

JP Address: 東京都千代田区鍛冶町1-10-6 BIZ SMART神田402

Website: <https://www.elechomes.com>

Customer Service: [support@elechomes.com](mailto:support@elechomes.com)