

# BRISTAN

## Installation Instructions & User Guide


Please leave these instructions  
with the end user

QB BF C (D1)

### Specifications


#### Dynamic Water Pressure

Min: 0.2 bar Max: 5.0 bar

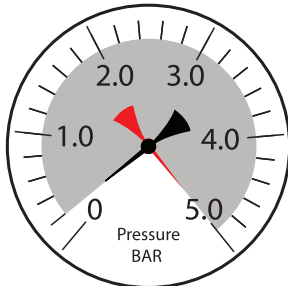


Maximum Static Pressure: 10.0 bar

#### Inlet Water Temperature

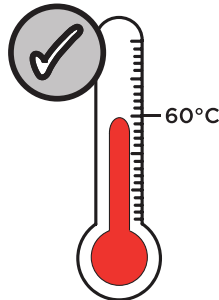


Maximum Hot 60°C

#### Inlet Connections

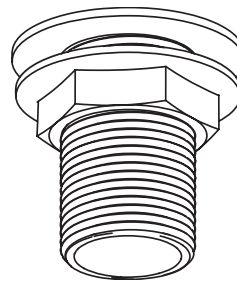



3/4" BSP

### Spare Parts

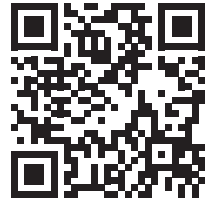


To replace any spare parts  
for your tap, why not  
scan the QR Code or  
visit [www.bristan.com](http://www.bristan.com)  
and search for your  
product.

### Pack Contents

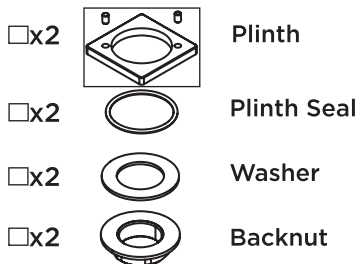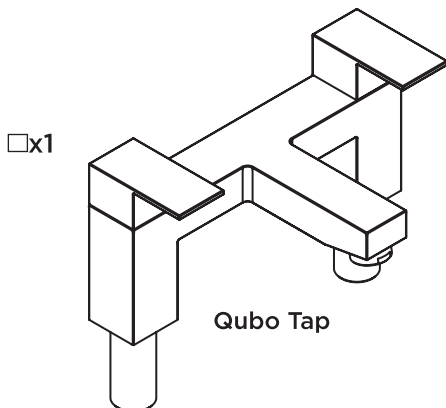

### Operation

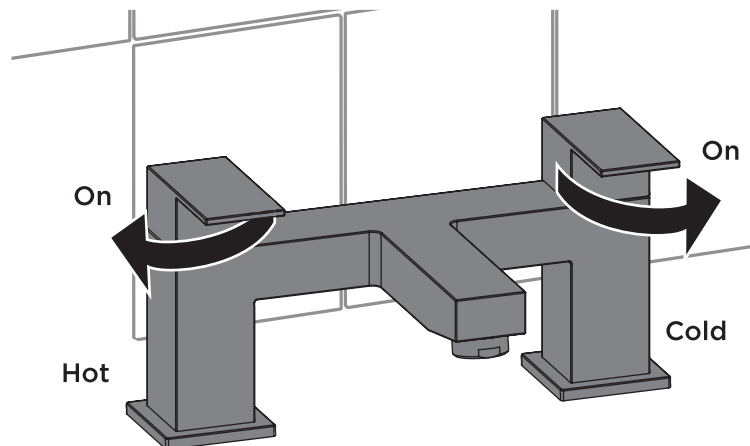

### Tools Required for Installation/ Maintenance



### Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014. For full Installation Requirements & Notes (IRN) please visit [www.wrasapprovals.co.uk/approvals-directory](http://www.wrasapprovals.co.uk/approvals-directory)

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

This product must not be modified in any way as this will invalidate the guarantee.



## Important

**The images shown are for illustrative purposes only.**


The tap you have purchased may look different to those pictured in this booklet but will follow the same installation steps.

**Your contents page will be specific to your product.**

If you find your product or any of its components differ from those shown on the contents page, please contact our customer support.

## Installation

1

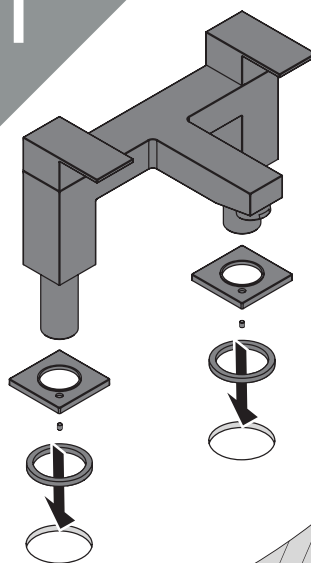


Feed the tap body through the plinths and ensure rubber plinth seals are in place

**Your model may come with a plinth and will either be included pre-attached or loose in the box\***

Once aligned, feed the threaded tails through tap holes

1\*

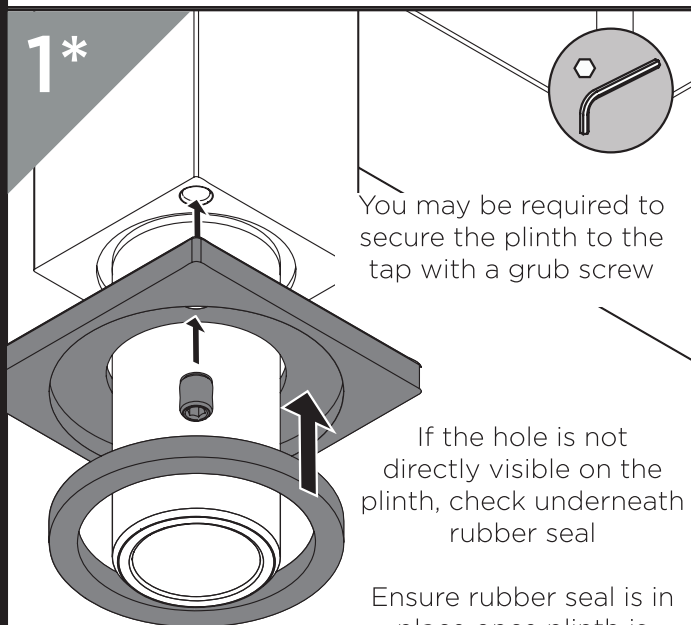


You may be required to secure the plinth to the tap with a grub screw

If the hole is not directly visible on the plinth, check underneath rubber seal

Ensure rubber seal is in place once plinth is attached

2

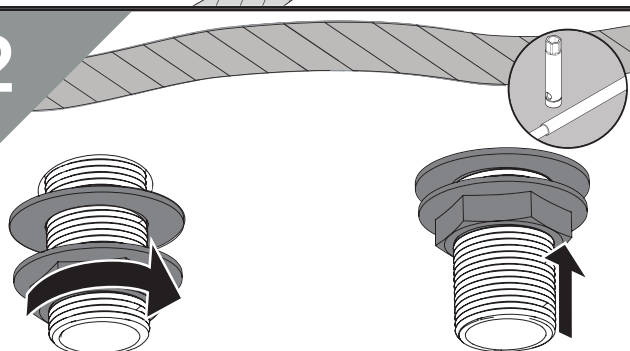

To secure the taps to the bath, use a box spanner to tighten the metal backnuts underneath ensuring the washer is correctly positioned in between the backnuts and the bath

## Love Your Chrome

Bristan offers an effective chrome-friendly cleaning kit for use with your taps and showers. Scan the QR Code or search for 'CLEAN KIT01' on [www.bristan.com](http://www.bristan.com).



## General Cleaning

Bristan products are made from premium materials, with hand polished, electroplated, PVD or EPD finishes.

Your taps or shower should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

3

Connect the hot and cold water supplies to the threaded tails

Cold

Hot

**REMEMBER**  
Hot on the left, cold on the right!

**Your tap is now ready to use**



## Maintenance - Cartridge/ Valve Replacement

**1**

Remove indice by pulling it loose, then undo hex grub screw to remove handle

Indice will be placed on either the front or back of the handle

**IMPORTANT**  
Isolate the water supply before starting!

**2**

Remove the screw and spline adapter if your model has them  
(When replacing, ensure valve is fully closed with the handle parallel to the spout)

**3**

Unscrew the cartridge/ valve using a box spanner

Check any seals and O-rings for damage. Replace cartridge/ valve if necessary

**4**

Reverse the steps to replace the cartridges/ valves and handles

## Maintenance - Clean/ Replace Outlet

**1a**

**Flow Straightener**

Using an adjustable spanner, unscrew gently to remove the outlet

Your tap may have a different outlet, use the corresponding tool and method to remove

**1b**

**Recessed Outlet**

If provided, insert the key tool into the outlet and twist to release it

**1c**

**Coin Slot Aerator**

Using a coin, insert into the slot on the outlet and twist to release it

**2**

Check all loose parts for any damage, then soak using a suitable solution to de-scale

**3**

Reverse the steps to replace the outlet

| Troubleshooting                          |                                                                                   |                                                                      |
|------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------|
| Symptom                                  | Cause                                                                             | Remedy                                                               |
| Low Flow                                 | Partially closed isolation valve.                                                 | Open isolation valve.                                                |
|                                          | Airlock or partial blockage in the supply pipework.                               | Flush through pipework to ensure removal of debris and any airlocks. |
|                                          | Partial blockage in the outlet                                                    | Remove to Clean and soak in suitable solution.                       |
| No hot water or cycling hot and cold     | Instantaneous water heater cycles on and off as flow rate or pressure is too low. | Increase water flow rate or pressure through system.                 |
| No Flow                                  | Closed isolation valve.                                                           | Open isolation valve.                                                |
|                                          | Mains water supply turned off.                                                    | Turn on mains water supply.                                          |
| Temperatures not corresponding with taps | Inlet pipes have been connected incorrectly                                       | Swap the inlet tails around.                                         |

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

Contact Us

BRISTAN

Bristan Group Ltd.

UK:

EU:

Bristan Group, B78 1SG.

Masco Europe S.à.r.l.

14 Rue Strachen

6933 Mensdorf

Luxembourg

Customer Service:

Web:

Email:

+44330 026 6273

[www.bristan.com](http://www.bristan.com)

[enquire@bristan.com](mailto:enquire@bristan.com)


A Masco Company

Servicing Your Tap

We recommend servicing your tap at least once every year to prolong its life.

To see a video showing how to remove the cartridge for servicing, scan the QR code with your smart phone or tablet.

Alternatively visit [www.youtube.com/BristanTV](http://www.youtube.com/BristanTV)

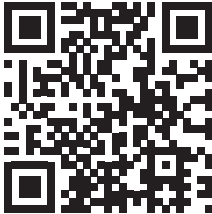

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

Your guarantee starts from the purchase of your product, but you can still benefit from registering it for easier identification in the unlikely event of a manufacturing fault, please visit [www.bristan.com/register](http://www.bristan.com/register)

For any other queries, please call Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit [www.bristan.com/service-centre/guarantees](http://www.bristan.com/service-centre/guarantees).

