正面


3 in 1 Foldable Magnetic Wireless Charger User Manual




Wireless Charging Guide

Please use the USB-A Adapter that comes with the package or the quick charger 2.0 or 3.0 chargers with USB-A ports are recommended.

Charging with Cases

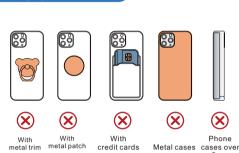

PRODUCT DESCRIPTION

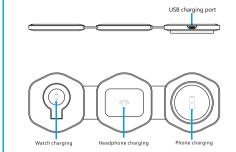

3 in 1 Foldable Magnetic Wireless Charger

SPECIFICATION YIELD

Model: WL301 Input: 5V=3A, 9V=2A Phone Output: 10W/7.5W/5W Airpods Output: 5W iWatch Output: 2.5W

Compatibility Sheet

1.Smartphone

iPhone 15,iPhone 15 Plus, iPhone 15 Pro, iPhone 15 Pro Max iPhone 14,iPhone 14 Plus, iPhone 14 Pro, iPhone 14 Pro Max iPhone 13 mini, iPhone 13,iPhone 13 Pro, iPhone 13 Pro Max iPhone 12 mini, iPhone 12, iPhone 12 Pro,iPhone 12 Pro Max

2.Smart Watch

iWatch 2/3/4/5/6/7/8/9/SE/SE 2/Ultra/Ultra 2

3.Earbuds

AirPods 2/3/Pro/Pro 2

Package Contents


1xWireless Charger 1xUser Manual

1. Fold the wireless charger into a triangular stand. 2. Or place the phone and keep it charged horizontally.


反面

OPERATION INSTRUCTIONS

1. Charge the phone: Place the phone flat on the phone charging area.

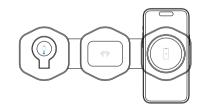

Charge the bluetooth headset, lay the bluetooth headset flat in the bluetooth headset charger area (Note: If the headset has a thick silicon cover, it may lead to poor contact and cannot be charged, please take off the silicone cover before charging).

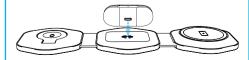

3. Charge the watch: Stand up the watch's wireless charging module and place your watch on it so that it is aligned with the magnetic line. When the watch displays the charging logo, it means the watch is charging

Precautions for Use

Please pay attention to the following issues, otherwiseit may cause abnormal charging, high charging temperature, intermittent charging, or even not charging.

- 1.Not compatible with devices other than Apple, such as Samsung.
- 2.Do not use the wireless charger after splashing with water, as it may damage or deform the product due to a short circuit.
- 3.Do not pull the silicone part, otherwise it will easily damage theprecision components under the silicone part and affect the charging.
- 4.Please put the phone/watch at the center of charge area.
 5.We recommend fast charger adapter (9V/2A), which can charge three devices at the same time while maintaining the fastest speed. The 5V/2A charger can only provide a

normal charging speed, which will be slower than that of a fast charger

- 6.The charging distance is 2-8 mm, please don't wear protective case which is over 3mm thick.
- 7. The watch has temperature control. When the temperature reaches 104 F, it will stop charging automatically. If the temperature is normal, it will continue to charge.
- 8.No metal or magnetic objects around 6cm of the back center of the phone during charging.
- 9. The lower temperature, the faster charging speed. The charging speed is faster in winter than in summer.
- 10.Please don't charge in high temperature and humid environments to avoid damage of circuit.
- 11.Put it at the place that children can't reach to avoid unnecessary accidents

Troubleshooting

- 1. Update the device to the latest system.
- $2. \\ \text{Make sure your device that supports wireless charging.}$
- 3. Make sure to use the original charging cable and adapter.
- 4. Avoid thick device covers

 $5. A void high ambient temperature optimal temperature is \\ 82-86 ^\circ F.$

6. When the phone or watch cannot be fully charged, try the following: Open[Settings]-[Battery Health]-[Turn off battery optimization].

7. When the earphones are exhausted and cannot be charged, please take out the earphones and charge the storage compartment separately.

8. When the phone, earphones, and watch do not respond when placed, please check whether there are foreign objects around or if the adapter is plugged in correctly or not.

ABOUT THE FCC

This equipment complies with FCC radiation; exposure limits set forth foran uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm betwieen the radiator & yourbody.

This device complies with part 15 of the FCC:rules operationis subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received including interference that may cause undesired operation.

FCC WARNING

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.